



IB-131

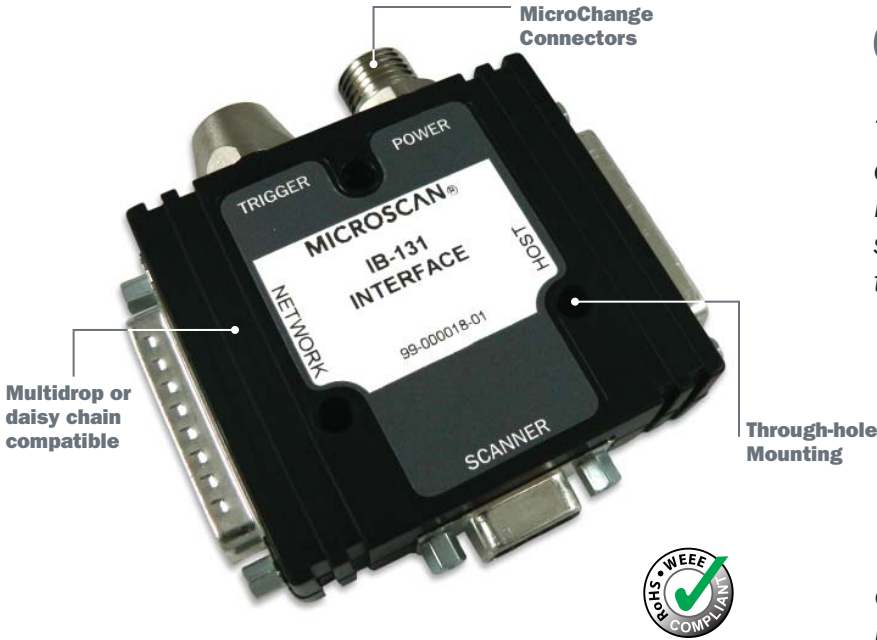

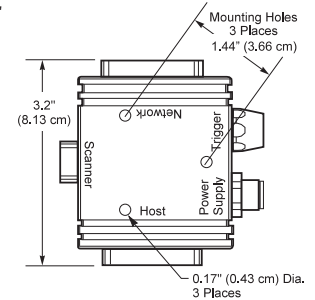



IB-131 Basic Connectivity Solution

The IB-131 interface module simplifies connecting to the Quadrus® MINI Series, MS-4, MS-3, and MS-9 bar code readers by providing separate ports for the host, power supply, trigger, and network.



IB-131: Easy Integration

The following is a list of scanners with applicable accessories compatible with the IB-131. Accessories are designed for ease of connectivity using the IB-131.

-  **Quadrus MINI Series:** IB-131: 99-000018-01
Daisy Chain Cable: 61-100029-03, IC-332: FIS-0001-0035G
-  **MS-4:** IB-131: 99-000018-01
Daisy Chain Cable: 61-100029-03, IC-332: FIS-0001-0035G
-  **MS-3:** IB-131: 99-000018-01
Daisy Chain Cable: 61-100029-03, IC332: FIS-0001-0035G
-  **MS-9:** IB-131: 99-000018-01
Comm Cable: 61-300026-03, Daisy Chain Cable: 61-100029-03

For more information on this product, visit www.microscan.com.

Microscan Systems, Inc.
Tel 425 226 5700 / 800 251 7711
Fax 425 226 8250

Microscan Europe
Tel 31 172 423360
Fax 31 172 423366

Microscan Asia Pacific
Tel 65 6846 1214
Fax 65 6846 4641

www.microscan.com

Product Information:
info@microscan.com

Auto ID Support:
helpdesk@microscan.com

Vision Support:
visionsupport@microscan.com


NERLITE Support:
nerlitesupport@microscan.com

CONNECTORS*

Host Connector:
25-pin D-subminiature Socket


Pin	Function
1	External ground
2	Transmit data (RS-232)
3	Receive data (RS-232)
4	RTS
5	CTS
6	Output 2+
7	Signal ground
8	Output 1+
9	Trigger -
10	Trigger+
11	Default configuration
13	Receive data (RS-422+)
14	Transmit data (RS-422-)
15	Output 3+
16	Receive data (RS-422-)
17	Output 1-/2-/3-
19	Transmit data (RS-422+)
25	New master/OMR

Trigger Connector:
4-pin MicroChange Socket



Pin	Function
1	+10-28 VDC
2	Trigger -
3	Ground
4	Trigger+

 Power Connector:
3-pin MicroChange Plug



Pin	Function
1	Ground
3	+10-28 VDC

*Pinout tables show active pins only

Scanner Connector:
15-pin D-subminiature Socket

Pin	Function
1	+10-28 VDC
2	Transmit RS-232/RS-422-
3	Receive RS-232/RS-422-
4	Signal Ground
5	Trigger-
6	RTS/Aux. Transmit RS-232/RS-422+
7	Output 1+
8	Default configuration
9	Trigger+
10	CTS/Aux. Receive RS-232/RS-422+
11	Output 3+
12	New master/OMR
13	External ground
14	Output 2+
15	Output 1-/2-/3-

Network Connector:
25-pin D-subminiature Plug

Pin	Function
1	Ground
2	Aux. Receive RS-232
3	Aux. Transmit RS-232
6	Out 2 +
7	Signal ground
8	Out 1 +
13	Receive data (RS-422+)
14	Transmit data (RS-422-)
15	Out 3 +
16	Receive data (RS-422-)
17	Output 1-/2-/3-
19	Transmit data (RS-422+)

ELECTRICAL

Supply Voltage Input:
Regulated +10-28 VDC

