




ESP®

Easy Setup Program

ESP offers intuitive graphical user interfaces.

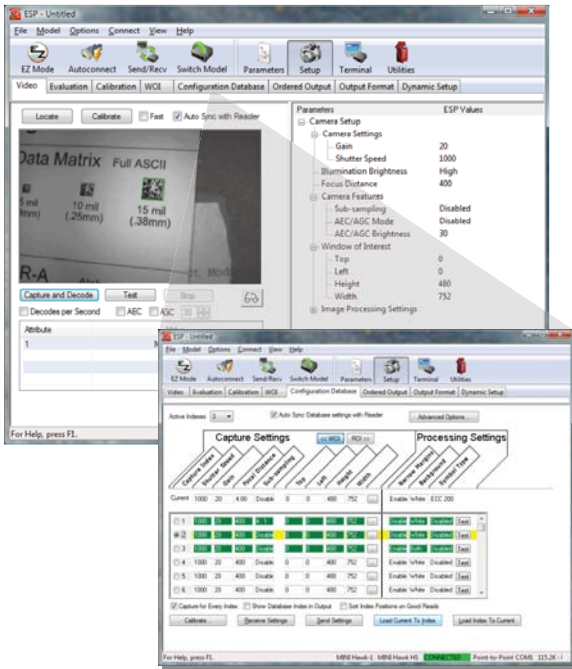

ESP is a powerful software application that provides quick and easy setup of Microscan's complete line of bar code scanners and imagers. ESP offers basic and advanced features with a variety of options for different applications.

User-Friendly Interface

ESP features an intuitive user interface designed for maximum functionality. ESP provides three different programming modes to quickly configure your reader: the terminal, tree control and interactive user interface.

Fully-Featured Terminal


The terminal offers a powerful environment for testing and troubleshooting. It displays non-printable characters; provides multiple ways of sending serial commands to the reader, including pre-set or user-defined macros; and can save decoded symbol data as a text file.

EZ Setup in Minutes

ESP's exclusive EZ Mode enables you to easily capture images or decode symbols within minutes of unpacking your reader.

Convenient Help Menu

ESP has an integrated Help option with a specific menu for each product. The F1 key offers immediate access to ESP's Help screen.

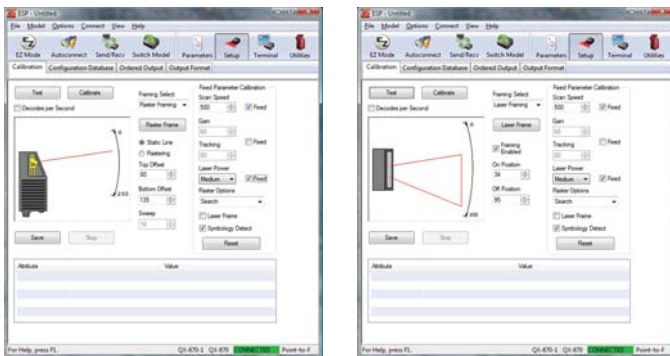

ESP: Advanced Features

Applications Mode provides access to advanced features specific to each reader.

- **Dynamic Setup (imagers):** Select specific parameters such as image capture time delay.
- **Camera View (imagers):** Real-time view allows image location, calibration and evaluation.
- **Configuration Database (imagers, QX-870):** Allows concatenation of configuration profiles and other complex operations.
- **Raster Control & Laser Framing (raster-line scanners):** Allows easy setup and configuration of rasters, and provides real-time results for storage and analysis.
- **Bar Code Dialog (most readers):** Allows encoding and printing setup symbols for fast and easy configuration of multiple scanners and imagers without having to use external hardware.

ESP: Hardware Requirements

- 166 Megahertz Pentium® computer (recommended)
- Windows® Vista, XP, or 2000 operating system
- Internet Explorer® 5.0 or higher
- 64 MB minimum RAM
- 80 MB minimum disk space

ESP is available for download at www.microscan.com. To place an order please contact your Microscan representative.

MICROSCAN®