


MS-2D

2D Imaging Engine

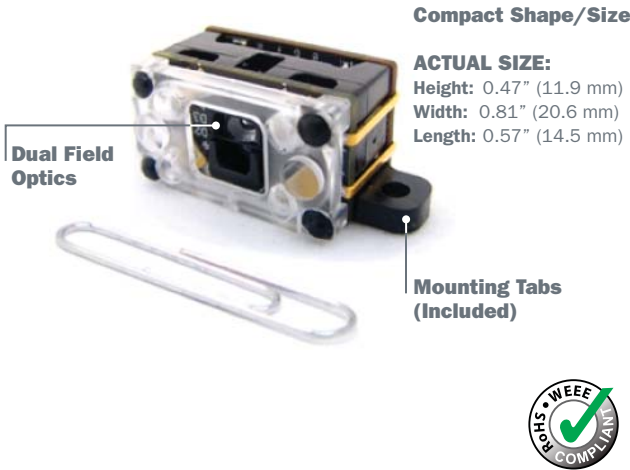

The MS-2D engine is an ultra-compact barcode imaging system that can be easily integrated into any device. Featuring advanced technologies for decoding, the MS-2D engine includes a dual optical field for reliable reading of both large 1D barcodes and high density 2D symbols.

Designed specifically for embedded applications, the MS-2D engine provides the best performance available for reading 1D/2D symbols and direct part marks at very close range.

MS-2D Engine: At a Glance

- Ultra-fast Microprocessor
- Dual Field Optics for Both Wide and High Density Fields
- X-Mode Technology for High Performance Decoding
- USB 2.0, RS-232 Interface Options
- Low 5V Power Draw



ESP® Easy Setup Program: Single-point software provides quick and easy setup and configuration of all Microscan readers.

For more information on this product, visit www.microscan.com.

Compact & Lightweight

The MS-2D decode board has a footprint of 1.54" W by 0.98" D by 0.30" H (39.1 mm W by 24.9 mm D by 7.6 mm H) and weighs only 0.10 oz. (2.8 g).

Mounting Flexibility

For integration, a variety of mounting options are available including tabs, blind through holes, and mounting brackets for both the MS-2D engine and the decode board.

Reading Capabilities

The MS-2D engine with X-Mode decoding algorithms can easily read the most damaged or difficult codes and symbols, including direct part marks.

Application Examples

- Clinical instruments
- Medical devices
- Electronics assembly
- Kiosks and bank ATMs

Easy Setup


ESP software provides easy configuration of the MS-2D engine, including selectable trigger and symbology setting.

MS-2D Engine: Available Codes


Linear	All Standard 	Postal Codes 			
Stacked	MicroPDF 	PDF417 	GS1 Databar 		
2D	Data Matrix 	QR 	Micro QR 	Aztec 	Maxicode

MS-2D ENGINE SPECIFICATIONS AND OPTIONS

FRONT VIEW

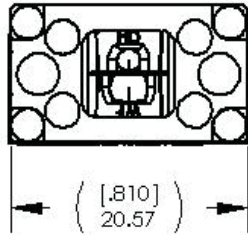


TOP VIEW

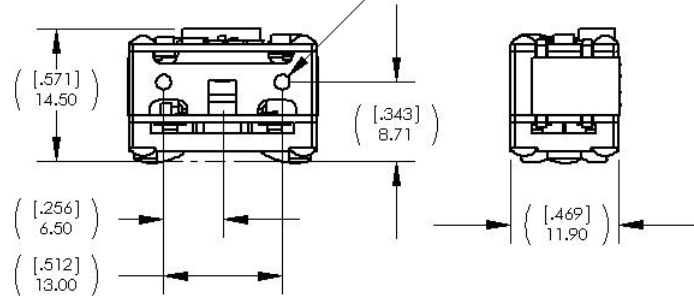

Ø 1.65 [.065] X 3.00 [.128]
2 PLACES
HOLES ARE PROVIDED FOR MOUNTING
WITH SELF-TAPPING SCREWS.

BACK VIEW

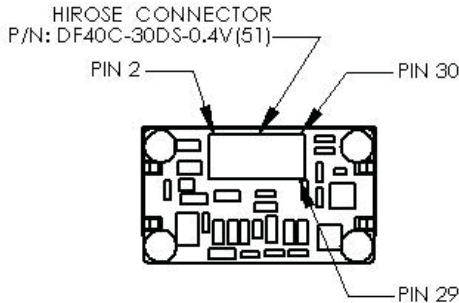

Note: Nominal dimensions shown. Typical tolerances apply.

MECHANICAL (ENGINE)

Height: 0.47" (11.9 mm)
Width: 0.81" (20.6 mm)
Length: 0.57" (14.5 mm)
Weight (Without Mounting Tabs): 0.09 oz. (2.6 g)

MECHANICAL (DECODE BOARD)

Height: 1.57" (39.1 mm)
Width: 0.98" (24.9 mm)
Length: 0.30" (7.6 mm)
Weight: 0.10 oz. (2.8 g)

LIGHT SOURCE

Type: High output red LED illumination
Target Beam: Blue LED



LIGHT COLLECTION OPTIONS

Sensor: CMOS 1.2 Megapixel
Optical Resolution: 960 x 640 pixels, both high density and wide

SCANNING PERFORMANCE

Pitch: ± 60° (from front to back)
Skew: ± 60° from plane parallel to symbol (side-to-side)
Tilt: ± 180°

Print Contrast Resolution:

25% (1D symbologies), 35% (2D symbologies) absolute dark/light reflectance differential, measured at 650 nm

COMMUNICATION

Interface: USB 2.0, RS-232 TTL
Memory: 128MB Flash ROM, 32MB RAM

SYMBOLOGIES

2D Symbologies: Data Matrix (ECC 0-200), QR Code, Micro QR Code, Aztec Code
Stacked Symbologies: PDF417, Micro PDF417, GS1 Databar (Composite & Stacked)

Linear Barcodes: Code 39, Code 128, BC 412, I2 of 5, UPC/EAN, Codabar, Code 93, Pharmacode, PLANET, PostNet, Japanese Post, Australian Post, Royal Mail, Intelligent Mail, KIX

ENVIRONMENTAL CHARACTERISTICS

Operating Temperature: -20° to 55° C (-4° to 131° F)
Storage Temperature: -30° to 65° C (-22° to 150° F)
Relative Humidity: 5% to 95% (non-condensing)

Ambient Light Immunity: Sunlight: Up to 9,000 ft-candles/96,800 lux
Shock: Withstands multiple drops of 6' (1.8 Meters) to concrete in an enclosed housing

Indicator: Blue LED targeting beam
Beeper: Good read

INDICATORS

Symbol Locator: Blue LED targeting beam
Beeper: Good read

ELECTRICAL

Power: 5 VDC
Typical: 303 mA **Idle:** 57 mA **Sleep:** 1.6 mA

READ RANGES

Narrow-Bar	Read Range
STANDARD DENSITY	
1D	
.0030" (.076 mm)	3.7 to 5.9" (94 to 150 mm)
.0075" (.191 mm)	2.2 to 8.0" (56 to 203 mm)
.013" (.330 mm)	2.0 to 10.8" (51 to 274 mm)
2D	
.0042" (.107 mm)	3.7 to 4.5" (94 to 114 mm)
.0050" (.127 mm)	3.7 to 5.1" (94 to 130 mm)
.0063" (.160 mm)	3.1 to 6.3" (79 to 160 mm)
.010" (.254 mm)	1.6 to 7.7" (41 to 196 mm)
.028" (.711mm)	1.6 to 9.4" (41 to 239 mm)

Note: working ranges are a combination of both the wide and high density fields.

SAFETY CERTIFICATIONS DESIGNED FOR FCC, CE

ROHS/WEEE COMPLIANT

ISO CERTIFICATION

Certified ISO 9001:2008 Quality Management System

©2011 Microscan Systems, Inc. SP074C 09/11
Read Range and other performance data is determined using high quality Grade A symbols per ISO/IEC 15415 and ISO/IEC 15416 in a 25° C environment. For application-specific Read Range results, testing should be performed with symbols used in the actual application. Microscan Applications Engineering is available to assist with evaluations. Results may vary depending on symbol quality.
Warranty—One year limited warranty on parts and labor. Free extended 3 year warranty upon online product registration.

MICROSCAN®

Microscan Systems Inc.
Tel 425 226 5700 / 800 251 7711
Fax 425 226 8250

Microscan Europe
Tel 31 172 423360 / Fax 31 172 423366

Microscan Asia Pacific
Tel 65 6846 1214 / Fax 65 6846 4641

www.microscan.com

Product Information: info@microscan.com
Technical Support: helpdesk@microscan.com