

**MICROSCAN®**

# ***MS-4Xi Imager User Manual***



---

## **Copyright and Disclaimer**

Copyright ©2015  
Microscan Systems, Inc.  
Tel: +1.425.226.5700 / 800.762.1149  
Fax: +1.425.226.8250

All rights reserved. The information contained herein is proprietary and is provided solely for the purpose of allowing customers to operate and/or service Microscan manufactured equipment and is not to be released, reproduced, or used for any other purpose without written permission of Microscan.

Throughout this manual, trademarked names might be used. We state herein that we are using the names to the benefit of the trademark owner, with no intention of infringement.

## ***Disclaimer***

The information and specifications described in this manual are subject to change without notice.

## ***Latest Manual Version***

For the latest version of this manual, see the Download Center on our web site at:  
[www.microscan.com](http://www.microscan.com).

## ***Technical Support***

For technical support, e-mail: [helpdesk@microscan.com](mailto:helpdesk@microscan.com).

## ***Warranty***

For current warranty information, see: [www.microscan.com/warranty](http://www.microscan.com/warranty).

## **Microscan Systems, Inc.**

**United States Corporate Headquarters**  
+1.425.226.5700 / 800.762.1149

**United States Northeast Technology Center**  
+1.603.598.8400 / 800.468.9503

**European Headquarters**  
+31.172.423360

**Asia Pacific Headquarters**  
+65.6846.1214

# Table of Contents

<b>Chapter 1      Quick Start</b>	
Step 1 Check Hardware .....	1-2
Step 2 Connect the System.....	1-3
Step 3 Position Imager and Symbol .....	1-4
Step 4 Install ESP .....	1-5
Step 5 Select Model .....	1-6
Step 6 Connect.....	1-7
Step 7 Locate the Symbol in the Field of View .....	1-8
Step 8 Calibrate .....	1-10
Step 9 Test Read Rate .....	1-11
Step 10 Configure the Imager in ESP .....	1-12
Step 11 Save Configuration in ESP .....	1-13
<b>Chapter 2      Using ESP</b>	
EZ Mode .....	2-2
Application Mode .....	2-3
Menu Toolbar .....	2-4
View .....	2-13
Navigating in ESP .....	2-14
Send/Receive Options .....	2-15
Using EZ Trax.....	2-17
<b>Chapter 3      Communications</b>	
Communications by ESP .....	3-2
Communications Serial Commands .....	3-3
Host Port Connections.....	3-4
Host Port Protocol .....	3-5
ACK/NAK Options .....	3-6
Polling Mode Options .....	3-7
Ethernet .....	3-8
Response Timeout .....	3-14
LRC Status .....	3-15
Protocol Configuration Examples .....	3-16
ASCII Character Entry Modifier .....	3-17
Preamble .....	3-18
Postamble.....	3-19
<b>Chapter 4      Calibration</b>	
Calibration Serial Commands.....	4-2
Calibration Overview .....	4-2
Calibration Options .....	4-3
Calibration by ESP .....	4-10
Initiating Calibration .....	4-12
Additional Notes about Calibration .....	4-18

---

*Table of Contents*

<b>Chapter 5      Read Cycle</b>	
Read Cycle by ESP .....	5-2
Read Cycle Serial Commands .....	5-3
Read Cycle Setup .....	5-4
Multisymbol .....	5-5
Trigger Mode and Filter Duration .....	5-6
External Trigger Polarity .....	5-11
Serial Trigger .....	5-12
Start Trigger Character (Non-Delimited).....	5-13
Stop Trigger Character (Non-Delimited).....	5-14
End of Read Cycle .....	5-15
Capture Mode .....	5-17
Capture Timing .....	5-21
Image Processing Timeout.....	5-23
Image Storage.....	5-24
Minimum Good Reads.....	5-26
Setting Up the Imager for EZ Trax .....	5-27
<b>Chapter 6      Symbologies</b>	
Symbologies by ESP .....	6-2
Symbologies Serial Commands .....	6-3
Data Matrix .....	6-4
Aztec Code .....	6-6
QR Code .....	6-7
Micro QR Code.....	6-8
Code 39.....	6-9
Code 128.....	6-12
BC412 .....	6-15
Interleaved 2 of 5.....	6-16
Code 93.....	6-19
Codabar.....	6-20
UPC/EAN .....	6-23
Pharmacode .....	6-27
Postal Symbologies .....	6-29
GS1 DataBar .....	6-34
PDF417 .....	6-36
MicroPDF417 .....	6-37
Composite .....	6-38
Narrow Margins/Symbology Identifier.....	6-39
Background Color.....	6-41
<b>Chapter 7      I/O Parameters</b>	
I/O Parameters by ESP .....	7-2
I/O Parameters Serial Commands .....	7-3
Symbol Data Output .....	7-4

No Read Message .....	7-7
Output Indicators .....	7-8
Beeper .....	7-12
LED Configuration .....	7-13
Serial Verification.....	7-14
EZ Button.....	7-16
EZ Button Modes .....	7-18
Configurable Output 1 .....	7-20
Trend Analysis Output 1 .....	7-23
ISO/IEC 16022 Symbol Quality Output 1 .....	7-26
Diagnostic Output 1 .....	7-29
Configurable Output 2 .....	7-30
Trend Analysis Output 2 .....	7-30
ISO/IEC 16022 Symbol Quality Output 2 .....	7-30
Diagnostic Output 2 .....	7-30
Configurable Output 3 .....	7-31
Trend Analysis Output 3 .....	7-31
ISO/IEC 16022 Symbol Quality Output 3 .....	7-31
Diagnostic Output 3 .....	7-31
Power-On/Reset Counts.....	7-32
Time Since Reset .....	7-33
Service Message .....	7-34
Frame Information .....	7-35
Image Output.....	7-36
Database Identifier Output.....	7-39
Quality Output.....	7-40
Configuring EZ Trax Output.....	7-41
<b>Chapter 8        Symbol Quality</b>	
Symbol Quality by ESP .....	8-2
Symbol Quality Serial Commands.....	8-3
Overview of Symbol Quality .....	8-4
Symbol Quality Separator/Data Matrix Output Mode .....	8-8
ISO/IEC 16022 Symbol Quality Output .....	8-10
ISO/IEC 16022 Symbol Quality Output by ESP .....	8-12
Microscan Symbol Quality Output .....	8-13
Microscan Symbol Quality Output by ESP .....	8-16
<b>Chapter 9        Matchcode</b>	
Matchcode by ESP .....	9-2
Matchcode Serial Commands .....	9-3
Overview of Matchcode .....	9-4
Matchcode Type .....	9-5
Match Replace .....	9-10
Mismatch Replace .....	9-11
New Master Pin .....	9-12

---

## *Table of Contents*

<b>Chapter 10      Camera and IP Setup</b>	
Camera and IP Setup by ESP .....	10-2
Camera and IP Setup Serial Commands .....	10-3
Video .....	10-4
Evaluation.....	10-5
Calibration .....	10-8
Window of Interest.....	10-9
Configuration Database.....	10-12
Dynamic Setup .....	10-13
X-Mode™ .....	10-14
Pixel Sub-Sampling .....	10-15
Camera Settings.....	10-17
Focal Distance.....	10-19
Focal Distance Table (Read-Only) .....	10-20
Mirrored Image .....	10-21
Illumination Brightness .....	10-22
Skew Correction .....	10-23
Morphological Pre-Processing .....	10-26
Morphological Operation and Operator Size .....	10-27
<b>Chapter 11      Configuration Database</b>	
Configuration Database Serial Commands .....	11-2
Number of Active Indexes .....	11-3
Configuration Database Status .....	11-4
Database Mode .....	11-10
Save Current Settings to Configuration Database .....	11-15
Load Current Settings from Configuration Database .....	11-16
Request Selected Index Settings .....	11-17
Request All Configuration Database Settings .....	11-18
<b>Chapter 12      Terminal</b>	
Terminal Window.....	12-2
Find .....	12-3
Send .....	12-4
Macros.....	12-5
Terminal Window Menus.....	12-6
<b>Chapter 13      Utilities</b>	
Serial Utility Commands .....	13-2
Read Rate .....	13-4
Counters .....	13-6
Device Control.....	13-8
Differences from Default.....	13-9
Master Database .....	13-10
Firmware .....	13-16
Default/Reset/Save .....	13-19
Imager Status Requests .....	13-21

Learn Operations .....	13-23
Other Operational Serial Commands .....	13-24
<b>Chapter 14      Output Format</b>	
Output Format Serial Commands .....	14-2
Output Format Status .....	14-3
Format Assign .....	14-4
Format Extract .....	14-5
Format Insert .....	14-7
Output Filter Configuration .....	14-9
Number of Filters .....	14-14
<b>Appendices</b>	
Appendix A General Specifications .....	A-2
Appendix B Electrical Specifications .....	A-6
Appendix C Serial Configuration Commands .....	A-15
Appendix D Communications Protocol .....	A-20
Appendix E ASCII Table .....	A-29
Appendix F Operational Tips .....	A-30
Appendix G Using an External Trigger .....	A-31
Appendix H MS-4Xi Image Output .....	A-32
Appendix I Glossary of Terms .....	A-35

## About the MS-4Xi Imager

The key features of the MS-4Xi Imager are:


- Powerful X-Mode™ decoding technology
- Ethernet TCP/IP connectivity
- Compatible with industrial M12 cabling
- Software-adjustable focus
- Support for both linear and 2D symbologies
- High-output LED illumination
- 10-30 VDC
- Optoisolated I/O
- EZ Button for setup and testing
- A blue target pattern that identifies the center point of the field of view
- A green flash (visible from all angles) to signal a successful read
- Compact size for easy integration into a wide variety of applications

## MS-4Xi Communications

There are three ways to configure and test the MS-4Xi:

- Microscan's Windows-based **ESP** (Easy Setup Program), which offers point-and-click ease of use and visual responses to user adjustments.
- Serial commands, such as **<K100,1>**, that can be sent from **ESP's Terminal** or another terminal program.
- The **EZ Button** at the back of the imager.

# Warning and Caution Summary

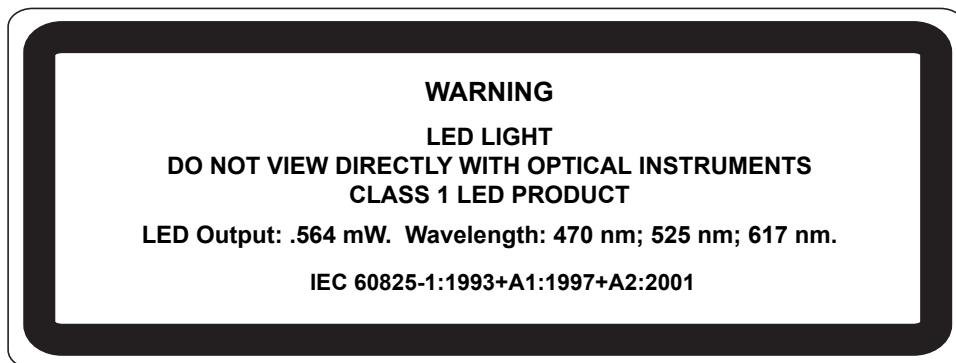

- Viewing the MS-4Xi's LED output with optical instruments such as magnifiers, eye loupes, or microscopes within a distance of 100 mm could cause serious eye injury.
- Maximum LED output: .564 mW.
- Wavelength: 470 nm; 525 nm; 617 nm.
- Location of the MS-4Xi's LED aperture window:



**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**IMPORTANT:** The MS-4Xi is intended for connection to a UL-listed direct plug-in power unit marked Class II and rated 24 VDC at 5 Watts, or greater if using electrical accessories.

European models must use a similarly rated Class I or Class II power supply that is certified to comply with standard for safety EN 60950.



**WARNING:** Baseplate temperature may exceed 70° C at maximum operating temperature and may cause burns. Use caution when handling.

---

*Statement of Agency Compliance*

## Statement of Agency Compliance



The MS-4Xi has been tested for compliance with FCC (Federal Communications Commission) regulations and has been found to conform to all applicable FCC Rules and Regulations.

To comply with FCC RF exposure compliance requirements, this device must not be co-located or operate in conjunction with any other antenna or transmitter.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



The MS-4Xi has been tested for compliance with CE (Conformité Européenne) standards and guidelines, and has been found to conform to applicable CE standards, specifically the EMC requirements EN 55024:1998+A1:2001+A2:2003, ESD EN 61000-4-2, Radiated RF Immunity EN 61000-4-3, ENV 50204, EFT EN 61000-4-4, Conducted RF Immunity EN 61000-4-6, EN 55022:1998+A1:2000+A2:2003 for Class A products, Class A Radiated Emissions, and Class A Conducted Emissions.

The MS-4Xi has been tested by an independent electromagnetic compatibility laboratory in accordance with the applicable specifications and instructions.

# Statement of RoHS Compliance

All Microscan readers with a 'G' suffix in the FIS number are RoHS-Compliant. All compliant readers were converted prior to March 1, 2007. All standard accessories in the Microscan Product Pricing Catalog are RoHS-Compliant except 20-500013-01 and 98-000039-02. These products meet all the requirements of "Directive 2002/95/EC" European Parliament and the Council of the European Union for RoHS compliance. In accordance with the latest requirements, our RoHS-Compliant products and packaging do not contain intentionally added Deca-BDE, Perfluoroctanes (PFOS) or Perfluorooctanic Acid (PFOA) compounds above the maximum trace levels. To view the document stating these requirements, please visit:

<http://eur-lex.europa.eu/LexUriServ/LexUriServ.do?uri=CELEX:32002L0095:EN:HTML>

and

<http://eur-lex.europa.eu/LexUriServ/LexUriServ.do?uri=OJ:L:2006:372:0032:0034:EN:PDF>

Please contact your sales manager for a complete list of Microscan's RoHS-Compliant products.

This declaration is based upon information obtained from sources which Microscan believes to be reliable, and from random sample testing; however, the information is provided without any representation of warranty, expressed or implied, regarding accuracy or correctness. Microscan does not specifically run any analysis on our raw materials or end product to measure for these substances.

The information provided in this certification notice is correct to the best of Microscan's knowledge at the date of publication. This notice is not to be considered a warranty or quality specification. Users are responsible for determining the applicability of any RoHS legislation or regulations based on their individual use of the product.

In regards to "RoHS Directive 2011\_65\_EU" Microscan produces Monitoring and Control Instruments as well as Industrial Monitoring & Control Instruments as defined within the directive. Microscan has developed and is implementing a RoHS2 compliance plan with the intention of bringing all active products listed in our current marketing literature within full compliance as per the directive deadlines.

Key milestones for the transition plan are as follows:

- Complete internal product audit by July 2014.
- Initial "Monitoring and Control Instruments" RoHS2 compliant products available by December 2014
- Initial "Industrial Monitoring & Control Instruments" RoHS2 compliant products available by July 2015
- All new products introduced in 2015 are expected to be WEEE & RoHS2 compliant.

Microscan will mark the products with the 'CE' marking that complies with the RoHS2 process to acquire 'CE' certification per the example given: Example >> Machinery directive + EMC directive + RoHS2 = Declaration of Conformity.

---

*Statement of RoHS Compliance*

# 1 Quick Start

## Contents

Step 1 Check Hardware.....	1-2
Step 2 Connect the System .....	1-3
Step 3 Position Imager and Symbol.....	1-4
Step 4 Install ESP .....	1-5
Step 5 Select Model.....	1-6
Step 6 Connect .....	1-7
Step 7 Locate the Symbol in the Field of View .....	1-8
Step 8 Calibrate .....	1-10
Step 9 Test Read Rate .....	1-11
Step 10 Configure the Imager in ESP.....	1-12
Step 11 Save Configuration in ESP .....	1-13


This section is designed to get your MS-4Xi up and running quickly, using the **EZ** button or **ESP** (Easy Setup Program). Following these steps will allow you to get a sense of the imager's capabilities and to test sample symbols.

Detailed setup information for installing the imager into your actual application can be found in the subsequent sections.

## Check Hardware

### Step 1 — Check Hardware

Item	Description	Part Number
1	MS-4Xi	FIS-1004-1X10G (X = 1 for Low Density, 2 for Standard Density)
2	QX-1 Interface Device	98-000103-02
3	Power Supply, M12 12-pin Socket, 1.3 m (Screw-On)	97-000003-03
4	Photo Sensor, M12 4-pin Plug, NPN, Dark On, 2 m	99-000020-02

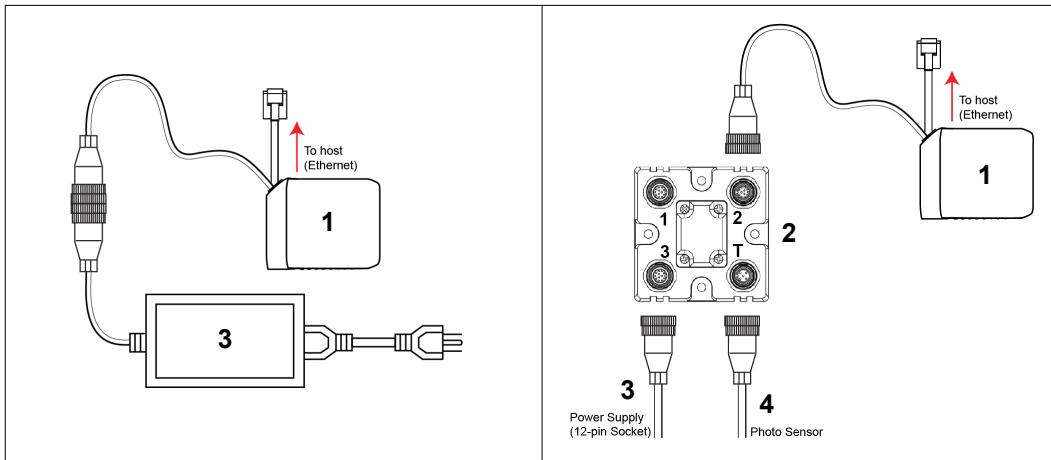

Ethernet Standalone without QX-1

Ethernet Standalone with QX-1

**Caution:** Be sure that all cables are connected **BEFORE** applying power to the system. Always power down **BEFORE** disconnecting any cables.


## Step 2 — Connect the System

### Ethernet Standalone without QX-1

- Connect the M12 (power and I/O) end of the imager's cable to the power supply (3).
- Connect the RJ45 (Ethernet) end of the imager's cable to the host.
- Plug in the power supply to apply power to the imager.

### Ethernet Standalone with QX-1

- Connect the M12 (power and I/O) end of the imager's cable to "2" on the QX-1 (2).
- Connect the RJ45 (Ethernet) end of the imager's cable to the host.
- Connect the power supply (3) to "3" on the QX-1.
- Connect the photo sensor (4) to "T" on the QX-1.
- Plug in the power supply to apply power to the imager.

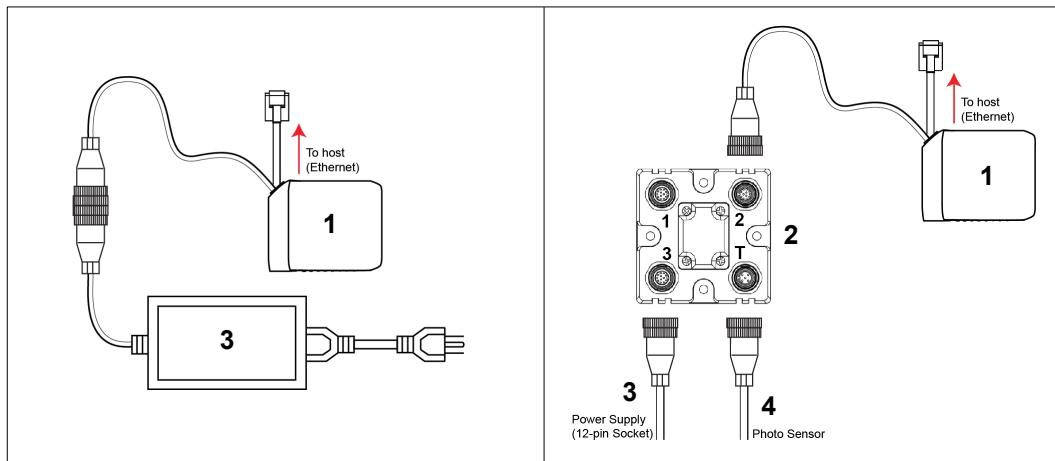


*Ethernet Standalone without QX-1*

*Ethernet Standalone with QX-1*

**Caution:** Be sure that all cables are connected **BEFORE** applying power to the system. Always power down **BEFORE** disconnecting any cables.

## Step 3 — Position Imager and Symbol


- Position the imager at a distance from the symbol that matches the factory pre-set focal distance. If your imager is pre-set at 4" (Standard Density), position the parting line 4" from the symbol. If your imager is pre-set at 3" (Low Density), position the parting line 3" from the symbol.
- Tip the imager relative to the symbol to avoid the glare of direct (specular) reflection. The case parting line should be perpendicular to the plane of the symbol by either pitching the symbol or the imager as shown.
- Position the imager in a place with as little ambient light as possible.
- Symbols can be rotated (tilted) at any angle; however, for best results symbols should be aligned with the FOV (field of view).

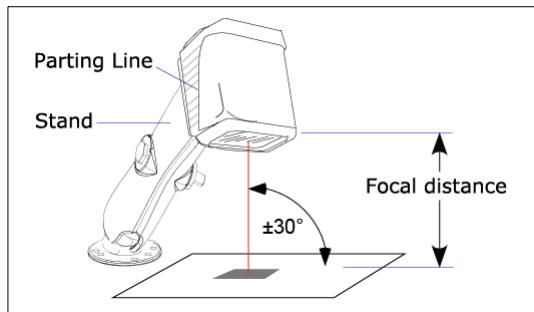

Imager and Symbol Orientation

- In the case of linear symbols, aligning the bars in the direction of their movement ("ladder" orientation) will minimize the chances of blurring, and will produce better reads.

**Important:** Avoid excessive skew or pitch. Maximum skew is  $\pm 30^\circ$ ; maximum pitch is  $\pm 30^\circ$ . The illustration below shows skew axis, pitch axis, and tilt axis.

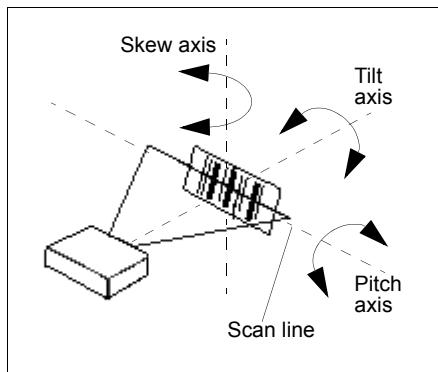

Imager and Symbol Orientation

**Note:** For accuracy of testing and performance, Microscan recommends using a mounting arm adapter kit. Contact your Microscan sales manager for details about mounting arm adapter kits and other accessories.

## **Step 4 — Install ESP**

**ESP Software** can be found on the Microscan Tools Drive that is packaged with the MS-4Xi.

1. Follow the prompts to install ESP from the Tools Drive.
2. Click on the ESP icon to run the program.



**Note:** ESP can also be installed from the **Download Center** at  
[www.microscan.com](http://www.microscan.com).


### **Minimum System Requirements**

- 233 MHz Pentium PC
- Windows 8, 7, Vista, or XP operating system (32-bit or 64-bit)
- Internet Explorer 6.0 or higher
- 128 MB RAM or greater
- 160 MB free disk space
- 800 x 600 256 color display (1024 x 768 32-bit color recommended)

## Select Model

### Step 5 — Select Model

When you start **ESP**, the following menu will appear:

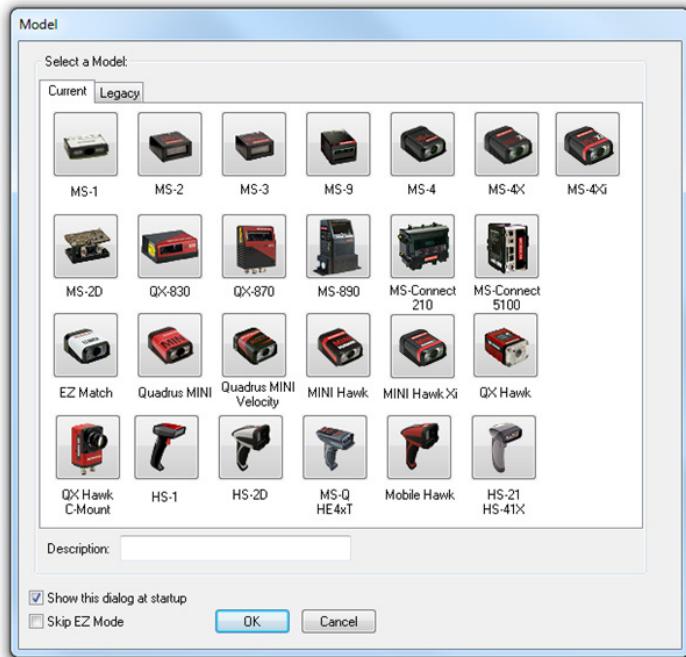


1. Click the button showing the MS-4Xi.

2. Click **OK**.

**Note:** You can also double-click the MS-4Xi button to make your selection.


3. Click **Yes** when this dialog appears:

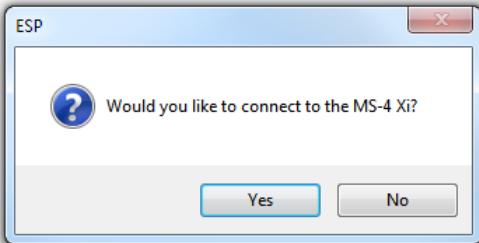


**Note:** If you need to select another model later, click the **Switch Model** button near the top of the screen or use **Model > New Model** in the menu toolbar.

## Step 6 — Connect

- Click **Connect** on the menu toolbar, and then select **Connection Wizard**.
- Select the communication interface required by your application.
- Configure settings as required by the application, and click **Connect**.

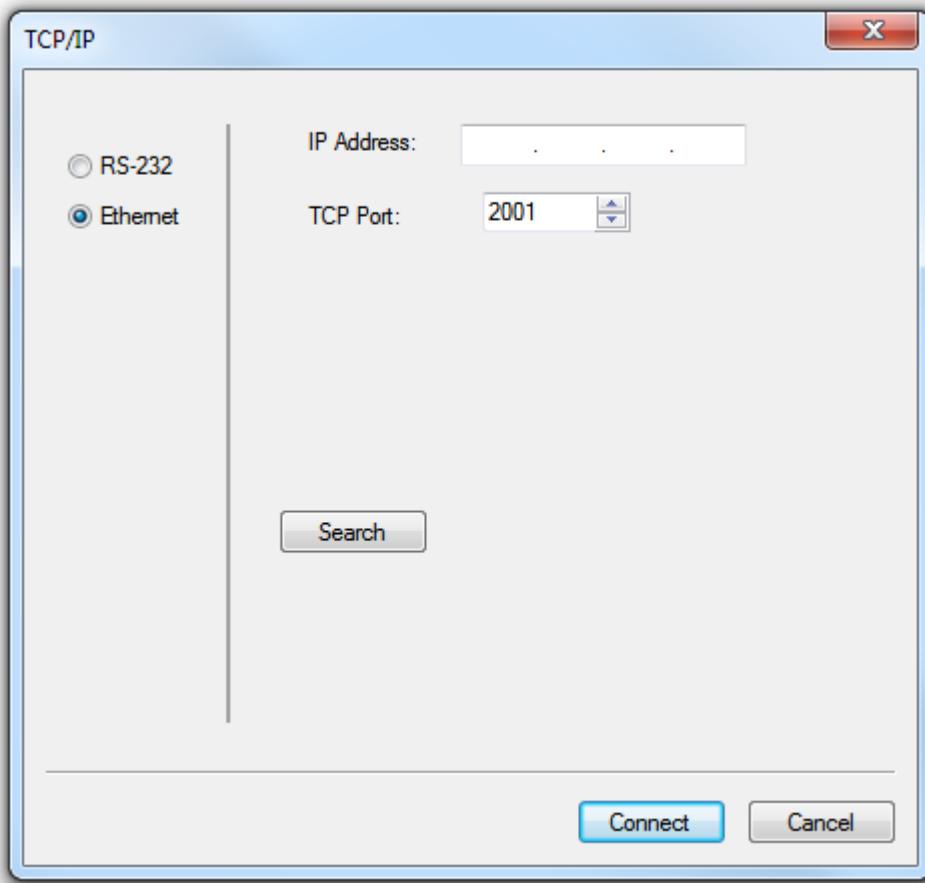

- When a connection is established, the green indicator in the status bar at the bottom right of the screen will be visible:

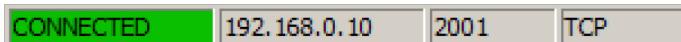

**Important:** The imager is in **Continuous Read Mode** by default. For best connection results, be sure that no decodable symbols are within the imager's field of view while attempting to connect.


---

*Locate the Symbol in the Field of View*

## **Step 7 — Locate the Symbol in the Field of View**

### **Locate by ESP**


- In **ESP's EZ Mode**, click the **Locate** button to enable the blue target pattern.

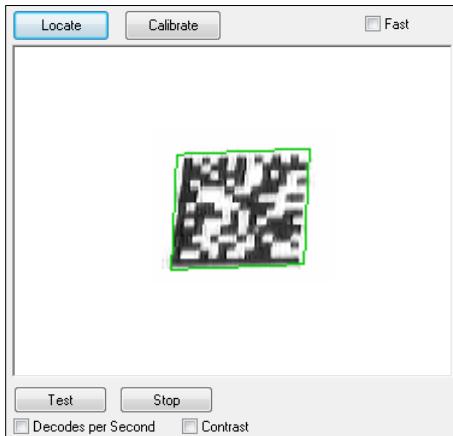

The symbol in the field of view will appear in the video view beneath the **Locate** and **Calibrate** buttons, and you will see the blue target pattern projected from the front of the imager.

- Center the target pattern on the symbol.

At 2 to 3 inches, the pattern resembles an **X**. At 3 to 6 inches, the pattern resembles a **V**.

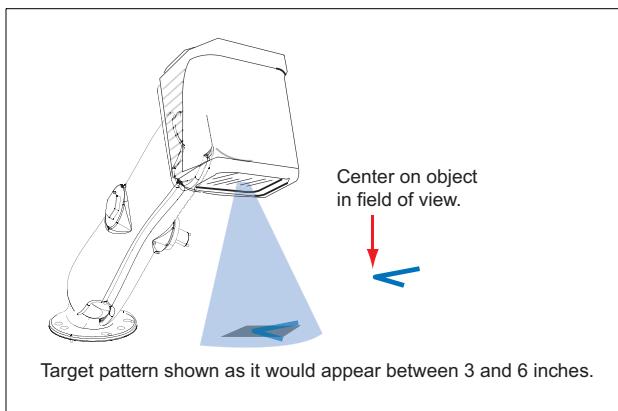


**Important:** The entire symbol should fall within the field of view (FOV) of the imager. The field of view is what appears in **ESP's Locate/Calibrate window in EZ Mode**.

- Click the **Stop** button to end the **Locate** function.

## Locate by EZ Button

If you are not connected to a host computer, the EZ Button allows you to locate a symbol in the imager's field of view.

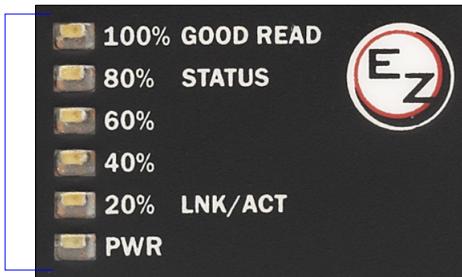

*MS-4Xi Read Rate LEDs and  
EZ Button*


- Hold down the EZ Button for about one second and release when you hear one short beep. The amber **20%** LED will illuminate, and you will see the blue target pattern projected from the front of the imager.
- Center the target pattern on the symbol.

**Note:** To end all EZ Button functions, press the EZ Button once and quickly release.

## Step 8 — Calibrate

MS-4Xi settings can be adjusted automatically for optimum symbol decoding performance by either the EZ Button or by **ESP**.

During the calibration routine, the reader will flash its amber Read Rate percent LEDs and red illumination LEDs while searching camera settings and determining the best configuration for decoding symbol data. Upon successful completion of this routine, a green LED pattern will flash brightly and illuminate the symbol. If unsuccessful, the imager will emit 5 short beeps and stop searching.

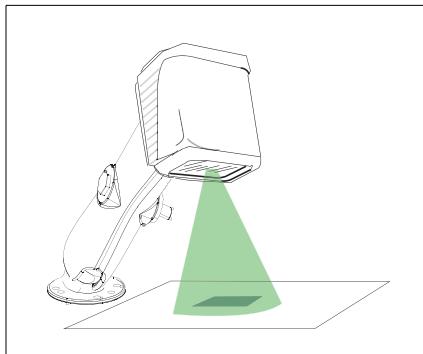

### Calibrate by EZ Button

1. Hold down the EZ Button for about two seconds and release when you hear **two short beeps**. The **20%** and **40%** LEDs will illuminate.
2. The imager will search camera settings to determine the best configuration for decoding symbol data.

**Note:** To end all EZ Button functions, press the EZ Button once and quickly release.

### Calibrate by ESP

1. Click the **Calibrate** button.



2. The imager will search camera settings to determine the best configuration for decoding symbol data.

A successful calibration will display a green frame around the symbol, and the following message will appear: “Uploading all reader parameters.” After a moment the symbol data will be presented in the field below the image display window.

### Calibrate by Serial Command

Send **<@CAL>** from a terminal program to begin calibration.


## Step 9 — Test Read Rate

**Read Rate** indicates the number of successful decodes per second achieved by the imager.

### Test Read Rate by EZ Button

1. To start the Read Rate test, hold down the EZ Button about three seconds until you hear **three short beeps**. The **20%, 40%, and 60%** LEDs will illuminate.

While the symbol is being inspected, the Read Rate LEDs will indicate the corresponding read rate percentage on the back of the unit.

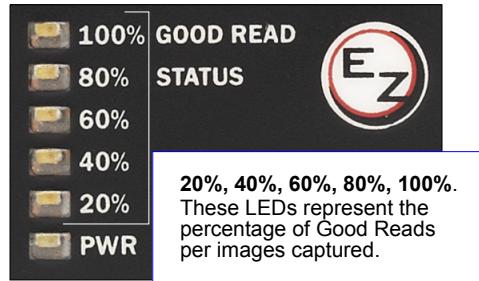

2. To end the Read Rate test, press the EZ Button and quickly release.

### Test Read Rate by ESP

1. Click the **Test** button to start the Read Rate test and **Stop** to end it.



If a symbol has been successfully decoded, the symbol's data and related features will be presented in the field below the image display window. Also, while the symbol is being inspected, the Read Rate LEDs will indicate the corresponding Read Rate percentage on the back of the unit.

2. To end the test, click the **Stop** button.


**Note:** Read Rate can also be tested using the **Read Rate** interface in **Utilities**.

### Test Read Rate by Serial Command

You can also start a test with the **<C>** or **<Cp>** command and end it with the **<J>** command.

## Step 10 — Configure the Imager in ESP

To make setup changes to the MS-4Xi, click the **App Mode** button.

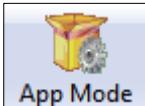


The following modes are accessible by clicking the buttons in the first row of **App Mode** icons:



- Click the **EZ Mode** button to return to EZ Mode.
- Click the **Autoconnect** button to establish communication.
- Click the **Send/Recv** button to send or receive commands.
- Click the **Switch Model** button to open the model menu, or to return to a previous model.
- Click the **Parameters** button to show the tabbed tree controls for Communication, Read Cycle, Symbologies, I/O Parameters, Symbol Quality, Matchcode, and Diagnostics.
- Click the **Setup** button to access a Camera Setup tree control and Video view, and to Evaluate image captures, Calibrate the imager, set the Window of Interest, fine-tune capture settings and processing settings in the Configuration Database, set up output filters and parse symbol data in Ordered Output and Output Format, and control multiple read cycle functions in Dynamic Setup.
- Click the **Terminal** button to display tube or cap detection data or decoded symbol data, and to send serial commands to the imager using text or macros.
- Click the **Utilities** button to test Read Rate, request or clear Counters, enable or disable the imager or send output pulses in Device Control, determine the Differences from Default in the current settings, add or remove master symbol data in Master Database, and verify or update the imager's Firmware.


For further details, see **ESP Help** in the dropdown Help menu.

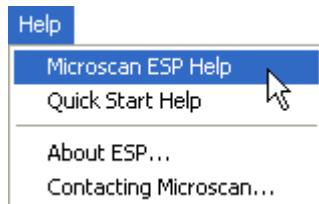

## Step 11 — Save Configuration in ESP

*To make changes to a configuration setting:*

1. Left-click on the + to expand the desired tree.
2. Double-click on the desired parameter and click once in the selection box to view options.

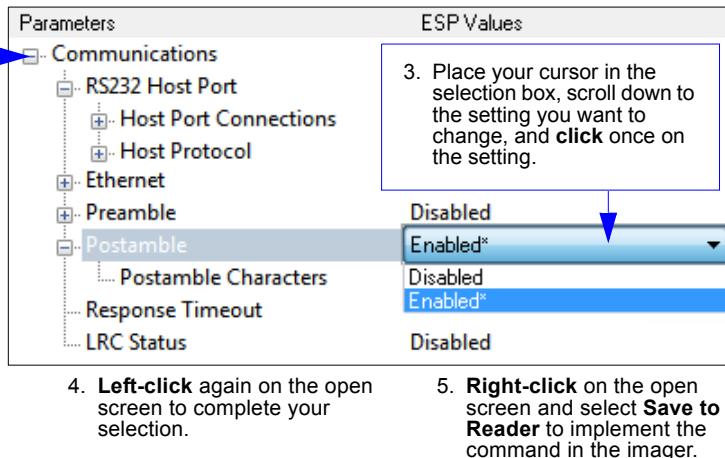

3. Place your cursor in the selection box, scroll down to the setting you want to change, and click once on the setting.
4. Left-click again on the open screen to complete your selection.
5. Right-click on the open screen and select **Save to Reader** to implement the command in the imager.

### Saving Options

- **Send, No Save.** Changes will be lost when power is re-applied to the imager.
- **Send and Save.** This activates all changes in current memory *and* saves to the imager for power-on.

---

*Save Configuration in ESP*

# 2 Using *ESP*

## Contents

EZ Mode.....	2-2
Application Mode.....	2-3
Menu Toolbar.....	2-4
View .....	2-13
Navigating in ESP .....	2-14
Send/Receive Options .....	2-15
Using EZ Trax .....	2-17

This section is designed to help you understand the basic structure and elements of **ESP** (Easy Setup Program).

When you open **ESP**, unless otherwise specified in the **ESP Preferences** dialog accessible from the **Options** heading on the menu toolbar, you will enter **EZ Mode** for initial setup. From there, you can enter **Application Mode (App Mode)** and access several configuration menus (**Communications**, **Read Cycle**, **Symbologies**, **I/O Parameters**, **Symbol Quality**, **Matchcode**, and **Diagnostics**), a **Camera** setup interface, a **Terminal** interface, a **Utilities** interface, and an **Output Format** interface.

**ESP** can be used to configure the MS-4Xi in three different ways:

- **Tree Controls:** Each configuration menu contains a list of all option settings that pertain to that specific element of imager operation. For example, the **Communications** menu shows a **Host Port Connections** option, and then a list of the sub-options **Baud Rate**, **Parity**, **Stop Bits**, and **Data Bits**. Each of these sub-options is configurable by using dropdown menus.
- **Graphic User Interfaces:** Imager settings can be configured using such point-and-click tools as radio buttons, zoom in/zoom out sliders, spin boxes, check boxes, and drag-and-drop functions.
- **Terminal:** **ESP's Terminal** allows you to send serial configuration and utility commands directly to the imager by typing them in the provided text field.

Information about using **ESP** in specific applications is provided in subsequent sections.

For **ESP** system requirements, see [Minimum System Requirements](#) in [Quick Start](#).

## EZ Mode


In **EZ Mode** you are presented with the **Locate**, **Calibrate**, and **Test** options. After connecting to your imager, **EZ Mode** is the screen you will see. You will be provided with on-screen instructions that will help you with positioning, testing, and calibration.

### Test

Click the **Test** button to start the Read Rate test for a quick indication of the imager's read capabilities and the limits of your application. When **Decodes per Second** is unchecked, the test will count the percentage of decodes relative to the number of actual scans. Click **Stop** to end the test.


### Calibrate

The calibration routine that will optimize the imager by comparing Read Rates at various camera and image processing settings.

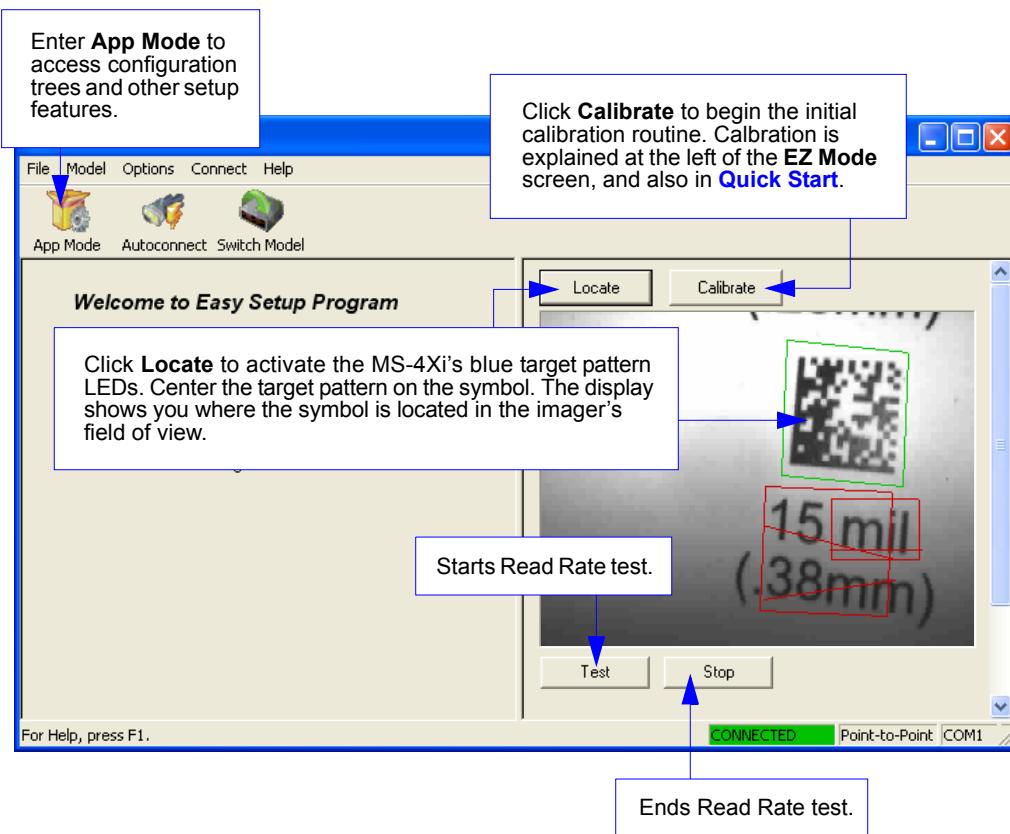

# Application Mode

From **EZ Mode**, you can click on the **App Mode** button to access specific configuration menus, **Utilities** tools, **Camera** setup, **Output Format** options, and a **Terminal** window where serial commands can be entered.

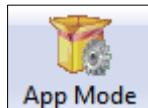

**Note:** The **App Mode** and **EZ Mode** buttons appear in the same position to allow easy switching between these primary modes.

Communication, Read Cycle, Symbologies, I/O Parameters, Symbol Quality, Matchcode, Diagnostics

Video, Evaluation, Calibration, Window of Interest, Configuration Database, Ordered Output, Output Format, Dynamic Setup

Return to EZ Mode.

Open the Terminal view.

Read Rate, Counters, Device Control, Differences, Master Database, Firmware

Click on tabs in this row to access configuration trees like the one shown here.

Click Capture and Decode to read the symbol in the field of view, and to see a high resolution image capture of the symbol.

Decoded symbol data is shown in this table.

**Note:** For specific information on any of the icons shown above in the operations bar or configuration bar, see the corresponding sections of this manual.

## Menu Toolbar


### File > New

Whenever **New** is selected, the default configuration of **ESP** is loaded.

### Open/Save

When **Save** or **Save As** is selected, the **ESP** configuration is saved to the host computer's hard drive and available whenever the same file is selected under **Open**.

**Important:** When you save menu changes to your hard drive, these changes are not saved to your imager. The illustration below shows how settings can be saved and received between **ESP** and the imager, and **ESP** and the host hard drive.

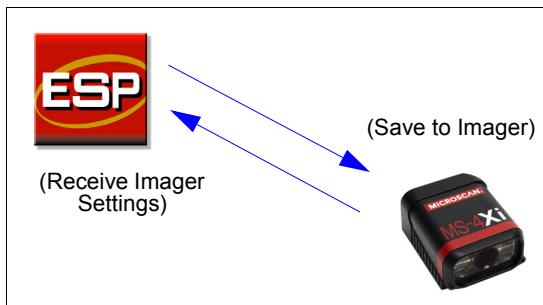

File	
New	Ctrl+N
Open...	Ctrl+O
Save	Ctrl+S
Save As...	
Print...	Ctrl+P
Import...	
Export...	
Recent File	
Exit	


### Import/Export

**Import** converts the ASCII settings from a text file to **ESP** configuration settings.

**Export** converts the active **ESP** configuration settings to an ASCII text file.

## Model

In the **Model** menu you can select any of the models supported by **ESP**. When you choose a different model, the connection to your present model will be terminated.

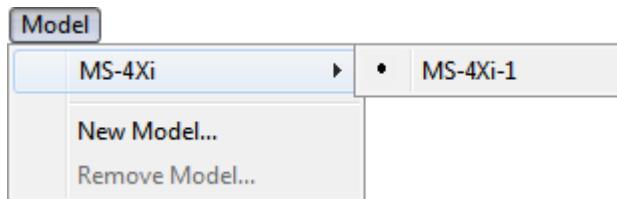


To connect to another model, select **New Model**, choose a new model from the menu that appears, and click **OK**.

**Note:** When you save an **ESP** file, you are saving the settings of all the models defined in that file.


## Options

The **Options** menu allows you to save memos and set up **ESP Preferences**.

**Note:** Preferences will be saved and loaded into **ESP** whenever **ESP** is opened next, whether or not you save the **ESP** file.

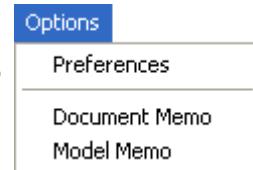

## Preferences > General Tab

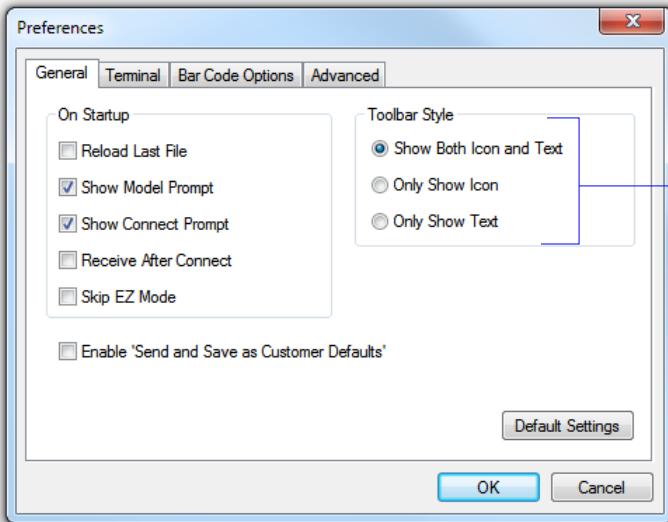

The **Toolbar Style** options allow you to determine how **ESP** will display the mode options in the two rows at the top of the screen.

### **Reload Last File**

At startup, reloads the last file saved to the host computer's hard drive.

### **Show Model Prompt**

At startup, shows the model menu displaying all supported readers.

### **Show Connect Prompt**

At startup, displays the **Would you like to connect to the MS-4Xi?** prompt.

### **Receive After Connect**

At startup, loads the imager's settings into **ESP**. (This is not recommended if you want to preserve your **ESP** settings for future use.)


### **Skip EZ Mode**

At startup, skips **EZ Mode** and opens directly in **App Mode**.

### **Enable 'Send and Save as Customer Defaults'**

At startup, enables the **Send and Save as Customer Defaults** option in the **Send/Recv** command.

## Preferences > Terminal Tab

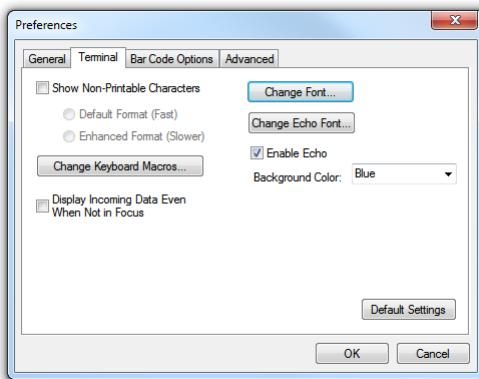

### Show Non-Printable Characters

When **Show Non-Printable Characters** is enabled, characters such as “CRLF” will be displayed in the **Terminal** window. When **Enhanced Format** is checked, the characters are displayed with more detailed formatting.

### Change Keyboard Macros

Clicking the **Change Keyboard Macros** button brings up the **Function Keys** dialog. In this dialog you can select the desired function key and then enter your macro keystrokes in the associated key map. For example, to make **Ctrl-F2** the keystroke to send a trigger character, select **F2**, then in the **Ctrl** row, enter **<trigger character>** and click **OK**. Then whenever the **Ctrl-F2** keystroke is pressed, the trigger character will start the read cycle.



**Note:** The **F1** key is reserved for opening **ESP** Help and the **F3** key is reserved for the **Find Next** function.

### Change Font

Allows you to modify the font used for decode data received from the imager on the **Terminal** screen.

### Change Echo Font

Allows you to modify the font used for command characters typed into the **Terminal** view.


### Enable Echo

Allows you to enter command characters in **Terminal**.

### Display Incoming Data Even When Not in Focus

When **Display Incoming Data Even When Not in Focus** is enabled, data from the imager will continue to appear in the terminal even when **ESP** is not the top window.

## Preferences > Bar Code Options Tab

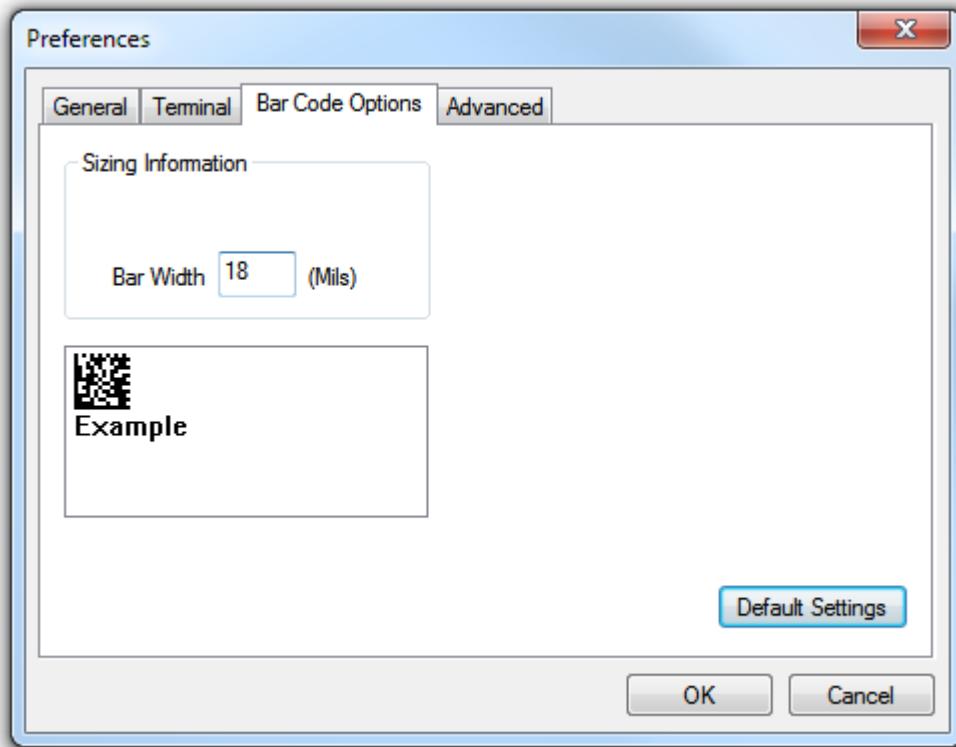


The **Bar Code Options** dialog allows you to set the size of user-created symbols.

### **Sizing Information**

Sets the bar width or module width (in **mils**, or thousandths of an inch) of user-created symbols.

*Example:* A bar width of 18 is 0.018 inches.

## Preferences > Advanced Tab

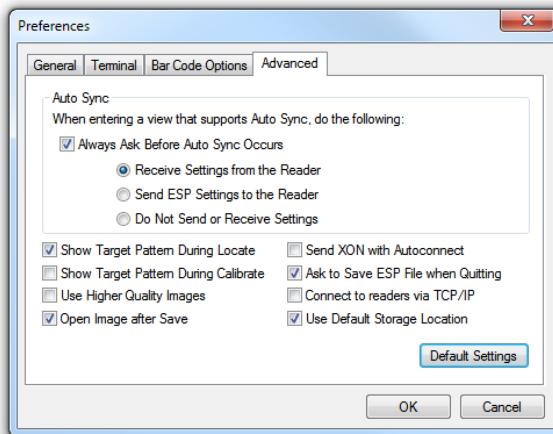

The **Auto Sync** options at the top of the **Advanced** tab allow you to determine whether Auto Sync will be enabled automatically in sections of **ESP** where it is used, or if it will ask you before it enables Auto Sync functions.

### **Always Ask Before Auto Sync Occurs**

If you check this option box, you are then able to determine what specific Auto Sync functions will be enabled. **Receive Settings from the Reader** will automatically send the imager's settings to **ESP** when Auto Sync is enabled. **Send ESP Settings to the Reader** will automatically send all imager configuration settings chosen in **ESP** to the imager. **Do Not Send or Receive Settings** creates a condition in which Auto Sync will not automatically send imager settings to **ESP**, or send **ESP** settings to the imager.

### **Show Target Pattern During Locate**

Allows you to determine whether the blue LED target pattern will be on or off during the **Locate** routine.

### **Show Target Pattern During Calibrate**

Allows you to determine whether the blue LED target pattern will be on or off during the **Calibrate** routine.

### **Use Higher Quality Images**

Sets **ESP** to output images at a higher resolution than standard JPEG format.

### **Open Image after Save**

When **Open Image after Save** is enabled, **ESP** automatically opens saved image captures. Images can be saved from the **Evaluation** tab in the **Camera** view, or by right clicking an image in any other image capture view and then saving.

### **Send XON with Autoconnect**

Sends an **XON (Begin Transmission)** command to the imager before starting the **Autoconnect** routine.


---

## Menu Toolbar


### Preferences > Advanced Tab (cont.)

#### **Ask to Save ESP File when Quitting**

When enabled, prompts the user to save a .esp file when ending a session.

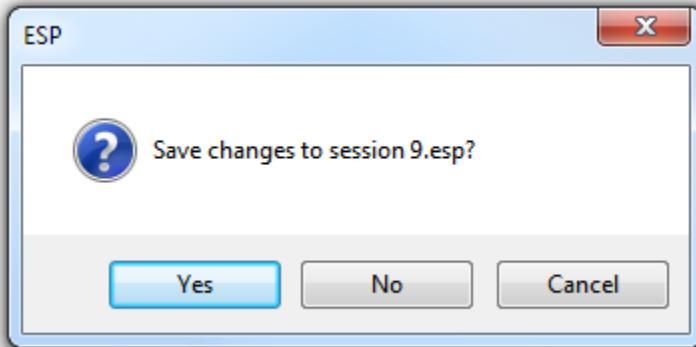

The .esp file will be saved in the location of your choice.

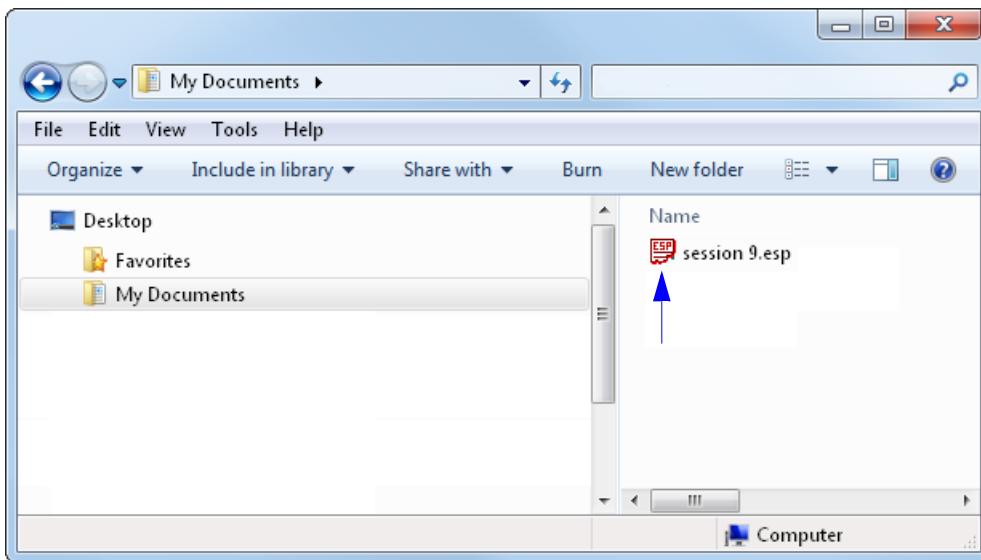

#### **Connect to Readers via TCP/IP**


When enabled, shows a **TCP/IP** option on the **Connection Wizard**.

#### **Use Default Storage Location**

When enabled, automatically stores data in **ESP's Application Data folder**.


## Document Memo

The information you type in the **Document Memo** field will appear in a context-sensitive text box whenever your cursor hovers over the **Document Memo** item on the **Options** menu.

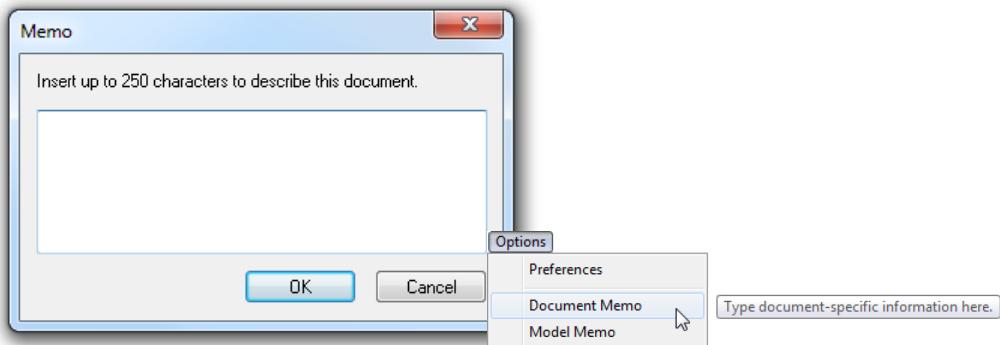

## Model Memo


Similar to **Document Memo**, the information you type in the **Model Memo** field will appear in a context-sensitive text box whenever your cursor hovers over the **Model Memo** item on the **Options** menu. Memos created in **Model Memo** are specific to the model enabled when the message was created.

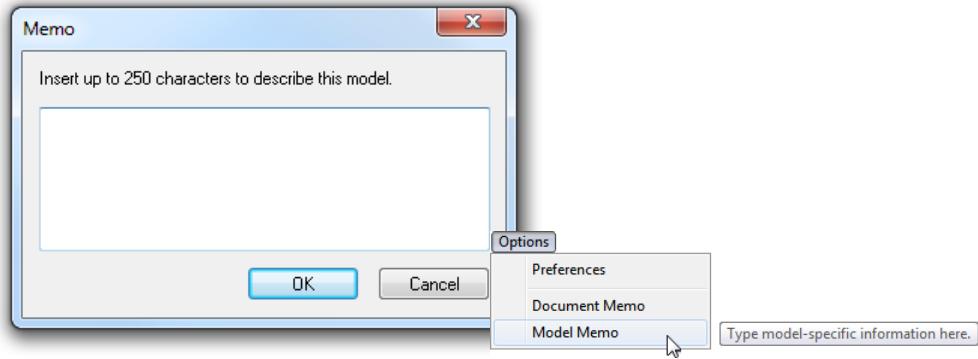

**Note:** Memos must be saved in a **.esp** file if you want them to available in your next session. If you do not save your current session, any memos that you have entered during the session will be discarded, and will be unavailable in your next session.

## Connect


The **Connect** dropdown menu allows the user to access the **Connection Wizard**, as well as the **Autoconnect** dialog. **Connect** and **Disconnect** can also be performed directly from the dropdown menu without opening a dialog.

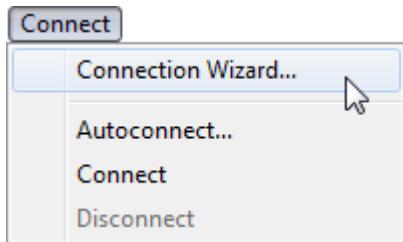


## Connection Wizard

To connect using the Connection Wizard:

- Click **Connect** on ESP's menu toolbar, and then select **Connection Wizard**.
- Select the communication interface required by your application.
- Configure settings as required by the application, and click **Connect**.

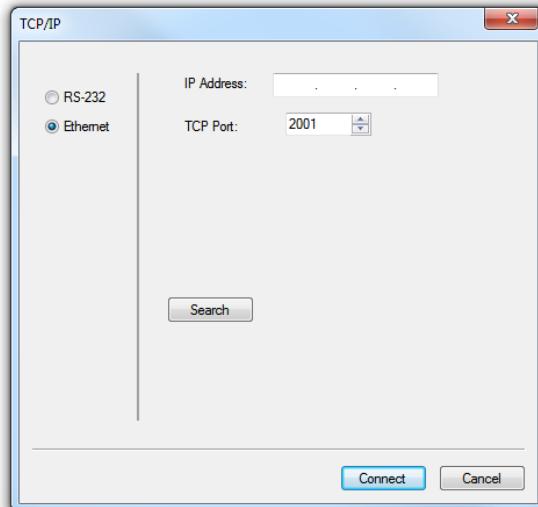

- When a connection is established, the green indicator in the status bar at the bottom right of the screen will be visible.

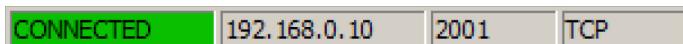


- If your RS-232 connection attempt fails, click the **Auto Connect** button to establish a connection between the MS-4Xi and the host.

## View

The **View** menu allows you to move quickly between interfaces without using the icon buttons on the **App Mode** toolbar. It also allows you to access the **Bar Code Dialog**.


### Bar Code Dialog

In the **Bar Code Dialog** you can create symbols by typing the text you wish to encode. This is a useful tool for creating configuration symbols, allowing you to configure your reader by reading the symbols you create.

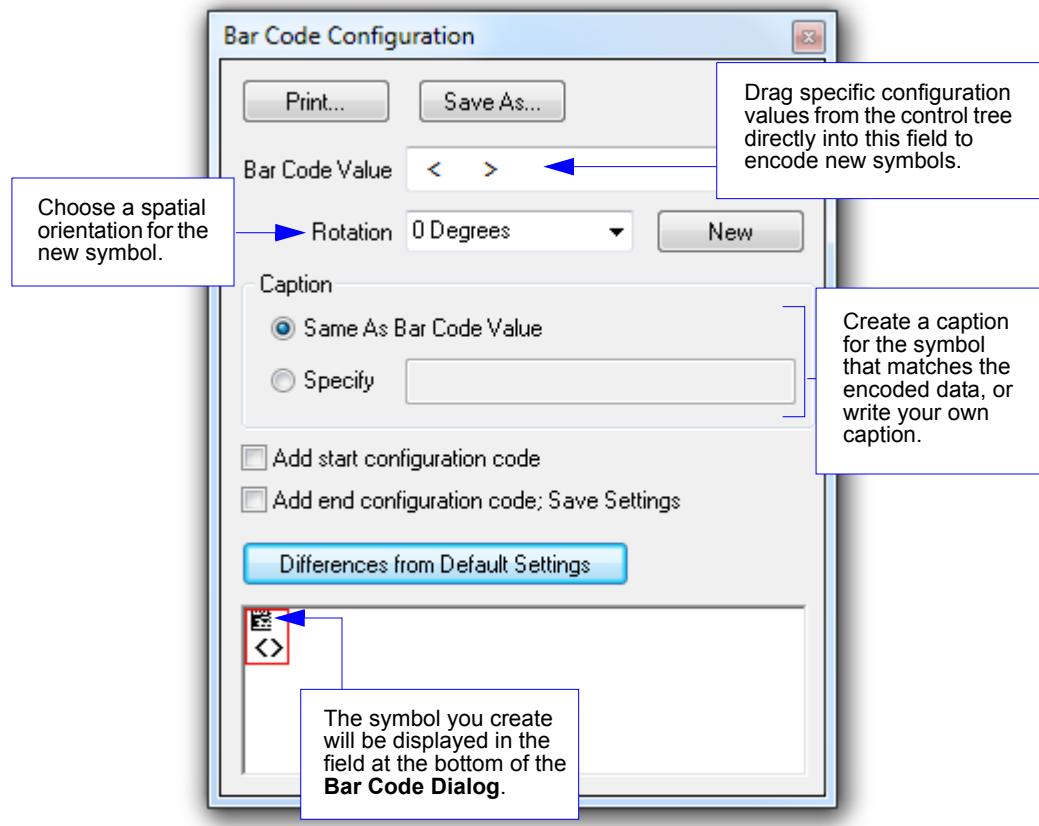

# Navigating in ESP

To change imager settings, or to access the **Utilities**, **Camera**, **Terminal**, or **Output Format** views, click the **App Mode** button.

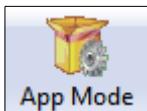


To return to **EZ Mode**, click the **EZ Mode** button.



**To make changes to configuration settings in the control trees:**


1. **Left click** on the + to expand menu items.
2. **Double-click** the desired parameter and **single-click** in the selection box to view options.
3. Place your cursor in the selection box, scroll down to the setting you want to change, and **single-click** the setting.

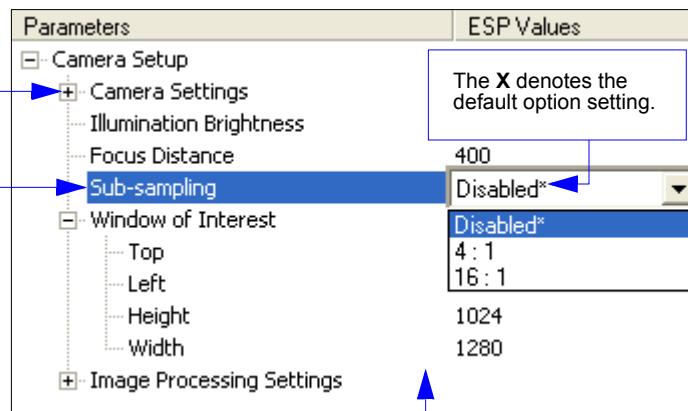

The X denotes the default option setting.

400
Disabled*
4 : 1
16 : 1
1024
1280

4. **Left click** again on the open screen to complete the selection.
5. **Right click** on the open screen and select **Save to Reader** to implement the command in the imager. You can send the command without saving it, or you can send and save the command simultaneously.

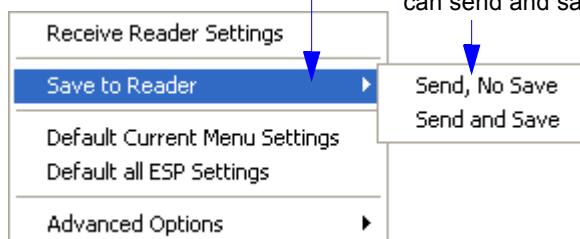

Receive Reader Settings

Save to Reader

Default Current Menu Settings

Default all ESP Settings

Advanced Options

Send, No Save

Send and Save

# Send/Receive Options

To access **Receive**, **Save**, and **Default** options, click the **Send/Recv** button. You can also access these options by right-clicking in any of the configuration views.



## Receiving

From the **Send/Recv** menu, select **Receive Reader Settings**.

**Caution:** Do not select this option if you do not want to upload the imager's settings. For example, if your **ESP** file has a number of custom settings that you want to maintain and download into the imager, these settings would be lost by choosing **Yes**.

This is useful if you want to receive (upload) the imager's settings and save them as a file for future use. For example, if your imager has settings that you do not want to change, choosing **Yes** would allow you to load those settings to **ESP** and save them in an **ESP** file for later retrieval.

Receiving the imager's settings will also assure that you will not be subsequently saving any unwanted changes that you or someone else has made previously in **ESP**.


## Saving

### Send, No Save (<A>)

Saves **ESP** settings to current memory.

### Send and Save (<Z>)

Activates all changes in current memory *and* saves to the imager for power-on.

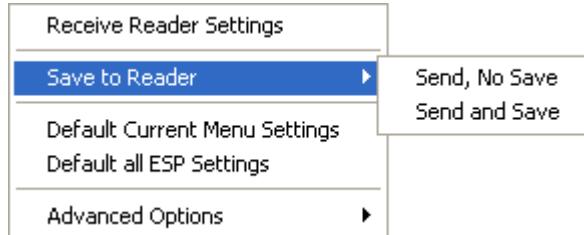

### Send and Save as Customer Defaults (<Zc>)

Saves your default settings for quick retrieval.

This option will be visible only if you have checked **Enable 'Send and Save as Customer Defaults'** in **ESP Preferences**.

---

## *Send/Receive Options*

### **Defaulting**

When you select **Default Current Menu Settings** or **Default all ESP Settings**, you are only defaulting the **ESP** settings.


## **Advanced Options**

### **Send Current View**

This is the same as **Save to Reader** > **Send No Save** except that only the commands in the current configuration tree are sent.

### **Send Current Command**

This is the same as **Send Current View**, except that it saves only the command that is currently selected.

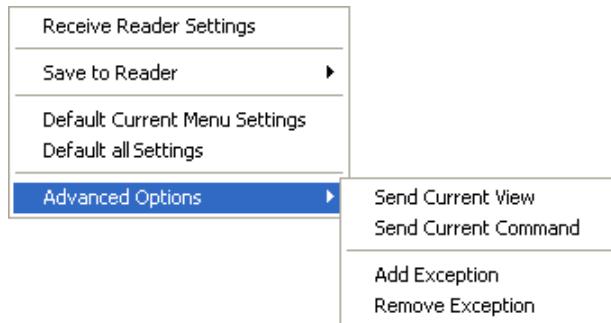

### **Add/Remove Exception**

After you perform a **Receive Reader Settings** command<sup>1</sup> and you click on the **Add Exception** option, you may see a list of serial commands. These are commands that may be in your imager's firmware, but not included in, or different from, your current version of **ESP**.

You can edit these commands by double-clicking on them and changing them as needed. It is important to note that these commands will be saved to your imager whenever you send a **Save to Reader** command, or an **<A>** or a **<Z>** command.

Also, if there is a corresponding **ESP** menu item, the **ESP Value** column for that item will be blank following a **Receive Reader Settings** command.

---

1. From the **Send/Recv** button or by right-clicking in any blank section of a tree control view.

## Using EZ Trax

For detailed information about using **EZ Trax**, refer to the Help menu in EZ Trax software, or the *EZ Trax Quick Start Guide*, available on the Microscan Tools Drive.

For information about how to configure the MS-4Xi for use with **EZ Trax**, see **Setting Up the Imager for EZ Trax** in **Read Cycle**.

---

*Using EZ Trax*

# 3 Communications

## Contents

Communications by ESP .....	3-2
Communications Serial Commands.....	3-3
Host Port Connections .....	3-4
Host Port Protocol.....	3-5
ACK/NAK Options .....	3-6
Polling Mode Options.....	3-7
Ethernet .....	3-8
Response Timeout.....	3-14
LRC Status.....	3-15
Protocol Configuration Examples.....	3-16
ASCII Character Entry Modifier.....	3-17
Preamble.....	3-18
Postamble .....	3-19

This section explains how to set up communications parameters with the host.

With Microscan's **ESP** (Easy Setup Program), configuration changes can be made in the **ESP** menus and then sent and saved to the imager. The user can also send serial commands to the imager via **ESP**'s **Terminal** window.

# Communications by ESP



Parameters

Click the **Parameters** button and then the **Communication** tab.

Parameters	ESP Values
Communications	
RS232 Host Port	
Host Port Connections	
Host Protocol	Point-to-Point
Ethernet	Enabled
Preamble	Disabled
Postamble	Enabled*
Postamble Characters	Disabled
Response Timeout	Enabled*
LRC Status	Disabled

To open nested options,  
**single-click** the +.

To change a setting, **double-click** the  
setting and use your cursor to scroll  
through the options.

# Communications Serial Commands

Host Port Connections	< <b>K100</b> ,baud rate,parity,stop bits,data bits>
Ethernet	< <b>K126</b> ,status,IP address,subnet,gateway,IP address mode>
Ethernet TCP Ports	< <b>K127</b> ,TCP Port 1,TCP Port 2>
Host Port Protocol	< <b>K140</b> ,protocol,address>
Preamble	< <b>K141</b> ,status,preamble characters>
Postamble	< <b>K142</b> ,status,postamble characters>
Response Timeout	< <b>K143</b> ,response timeout>
LRC	< <b>K145</b> ,status>
ACK/NAK Options	< <b>K147</b> ,RES,REQ,STX,ETX,ACK,NAK>
Polling Mode Options	< <b>K148</b> ,RES,REQ,STX,ETX,ACK,NAK>

## Host Port Connections

The host port can be configured with RS-232 connections.

The following settings define the basic transmission speeds and digital standards that ensure common formatting.

### Baud Rate, Host Port

**Usage:** Can be used to transfer data faster or to match host port settings.

**Definition:** The rate at which the reader and host transfer data back and forth.

**Serial Cmd:** <**K100,baud rate,parity,stop bits,data bits**>

**Default:** **115.2K**

<b>Options:</b>	0 = 600	1 = 1200	2 = 2400
	3 = 4800	4 = 9600	5 = 19.2K
	6 = 38.4K	7 = 57.6K	<b>8 = 115.2K</b>
	9 = 230K		

### Parity, Host Port

**Usage:** Only changed if necessary to match host setting.

**Definition:** An error detection routine in which one data bit per character is set to 1 or 0 so that the total number of bits in the data field is either even or odd.

**Serial Cmd:** <**K100,baud rate,parity,stop bits,data bits**>

**Default:** **None**

**Options:** **0 = None**                    1 = Even                    2 = Odd

### Stop Bits, Host Port

**Usage:** Only changed if necessary to match host setting.

**Definition:** One or two bits added to the end of each character to indicate the end of the character.

**Serial Cmd:** <**K100,baud rate,parity,stop bits,data bits**>

**Default:** **One**

**Options:** **0 = One**                    1 = Two

### Data Bits, Host Port

**Usage:** Only changed if necessary to match host setting.

**Definition:** One or two bits added to the end of each character to indicate the end of the character.

**Serial Cmd:** <**K100,baud rate,parity,stop bits,data bits**>

**Default:** **Eight**

**Options:** **0 = Seven**                    **1 = Eight**

# Host Port Protocol

- Usage:** In general, the point-to-point protocols will work well in most applications. They require no address and must use RS-232 communications standards.
- Definition:** Protocols define the sequence and format in which information is transferred between the reader and the host.
- Serial Cmd:** <K140,protocol,address>
- Default:** Point-to-Point
- Options:** 0 = Point-to-Point  
4 = ACK/NAK  
5 = Polling Mode

**Note:** In all protocol modes, the preamble <K141> and postamble <K142> character strings can be used to frame the decode data, and both are included in calculating the LRC (Longitudinal Redundancy Check).

## Point-to-Point (Standard)

- Usage:** Used only with RS-232.
- Definition:** Standard Point-to-Point requires no address and sends the data to the host whenever it is available, without a request or handshake from the host.
- Serial Cmd:** <K140,0>

## ACK/NAK

- Definition:** See the **ACK/NAK Options** command <K147>.
- Serial Cmd:** <K140,4>

## Polling Mode

- Definition:** See the **Polling Mode Options** command <K148>.
- Serial Cmd:** <K140,5>

## Poll Address

- Serial Cmd:** <K140,protocol,address>
- Default:** 1
- Options:** 1 to 50  
1 = Poll address 0x1C, Select address 0x1D  
2 = Poll address 0x1E, Select address 0x1F  
...  
50 = Poll address 0x7E, Select address 0x7F

## ACK/NAK Options

**Definition:** These parameters take effect for ACK/NAK <K140,4> on the main RS-232 port and are completely independent of the Polling Mode Options <K148>. The imager always follows the protocol in both directions (to and from the host). There is no option to disable it from either direction.

**Serial Cmd:** <K147,RES,REQ,STX,ETX,ACK,NAK>

### RES-NAK Defaults

RES: (Reset)	00 (disabled)
REQ: (Request)	00 (disabled)
STX: (Start of Text)	00 (disabled)
ETX: (End of Text)	00 (disabled)
ACK: (Acknowledge)	06
NAK: (Negative Acknowledge)	15

The following are general outlines of the **ACK/NAK** protocol. Items that are framed by brackets ( [ ] ) can either be disabled or enabled. LRC does not include STX, but it does include preamble, postamble, and ETX.

### Symbol Data Output

**TX to host:** [STX] [preamble] SYMBOL DATA [postamble] [ETX] [LRC]

**Response from host:** ACK/NAK. Sent when LRC, ETX, postamble, or timeout (waiting for more data) are detected (if REQ is disabled) depending on what is enabled.

### Commands from Host to Imager

**TX to Imager:** [STX] <command> [ETX] [LRC]

**Response from Imager:** ACK/NAK. Sent when LRC, ETX, or command-ending angle bracket '>' are received, depending on what is enabled.

### Command Response from Imager to Host

**TX to host:** [STX] [preamble] COMMAND RESPONSE DATA [postamble] [ETX] [LRC]

**Response from host:** ACK/NAK. Sent when LRC, ETX, postamble, command-ending angle bracket '>', or timeout (waiting for more data) are detected, depending on what is enabled.

As with **Polling Mode** <K140,5>, the imager can optionally perform the REQ and RES event sequences in ACK/NAK mode. If the sender does not receive an ACK or NAK, it will send REQ to request such a response (if enabled). When the sender receives an ACK, too many NAKs, or times out (if already enabled), it will send a RES (if enabled) to terminate the transaction.

**Note:** See [ACK/NAK Data Flow Examples](#) for sample ACK/NAK communication scenarios.

# Polling Mode Options

**Definition:** These parameters only take effect for **Polling Mode <K140,5>** on the main RS-232 port and are completely independent of the **ACK/NAK Options <K147>**.

The values of protocol characters can be changed, but the protocol events cannot be disabled. The polling mode address is configured in the **<K140>** command (see **Poll Address**).

If RS-232 is enabled, **<K102,0>**, **Polling Mode** will operate as a **Point-to-Point** polling protocol. This is because the RS-232 transmitter is always left on when enabled.

**Serial Cmd:** <**K148,RES,REQ,STX,ETX,ACK,NAK**>

## **RES-NAK Defaults**

<i>RES: (Reset)</i>	04
<i>REQ: (Request)</i>	05
<i>STX: (Start of Text)</i>	02
<i>ETX: (End of Text)</i>	03
<i>ACK: (Acknowledge)</i>	06
<i>NAK: (Negative Acknowledge)</i>	15

**Note:** See **Polling Mode Data Flow Examples** for sample **Polling Mode** communication scenarios.

# Ethernet

Enables or disables Ethernet connectivity in the imager.

Ethernet	Enabled
IP Address	192.168.0.100
Subnet	255.255.0.0
Gateway	0.0.0.0
IP Address Mode	DHCP
TCP Port 1	2001
Symbol Data Output	Enabled
Extra Symbol Information	Enabled
Diagnostics Output	Enabled
External Source Processing Mode	Command
TCP Port 2	2003
Symbol Data Output	Enabled
Extra Symbol Information	Enabled
Diagnostics Output	Enabled
External Source Processing Mode	Command

## IP Address

Enter the IP address of the imager in this field.

Ethernet	Enabled
IP Address	192.168.0.100
Subnet	255.255.0.0
Gateway	0.0.0.0
IP Address Mode	DHCP
TCP Port 1	2001
Symbol Data Output	Enabled
Extra Symbol Information	Enabled
Diagnostics Output	Enabled
External Source Processing Mode	Command
TCP Port 2	2003
Symbol Data Output	Enabled
Extra Symbol Information	Enabled
Diagnostics Output	Enabled
External Source Processing Mode	Command

## Subnet

Enter the Subnet address of the imager in this field.

Ethernet	Enabled
IP Address	192.168.0.100
<b>Subnet</b>	255.255.0.0
Gateway	U.U.U.U
IP Address Mode	DHCP
TCP Port 1	2001
Symbol Data Output	Enabled
Extra Symbol Information	Enabled
Diagnostics Output	Enabled
External Source Processing Mode	Command
TCP Port 2	2003
Symbol Data Output	Enabled
Extra Symbol Information	Enabled
Diagnostics Output	Enabled
External Source Processing Mode	Command

## Gateway

Enter the Gateway address of the imager in this field.

Ethernet	Enabled
IP Address	192.168.0.100
Subnet	255.255.0.0
<b>Gateway</b>	0.0.0.0
IP Address Mode	DHCP
TCP Port 1	2001
Symbol Data Output	Enabled
Extra Symbol Information	Enabled
Diagnostics Output	Enabled
External Source Processing Mode	Command
TCP Port 2	2003
Symbol Data Output	Enabled
Extra Symbol Information	Enabled
Diagnostics Output	Enabled
External Source Processing Mode	Command

## **IP Address Mode**

Determines how the imager's IP address will be defined.

[-] Ethernet	Enabled
[-] IP Address	192.168.0.100
[-] Subnet	255.255.0.0
[-] Gateway	0.0.0.0
<b>[-] IP Address Mode</b>	<b>DHCP*</b>
[-] TCP Port 1	Static
[-] Symbol Data Output	<b>DHCP*</b>
[-] Extra Symbol Information	Enabled
[-] Diagnostics Output	Enabled
[-] External Source Processing Mode	Command
[-] TCP Port 2	2003
[-] Symbol Data Output	Enabled
[-] Extra Symbol Information	Enabled
[-] Diagnostics Output	Enabled
[-] External Source Processing Mode	Command

### **Static**

In **Static Mode**, the imager uses the user-defined IP address entered in ESP.

### **DHCP**

In **DHCP Mode**, the imager automatically acquires the IP address, Subnet, and Gateway addresses from a DHCP or BOOTP server.

## TCP Port 1

One of two TCP ports for Ethernet communication with the imager. The default setting is **2001**.

[-] Ethernet		Enabled
[-] IP Address	192.168.0.100	
[-] Subnet	255.255.0.0	
[-] Gateway	0.0.0.0	
[-] IP Address Mode	DHCP	
[-] <b>TCP Port 1</b>	<b>2001</b>	<b>1024 - 65535</b>
[-] Symbol Data Output	Enabled	
[-] Extra Symbol Information	Enabled	
[-] Diagnostics Output	Enabled	
[-] External Source Processing Mode	Command	
[-] TCP Port 2	2003	
[-] Symbol Data Output	Enabled	
[-] Extra Symbol Information	Enabled	
[-] Diagnostics Output	Enabled	
[-] External Source Processing Mode	Command	

### Symbol Data Output

Enables or disables decoded symbol data output from the imager.

### Extra Symbol Information

Enables or disables extra symbol information output from the imager.

### Diagnostics Output

Enables or disables diagnostics output from the imager.

### External Source Processing Mode

Enables or disables processing of commands or data from sources external to the imager.

#### Command

**Command** enables command processing in the imager.

#### Data

**Data** enables Ethernet TCP Port 1 as a data source port.

**Note:** The data path between **in** the source port and **out** the source port is always two-way. Data is copied from source data ports and all those source ports' data is transmitted to the destination port, and from the destination port to the source port.

## TCP Port 2

One of two TCP ports for Ethernet communication with the imager. The default setting is **2003**.

	Enabled
IP Address	192.168.0.100
Subnet	255.255.0.0
Gateway	0.0.0.0
IP Address Mode	DHCP
TCP Port 1	2001
Symbol Data Output	Enabled
Extra Symbol Information	Enabled
Diagnostics Output	Enabled
External Source Processing Mode	Command
TCP Port 2	2003 <input type="button" value="▼"/> 1024 - 65535
Symbol Data Output	Enabled
Extra Symbol Information	Enabled
Diagnostics Output	Enabled
External Source Processing Mode	Command

### Symbol Data Output

Enables or disables decoded symbol data output from the imager.

### Extra Symbol Information

Enables or disables extra symbol information output from the imager.

### Diagnostics Output

Enables or disables diagnostics output from the imager.

### External Source Processing Mode

Enables or disables processing of commands or data from sources external to the imager.

#### **Command**


**Command** enables command processing in the imager.

#### **Data**


**Data** enables Ethernet TCP Port 2 as a data source port.

**Note:** The data path between **in** the source port and **out** the source port is always two-way. Data is copied from source data ports and all those source ports' data is transmitted to the destination port, and from the destination port to the source port.

## Search and Configure Mode

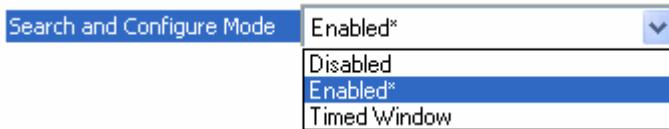

**Search and Configure Mode** is intended primarily for initial setup of an imager in a network. This parameter controls whether or not the imager will respond to ESP's **Search** function in the Ethernet TCP/IP connect dialog section of the [Connection Wizard](#):

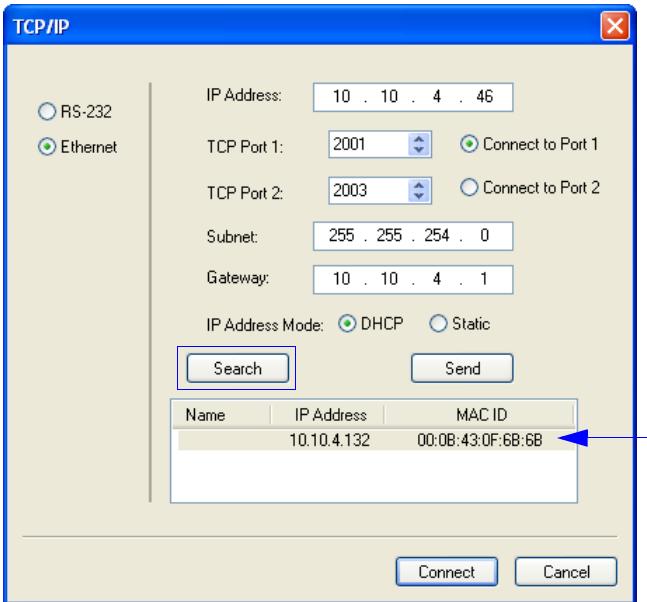

After the imager is in full use in an application, you may want the imager to continue to appear in the **Search** response list for future searches. This can help prevent disruption of the system that may occur if ESP were to show only unconfigured units.

Changes to this parameter are saved to NOVRAM and are set to default on power on.

A Reset <A> is required for settings to take effect.

**Important:** Once this setting is Disabled, ESP will only be able to connect to the imager if you know the IP address and enter it in the IP Address field of the Ethernet TCP/IP connect dialog. Search and Configure Mode can be re-enabled by defaulting the imager.

### Enabled

When enabled, **Search and Configure Mode** will find the imager and settings can be changed.

### Timed Window

When **Timed Window** is selected, Search and Configure Mode will find the imager and settings can be changed, but only 60 seconds from the last reset. After 60 seconds, Search and Configure Mode will be disabled.

## Response Timeout

- Usage:* Only used when a response is required from the host. The reader can be set to wait indefinitely by setting **Response Timeout** to zero.
- Definition:* The time that the imager will wait before timing out if **ACK**, **NAK**, and **ETX** are enabled, and a host response is expected.
- Serial Cmd:* <**K143,response timeout**>
- Default:* **12** (in 1 ms increments)
- Options:* 0 to 255 (A zero (0) setting causes an indefinite wait.)

## LRC Status

*(Longitudinal Redundancy Check)*

*Usage:* Used when extra data integrity is required.

*Definition:* An error-checking routine that verifies the accuracy of transmissions. It is the exclusive OR of all characters following the **STX** (start of text) up to and including the **ETX** (end of text). What this means is that the binary representation of all the characters in a transmission are cumulatively added in a column and each resulting odd integer is assigned a 1 and each even integer a 0 (two 1s = 0, two 0s = 0, a 1 and a 0 = 1). The extra LRC character is then appended to the transmission, and the receiver (usually the host) performs the same addition and compares the results.

*Serial Cmd:* <**K145,status**>

*Default:* **Disabled**

*Options:* **0 = Disabled**                    **1 = Enabled**

# Protocol Configuration Examples

## Point-to-Point (Main Port)

- <K100,8,0,1,1> Baud Rate: **115.2K**; Parity: **None**; Stop Bits: **2**; Data Bits: **8**
- <K140,0> Point-to-Point
- <K102,0> RS-232 enabled

## Polling Mode (Main Port)

- <K100,4,0,1,1> Baud Rate: **9600**; Parity: **None**; Stop Bits: **2**; Data Bits: **8**
- <K140,5,23> Polling Mode; Address: **23**
- <K102,0> RS-232 Point-to-Point polling
- <K143,30> 30 ms Response Timeout

## “User-Defined” Polling Mode (Main Port)

- <K100,4,0,1,1> Baud Rate: **9600**; Parity: **None**; Stop Bits: **2**; Data Bits: **8**
- <K140,5,12> Polling Mode; Address: **12**
- <K148,,08,09,18,0B,0C,0D> Default RES (0x04), REQ=0x08; EOT=0x09; STX=0x18; ETX=0x0B; ACK=0x0C; NAK=0x0D
- <K102,0> RS-232 Point-to-Point polling
- <K143,40> 40 ms Response Timeout

## ACK/NAK (Main Port)

- <K100,9,0,1,1> Baud Rate: **230K**; Parity: **None**; Stop Bits: **2**; Data Bits: **8**
- <K140,4> ACK/NAK
- <K147,,,01,1B,2E,1F> Default RES and REQ (00, disabled); STX=0x01; ETX=0x1B; ACK=0x2E; NAK=0x1F
- <K102,0> RS-232 enabled
- <K143,50> 50 ms Response Timeout

# ASCII Character Entry Modifier

Commands that require ASCII text fields, such as **Preamble** and **Postamble** commands, can be sent to the imager as hex pairs (see [ASCII Table](#) for conversions).

*Serial Cmd Format:* <**Knnnh,00-FF**>

To enter ASCII fields as hex values (00 to FF), add a lower-case **h** directly after the command's **K** number, and then enter the hex value that corresponds with the desired ASCII character.

*Example:*

Consider the **Postamble** command:

*Serial Cmd:* <**K142,status,postamble character(s)**>

Imagine that your application requires the ASCII character **>** to be the postamble in your symbol decode output.

The ASCII characters **<**, **>**, and **,** can only be entered as hex pairs. So, to make **>** the postamble in your symbol decode output, enter the **Postamble** command as follows:

**<K142h,,3E>**

Note that the “status” field contains only a **,**. This is because the only field that is being changed is the “postamble character(s)” field. (See [Serial Configuration Command Conventions](#) for a more detailed explanation of this command shortcut.)

## Preamble

### Preamble Status

- Usage:** Useful for identifying and controlling incoming data. For example, defining the preamble as a carriage return and a line feed causes each decoded message to be displayed on its own line.
- Definition:** Defines a one to four character data string that can be added to the front of the decoded data.
- Serial Cmd:** <**K141**,**status**,**preamble character(s)**>
- Default:** **Disabled**
- Options:** **0 = Disabled**      1 = Enabled (within any protocol)

### Preamble Characters

- Serial Cmd:** <**K141**,**status**,**preamble character(s)**>
- Default:** **^M** corresponds to: **carriage return**.
- Options:** To enter control characters within a serial command, hold down the **Ctrl** key while typing the desired character.

**Example:** <**K141,1,CNTL-m**> to enter the control character **^M**.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

- For <: <**K141h,,3C**>
- For >: <**K141h,,3E**>
- For , : <**K141h,,2C**>

# Postamble

## Postamble Status

**Usage:** Useful for identifying and controlling incoming data. For example, defining the postamble as a carriage return and a line feed causes each decoded message to be displayed on its own line.

**Definition:** Allows the user to enable or disable up to four postamble characters that can be added to the end of the decoded data.

**Serial Cmd:** <**K142**,**status**,postamble character(s)>

**Default:** **Enabled**

**Options:** 0 = Disabled                    **1 = Enabled (within any protocol)**

## Postamble Characters

**Serial Cmd:** <**K142**,**status**,**postamble character(s)**>

**Default:** **^M^J** corresponds to: **carriage return/line feed**.

**Options:** To enter control characters within a serial command, hold down the control key while typing the desired character.

*Example:* <**K142,1,CNTL-m CNTL-j**> to enter **^M^J**.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K142h,,3C**>  
For >: <**K142h,,3E**>  
For , : <**K142h,,2C**>

---

*Postamble*

# 4 Calibration

## Contents

Calibration Serial Commands .....	4-2
Calibration Overview.....	4-2
Calibration Options .....	4-3
Calibration by ESP .....	4-10
Initiating Calibration .....	4-12
Additional Notes about Calibration.....	4-18

This section shows the MS-4Xi's calibration options, and explains the different ways that those options can be configured.

## Calibration Serial Commands

Calibration Options	< <b>K529</b> , <i>gain,shutter speed,symbol type,WOI framing,WOI margin,line scan height,processing</i> >
Autocalibrate	< <b>@CAL</b> >

## Calibration Overview

**Autocalibration** is one of the most powerful features of the MS-4Xi. The calibration process can be initiated by serial command, **EZ** button, or **ESP** user interface.

When the imager enters calibration, it runs through an optimization cycle that sets the ideal parameters for reading symbols at the highest possible level of performance. Autocalibration can be specially configured to optimize specific parameters, such as focus, gain, shutter speed, and symbol type.

The calibration process consists of five separate phases: quick focus, search pass, focus pass, medium pass, and fine-tune pass. During this process the imager quickly locates configuration setup, defines a calibration range for the configuration parameters, and then tunes those parameters for optimal performance.

# Calibration Options

This command specifies the operation of the imager's calibration feature. The default configuration is set up to perform calibration on gain, focus, and symbol type. The default shutter speed setting is disabled, because not all applications require shutter speed, and when it is required, the application-specific settings tend to vary widely.

**Note:** **Background Color** is part of the calibration process regardless of the calibration setup. After successful completion of the calibration routine, the background color will be set to the appropriate value, depending on the symbol in the field of view. The **Illumination Brightness** parameter is not part of the calibration process, and it must be configured appropriately *prior to calibration*.

## Gain

**Definition:** When enabled, gain will be calibrated to provide the best available image quality and performance.  
When disabled, gain is fixed and is not part of the calibration process.

**Serial Cmd:** <K529,gain,shutter speed,symbol type,WOI framing,WOI margin,line scan height,processing>

**Default:** **Enabled**

<b>Options:</b>	0 = Disabled	<b>1 = Enabled</b>
-----------------	--------------	--------------------

## Shutter Speed

**Definition:** Unless an application is a static setup, the shutter speed setting should be configured by the user based on the application. For dynamic applications, the user should configure the shutter speed setting so the calibration process can optimize the gain for that setting.

**Serial Cmd:** <K529,gain,**shutter speed**,symbol type,WOI framing,WOI margin,line scan height,processing>

**Default:** **Disabled**

<b>Options:</b>	<b>0 = Disabled</b>	1 = Enabled
	2 = Fast Shutter	

**Note:** The following table shows general guidelines for shutter speed configurations based on various line speeds. The configurations shown depend on the imager's optical configuration, and on symbol element size.

Shutter Speed	Line Speed
0 - 250	static
250 - 750	5" / sec
750 - 1500	10" / sec
1500 - 2000	15" / sec
2000 - 2500	20" / sec

---

## *Calibration Options*

### **Disabled (Shutter Speed)**

When this feature is disabled, the shutter speed is fixed and is not part of the calibration process.

### **Enabled (Shutter Speed)**

When this feature is enabled, shutter speed will be calibrated to provide the best possible image quality and performance.

### **Fast Shutter**

The calibration process will concentrate on achieving the fastest possible shutter setting that will still provide good performance. The image quality or contrast may not be as good as what would be achieved with the **Enabled** setting. The calibration process is not designed to choose the fastest shutter speed that can decode a symbol, but rather to optimize for the fastest shutter speed that still provides good image quality.

## Symbol Type

Serial Cmd: <K529,gain,shutter speed,**symbol type**,WOI framing,WOI margin,line scan height,processing>

Default: **Enabled**

Options: 0 = Disabled **1 = Enabled**

### Disabled

When this feature is disabled, only the currently-enabled symbologies will be considered during the calibration process.

### Enabled

When this feature is enabled, autodiscrimination will be in effect during the calibration process. All symbologies that are readable by the imager except *PDF417* and *Pharmacode* will be considered during calibration. Any new symbologies successfully decoded during calibration will remain enabled at the end of the process. All enabled symbologies will remain enabled.

For example, assume that only Code 39 is enabled at the beginning of calibration. If a Code 128 symbol is read during calibration, then Code 128, as well as Code 39, will be enabled after the calibration process is complete.

---

## Calibration Options


### Window of Interest (WOI) Framing

**Definition:** If a WOI framing mode is enabled, it will set the camera WOI to a full-size image when calibration begins. Once a symbol is decoded, the camera WOI will be zoomed-in both vertically and horizontally (regardless of which WOI mode is enabled) to include the symbol plus an additional margin area. This is done to accelerate the calibration process.  
When a successful calibration process is completed, the camera WOI will be adjusted according to the mode enabled. Otherwise, the original WOI configuration will be retained.


**Serial Cmd:** <**K529,gain,shutter speed,symbol type,WOI framing,WOI margin,line scan height,processing**>

**Default:** **Disabled**

**Options:** **0 = Disabled**                            1 = Row and Column  
                  2 = Row                                3 = Column  
                  4 = Straight Line                    5 = Straight Line Framed

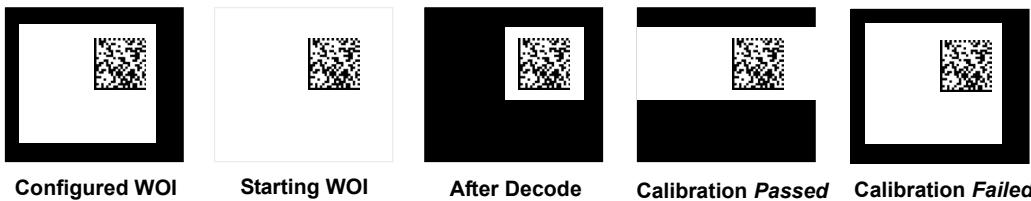

If WOI framing is not enabled, the current WOI configuration will be used until a symbol has been decoded. After a symbol is decoded, the WOI is framed exactly as it would be if a WOI framing mode was enabled. When the calibration process is complete, the original WOI configuration is restored. Refer to the diagram below:

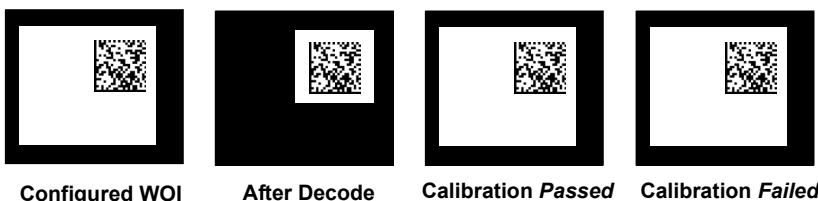

## **Disabled**

When this feature is disabled, the Window of Interest is not modified after the calibration process is complete.

## **Row and Column**

If the calibration process is successful, the Window of Interest will be modified to frame the symbol as well as an additional margin area around the symbol, determined by the **WOI Margin** parameter. Refer to the diagram below:



## **Column**

If the calibration process is successful, the Window of Interest columns will be modified to vertically frame the symbol, plus an additional margin area around the symbol, determined by the **WOI Margin** parameter. Refer to the diagram below:



## **Row**

If the calibration process is successful, the Window of Interest rows will be modified to horizontally frame the symbol, plus an additional margin area around the symbol, determined by the **WOI Margin** parameter. Refer to the diagram below:



## Straight Line

This feature is intended for use with linear symbologies. If the calibration process is successful, the orientation of the symbol is determined and the Window of Interest is modified according to the symbol orientation. The scan line orientation is determined to be vertical if the symbol tilt is between 225° and 315°, or between 45° and 135°. Otherwise, the scan line will be horizontal.

If the symbol is vertical, the image column size will be set by the scan height parameter, and will be configured for full row resolution. If the symbol is horizontal, the image row size will be set by the scan height parameter, and will be configured for full column resolution. The scan line will be centered in the middle of the symbol. If the symbol is tilted such that the scan line will not pass completely through the symbol, the scan width will be adjusted to include the entire symbol. Refer to the diagram below:



## Straight Line Framed

This parameter is the same as “Straight Line”, except that the Window of Interest will also frame the scan line on the symbol length as well. The scan line includes the symbol plus an additional margin area determined by the **WOI Margin** parameter.

## Window of Interest (WOI) Margin

**Definition:** Sets the margin size that is applied to the calibrated symbol. This parameter is expressed in number of pixels. If the margin causes the image to exceed the maximum image size, it will be reduced accordingly.

**Serial Cmd:** <K529,gain,shutter speed,symbol type,WOI framing,WOI margin,line scan height,processing>

**Default:** 75 (pixels)

**Options:** 20 to 1280

## Line Scan Height

**Definition:** This parameter is only used with the Straight Line modes. It sets the scan height of the straight-line image, and it is expressed in number of pixels.

**Serial Cmd:** <K529,gain,shutter speed,symbol type,WOI framing,WOI margin,line scan height,processing>

**Default:** 64 (pixels)

**Options:** 3 to 1024

## Processing

**Definition:** This setting defines the amount of time and effort the imager will spend attempting to decode a symbol for each parameter configuration.

**Serial Cmd:** <K529,gain,shutter speed,symbol type,WOI framing,WOI margin,line scan height,processing>

**Default:** Medium

<b>Options:</b>	0 = Low	1 = Medium
	2 = High	3 = Definable

### Low

The imager will spend a low amount of effort attempting to decode the given symbol for each parameter configuration.

### Medium

The imager will spend a medium amount of effort attempting to decode the given symbol for each parameter configuration.

### High

The imager will spend a high amount of effort attempting to decode the given symbol for each parameter configuration.


### Definable

The processing time for each image frame is defined by the **Image Processing Timeout** parameter <K245>.


# Calibration by ESP

ESP's Calibration view incorporates all the functionality of the **<K529>** (Calibration Options) command in a single easy-to-use, intuitive interface. This calibration process allows the user much finer control of individual parameters than the calibration routine in EZ Mode or on the Video tab.

## Before/During Calibration

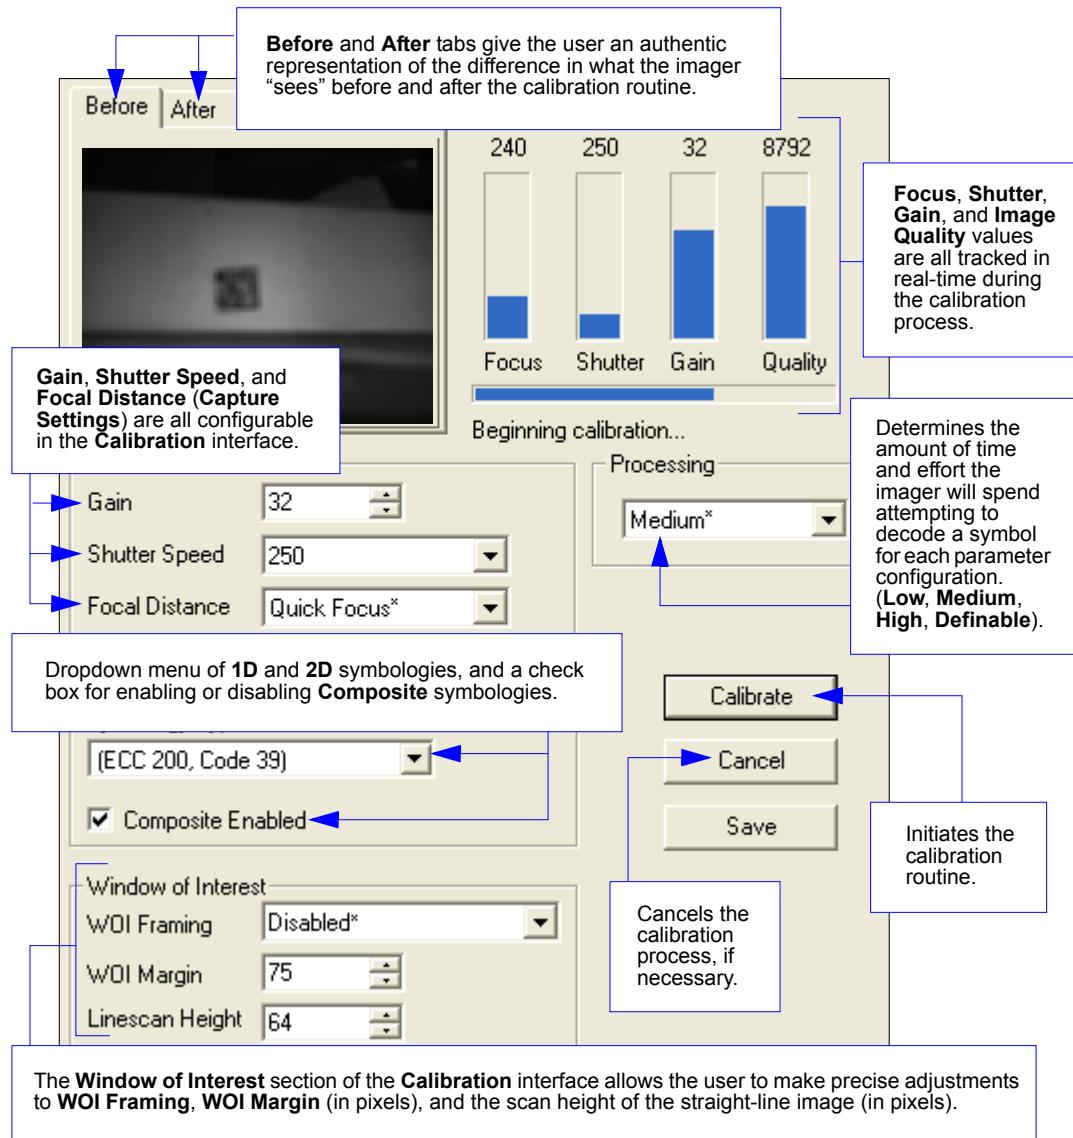

## After Calibration

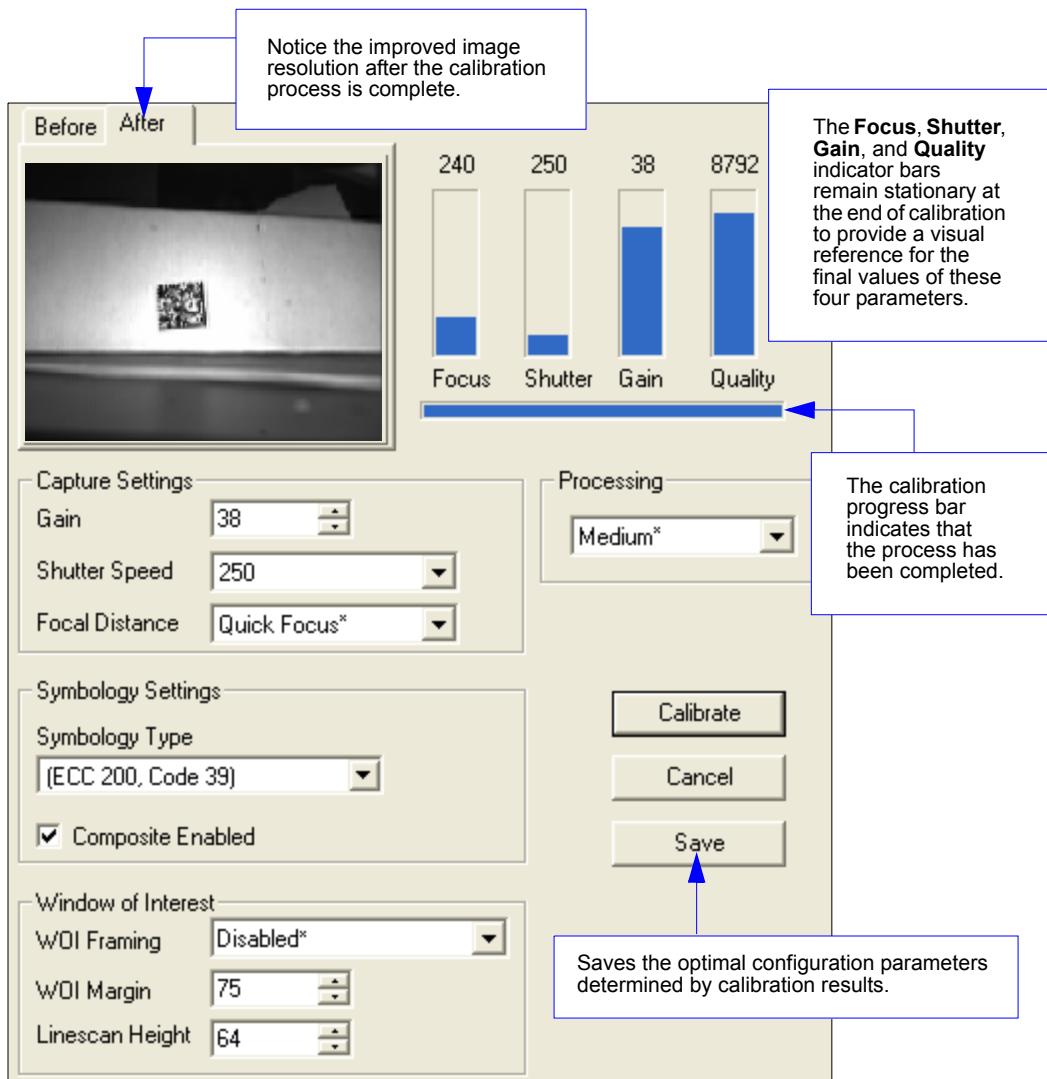


## Initiating Calibration

Calibration can be initiated by serial command, the **EZ** button, or from the **Calibration** interface in **ESP**. A symbol must be in the imager's field of view during the calibration process.

In **ESP**, the **Calibrate** button starts the calibration routine.

Calibrate

To initiate calibration by serial command, enter the serial command **<@CAL>** from a terminal, such as **ESP**'s **Terminal** interface. **<@CAL>** is a calibration routine that emphasizes contrast and readability.

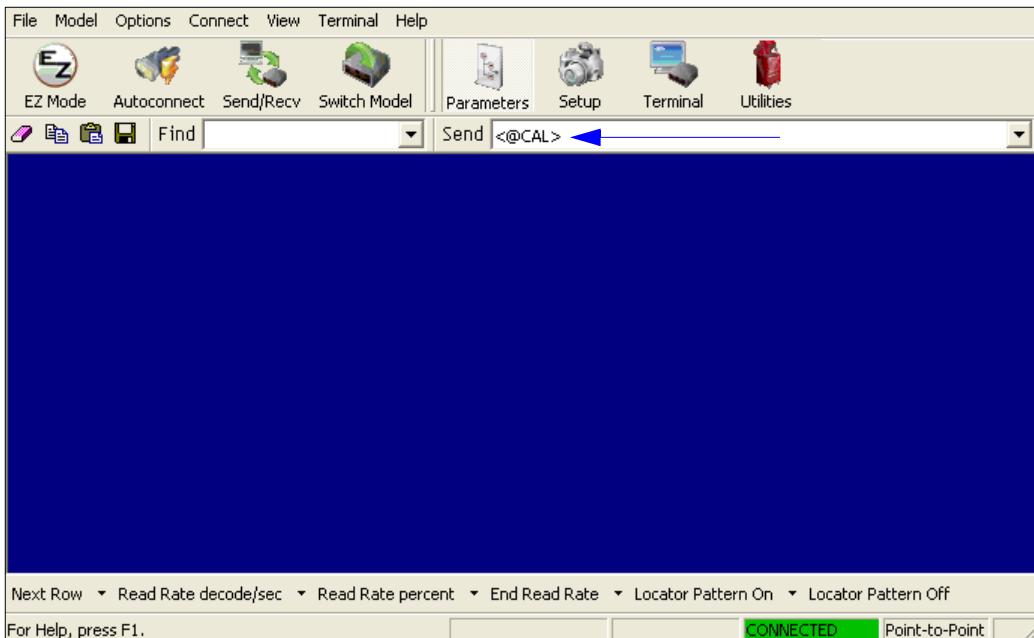

See [Calibrate by EZ Button](#) for the **EZ** button calibration procedure.


## Calibration Progress Indicators

During the calibration process, the imager has a number of ways to communicate its progress to the user. The following three types of feedback are the primary ways that the imager communicates calibration progress.

### Read Rate LEDs

When calibration is initiated through a serial command or the EZ Button, the imager's Read Rate LEDs indicate calibration progress as follows:

<b>LEDs</b>	<b>Calibration Progress</b>
20%	Search Pass in progress.
20%, 40%	Focus Pass in progress.
20%, 40%, 60%	Medium Pass in progress.
20%, 40%, 60%, 80%	Fine-Tune Pass in progress.
20%, 40%, 60%, 80%, 100%	Calibrated Successfully (holds for green flash duration).

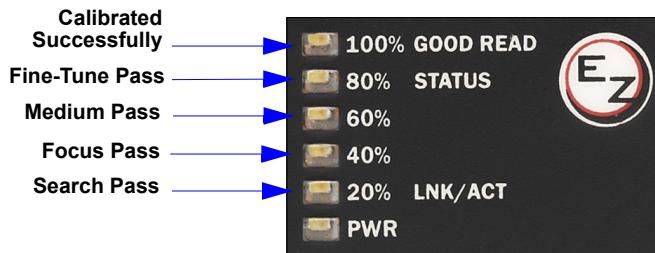

### Beep/Green Flash

The beeper and green LED flash are used to indicate calibration status as shown in the table below:

<b>Indicator</b>	<b>Status</b>
2 quick beeps	Calibration has started.
5 quick beeps	Calibration has failed.
1 long beep	Calibration has been completed successfully.
1 sec. Green Flash	Calibration has been completed successfully.

## **Calibration Progress Output to Terminal**

When initiated by serial command or **EZ** button, the autocalibration operation will output progress and process information to a terminal if the system is configured to do so.

### **Terminal**

Depending upon how the calibration options are configured, the autocalibration process can have up to 5 steps (Quick Focus, Search Pass, Focus Pass, Medium Pass, Fine-Tune Pass). Calibration data is shown in a simple table format under 8 category headings, each of which are defined below.

<b>Heading</b>	<b>Definition</b>
Prog	Progress indicator with a range of 0 - 100. Indicates percent complete.
Rating	Rating indicator; higher ratings are more favorable.
Decode	Number of successful decodes for the pass.
Quality	Quality indicator; higher ratings are more favorable.
Focus	Focus position under operation.
Shutter	Shutter setting under operation.
Gain	Gain setting under operation.
Locate	Time required to locate symbol, expressed in milliseconds.

### **Calibration Progress Output Examples (Terminal)**

#### **Quick Focus**

This mode is only run if **Quick Focus** calibration mode is enabled. Quick Focus calibration mode is designed to quickly locate the focus setting for an object at the center of the imager's field of view. *There is no terminal output for this operation.*

#### **Search Pass**

The purpose of **Search Pass** is to decode a symbol in as few configurations as possible during calibration. This process is designed to quickly identify symbology type, and any image processing parameters that are already calibrated, as well as determining focus position.

**Running Search Pass**

Prog	Rating	Decode	Quality	Focus	Shutter	Gain	Locate
12	0	0	0	313	250	0	0
14	0	0	0	313	250	9	0
16	0	0	0	313	250	18	0
18	2174	1	72	313	250	27	24

## Focus Pass

The purpose of **Focus Pass** is to determine the optimal focal position of the optical system. This is accomplished by determining the inside and outside focus positions and then recording the center position as the desired focal position.

**Running Focus Pass**

Prog	Rating	Decode	Quality	Focus	Shutter	Gain	Locate
38	0	0	0	353	250	0	0
38	0	0	0	353	250	9	0
38	4256	2	48	353	250	18	5
38	0	0	0	409	250	0	0
38	4236	2	28	409	250	9	5
38	0	0	0	447	250	0	0
38	4236	2	28	447	250	9	4
38	0	0	0	492	250	0	0
38	4232	2	24	492	250	9	4
38	0	0	0	536	250	0	0
38	2128	1	24	536	250	9	5
38	0	0	0	572	250	0	0
38	0	0	0	572	250	9	0
38	2144	1	40	572	250	18	4
38	0	0	0	601	250	27	0
38	0	0	0	601	250	36	0
38	0	0	0	601	250	45	0
38	0	0	0	601	250	45	0
38	0	0	0	601	250	45	0
38	0	0	0	601	250	45	0
42	4280	2	72	297	250	45	6
42	4280	2	72	283	250	45	5
42	4280	2	72	270	250	45	5
42	4280	2	72	258	250	45	5
42	4280	2	72	247	250	45	5
42	4280	2	72	236	250	45	6
42	4280	2	72	227	250	45	5
42	4280	2	72	217	250	45	5
42	4280	2	72	209	250	45	6
42	4280	2	72	200	250	45	6
46	0	0	0	601	250	45	0

Inside Focus = 200; Outside Focus = 572; Center Focus = 386

## **Medium Pass**

The theory behind **Medium Pass** is to develop a readable range from which to dial in a decoded symbol.

**Running Medium Pass**

<i>Prog</i>	<i>Rating</i>	<i>Decode</i>	<i>Quality</i>	<i>Focus</i>	<i>Shutter</i>	<i>Gain</i>	<i>Locate</i>
51	4216	2	8	386	250	0	5
53	8436	4	20	386	250	4	4
55	6336	3	24	386	250	8	4
57	8448	4	32	386	250	12	4
59	8456	4	40	386	250	16	5
61	8464	4	48	386	250	20	4
63	8472	4	56	386	250	24	5
65	8488	4	72	386	250	28	5
67	8504	4	88	386	250	32	5
69	8512	4	96	386	250	36	5
71	8528	4	112	386	250	40	6
73	8584	4	168	386	250	44	5
75	8644	4	228	386	250	48	5

*Rating List (Best):*

*Rating = 8606; Focus = 386; Shutter = 250; Gain = 48*

*Rating = 8581; Focus = 386; Shutter = 250; Gain = 44*

*Rating = 8553; Focus = 386; Shutter = 250; Gain = 40*

*Rating = 8527; Focus = 386; Shutter = 250; Gain = 36*

*Rating = 8505; Focus = 386; Shutter = 250; Gain = 32*

*Rating = 8488; Focus = 386; Shutter = 250; Gain = 28*

*Rating = 8476; Focus = 386; Shutter = 250; Gain = 24*

**Fine-Tune Pass**

The theory behind **Fine-Tune Pass** is to dial in a decoded symbol based on the range supplied by the **Medium Pass**.

Running Fine Tune Pass

<i>Prog</i>	<i>Rating</i>	<i>Decode</i>	<i>Quality</i>	<i>Focus</i>	<i>Shutter</i>	<i>Gain</i>	<i>Locate</i>
77	6416	3	104	386	250	38	7
79	6424	3	112	386	250	39	6
81	6424	3	112	386	250	40	6
84	6432	3	120	386	250	41	6
86	6448	3	136	386	250	42	5
88	6464	3	152	386	250	43	5
90	6476	3	164	386	250	44	5
93	6488	3	176	386	250	45	5
95	6506	3	194	386	250	46	6
97	6524	3	212	386	250	47	5
100	6538	3	226	386	250	48	6

*Rating List (Best):*

*Rating = 6527; Focus = 386; Shutter = 250; Gain = 48*

*Rating = 6517; Focus = 386; Shutter = 250; Gain = 47*

*Rating = 6505; Focus = 386; Shutter = 250; Gain = 46*

*Rating = 6491; Focus = 386; Shutter = 250; Gain = 45*

*Rating = 6476; Focus = 386; Shutter = 250; Gain = 44*

*Rating = 6462; Focus = 386; Shutter = 250; Gain = 43*

*Rating = 6449; Focus = 386; Shutter = 250; Gain = 42*

*Calibration PASSED.*

## Additional Notes about Calibration

The following conditions apply to the imager's calibration process. Some of these items are noted at various points throughout this section, or in other sections of the imager's documentation.

1. A symbol must be in the imager's field of view during the calibration process.
2. The **Illumination Brightness** parameter <K514> is not part of the calibration process.
3. **Background Color** <K451> is calibrated.
4. If **Window of Interest Framing** is enabled, the WOI will be set to full frame when calibration begins. If **WOI Framing** is disabled, the current WOI configuration will be used for the **Search Pass**.
5. If **Symbol Type** is enabled for calibration (**Autodiscriminate**), then **Interleaved 2 of 5 Range Mode Status (Interleaved 2 of 5)** <K472> will be enabled. This allows variable-length Interleaved 2 of 5 symbols to be decoded. If an Interleaved 2 of 5 symbol is decoded during calibration, then code length # 1 will be set to the decoded symbol length at the end of calibration. Otherwise, the symbol lengths will be restored to their original configurations.
6. **Pharmacode** is not calibrated.
7. All symbol types that were enabled before calibration will still be enabled after calibration. For example, if Data Matrix ECC 200 was enabled before calibration, and the calibration routine was performed on a Code 128 symbol, then after calibration is completed both Data Matrix ECC 200 and Code 128 will be enabled.
8. The calibration process does not modify the global **Composite** status <K453>. The global Composite status must be configured properly before calibration.
9. If the user requires calibration of a **stacked** symbology <K482>, <K483>, or <K484>, that symbology must be enabled and configured appropriately before calibration.
10. **UPC Supplements** will be disabled during calibration.
11. The **Search** process will use the configurable Window of Interest for image captures. However, when the search process is completed, the WOI will be reduced to include only the symbol of interest and some additional boundary area.


# 5 Read Cycle

## Contents

Read Cycle by ESP .....	5-2
Read Cycle Serial Commands.....	5-3
Read Cycle Setup.....	5-4
Multisymbol.....	5-5
Trigger Mode and Filter Duration.....	5-6
External Trigger Polarity .....	5-11
Serial Trigger .....	5-12
Start Trigger Character (Non-Delimited).....	5-13
Stop Trigger Character (Non-Delimited).....	5-14
End of Read Cycle .....	5-15
Capture Mode .....	5-17
Capture Timing .....	5-21
Image Processing Timeout.....	5-23
Image Storage .....	5-24
Minimum Good Reads .....	5-26
Setting Up the Imager for EZ Trax.....	5-27

After you've established communications and completed basic read rate testing, you will need to address the spatial and timing parameters associated with your application. This section explains those parameters.

# Read Cycle by ESP

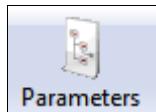

Click the **Parameters** button and then the **Read Cycle** tab.

Parameters ESP Values

- [-] Read Cycle
  - [+] Multisymbol
  - [-] Trigger
    - ... External Trigger State Active Closed
  - [+] Serial Trigger
    - ... Decodes Before Output 1
  - [-] End of Read Cycle
    - [+] Mode
      - ... Read Cycle Timeout Timeout\*
    - ... Capture Mode
    - ... Capture Time
    - [-] Store No Read Image
      - ... Image Storage Type New Trigger
      - ... Image Storage Mode Timeout or New Trigger
    - [+] Image Processing Settings
      - ... First Image Last Frame
      - ... Last Frame or New Trigger

# Read Cycle Serial Commands

Trigger Mode/Filter Duration	< <b>K200</b> ,trigger mode,leading edge trigger filter,trailing edge trigger filter>
Serial Trigger Character	< <b>K201</b> ,serial trigger character>
External Trigger State	< <b>K202</b> ,external trigger state>
End of Read Cycle	< <b>K220</b> ,end of read cycle,read cycle timeout>
Minimum Good Reads	< <b>K221</b> ,minimum good reads>
Multisymbol	< <b>K222</b> ,number of symbols,multisymbol separator>
Start Trigger Character	< <b>K229</b> ,start character>
Stop Trigger Character	< <b>K230</b> ,stop character>
Capture Timing	< <b>K242</b> ,time before first capture,time between first and second captures,,,,,,,,,time between seventh and eighth captures>
Image Storage	< <b>K244</b> ,image storage type,image store mode>
Image Processing Timeout	< <b>K245</b> ,image processing timeout>

## Read Cycle Setup

Setting up read cycle and triggering parameters will involve a series of decisions based on your particular application, as follows:

1. Select the number of symbols to be read in a single cycle. The MS-4Xi can read multiple symbols in a single image frame.
2. Decide on the trigger type to be used: if serial, choose a serial character; if external, choose either **Level** or **Edge**.
3. Designate how the read cycle should end (**Timeout**, **New Trigger**, **Last Frame**).
4. Select **Capture Mode**, **Continuous Mode**, or **Rapid Mode**.
5. Select **Number of Captures** (if in **Rapid Capture Mode**).
6. Set the **Time Before First Capture** and **Time Between Captures**, if any.

**Note:** The imager's camera captures images at a rate of about 16/second (based on a 1280 x 1024 image). The capture rate increases as frame sizes decrease.

**Note:** If you need to set up your MS-4Xi for use with **EZ Trax** software, see [Setting Up the Imager for EZ Trax](#).

## Multisymbol

- Usage:** Multisymbol is commonly used in shipping applications where a shipping symbol contains individual symbols for part number, quantity, etc. This feature allows one trigger to pick up all the symbols.
- Definition:** **Multisymbol** allows the user to define up to 100 symbols that can be read in a single read cycle.
- Conditions:** The following conditions apply:
- Each symbol must be different to be read, unless in **Rapid Capture Mode**, configured for “triggered capture”.
  - The maximum number of characters in a read cycle is 3,000 for all symbols.
  - All No Read messages are posted at the end of the data string, unless output filtering is enabled.
  - If more than one symbol is within the field of view at the same time, symbol data may not be displayed in the order of appearance.
  - If **Matchcode Type** is set to **Sequential** or if **Trigger** is set to **Continuous Read 1 Output**, the imager will behave as if **Number of Symbols** were set to 1, regardless of the user-defined configuration.

## Number of Symbols

- Definition:** **Number of Symbols** is the number of different symbols that can be read in a single read cycle.
- Serial Cmd:** <**K222,number of symbols**, multisymbol separator>
- Default:** 1
- Options:** 1 to 100

## Multisymbol Separator

- Usage:** Used to delimit or separate data fields with a user defined character.
- Definition:** Any valid ASCII character, inserted between each symbol read when Multisymbol is set to any number greater than 1.
- Serial Cmd:** <**K222,number of symbols,multisymbol separator**>
- Default:** , (comma)
- Options:** Any available ASCII character.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K222h,,3C**>

For >: <**K222h,,3E**>

For , : <**K222h,,2C**>

**Note:** If No Read messages are disabled and there are No Reads occurring, separators will only be inserted between symbol data outputs.

# Trigger Mode and Filter Duration

## Trigger Mode

**Definition:** The **Trigger** is the event that initiates a read cycle.

**Note:** When calibrating the imager or testing read rate, the current trigger setting will be disregarded.

**Serial Cmd:** <**K200,trigger mode,leading edge trigger filter,trailing edge trigger filter**>

**Default:** **Continuous Read**

**Options:** **0 = Continuous Read**

1 = Continuous Read 1 Output

2 = External Level

3 = External Edge

4 = Serial Data

5 = Serial Data and Edge

## Continuous Read

**Usage:** **Continuous Read** is useful in testing symbol readability or reader functions. It is not recommended for normal operations.

**Definition:** In **Continuous Read**, trigger input options are disabled, the imager is always in the read cycle, and it will attempt to decode and transmit every capture. If a single symbol stays within read range for multiple read cycles, its data will be transmitted repeatedly until it leaves the read range.

The imager sends replies to serial commands that require responses when symbol data is transmitted, or read cycle timeout is enabled and a timeout occurs *and* at least one captured image has been processed. Depending on the combination of enabled symbologies, the imager may take longer than the timeout to process a captured image.

**Note:** **When to Output** and **No Read** options have no affect on **Continuous Read**.

**Serial Cmd:** <**K200,0**>

## Continuous Read 1 Output

**Usage:** **Continuous Read 1 Output** can be useful in applications where it is not feasible to use a trigger and all succeeding symbols contain different information. It is also effective in applications where the objects are presented by hand.

**Definition:** In **Continuous Read 1 Output** the imager self-triggers whenever it decodes a new symbol or a timeout occurs.

If **End of Read Cycle** is set to **Timeout** and the symbol doesn't change, the output is repeated at the end of each timeout period. For example, if **Timeout** is set to one second, the imager sends the symbol data immediately and repeats the output at intervals of one second for as long as it continues to capture the symbol.


If **End of Read Cycle** is set to **New Trigger**, the imager will send the current symbol data immediately, *but only once*. A new symbol appearing in the imager's range will be read and sent immediately, provided it is not identical to the previous symbol.

**Serial Cmd:** <**K200,1**>

**Caution:** In automated environments, **Continuous Read 1 Output** is not recommended because there is typically no reliable way to verify that a symbol was missed.

**Note:** If **Trigger Mode** is set to **Continuous Read 1 Output**, the imager will behave as if **Number of Symbols** were set to **1**, regardless of the user-defined configuration.

## External Level

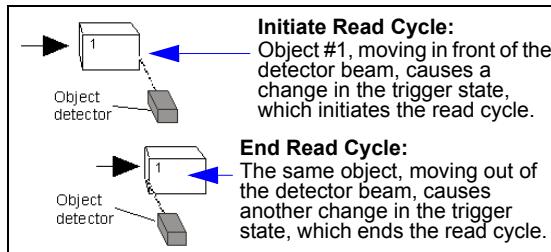


**Usage:** This mode is effective in an application where the speeds of the conveying apparatus are variable and the time the imager spends reading each object is not predictable. It also allows the user to determine if a No Read has occurred.

**Definition:** **External Level** allows the read cycle (active state) to begin when a trigger (change of state) from an external sensing device is received. The read cycle persists until the object moves out of the sensor range and the active trigger state changes again.

**Serial Cmd:** <K200,2>

**Important:** **Level** and **Edge** apply to the active logic state (**Active Open** or **Active Closed**) that exists while the object is in a read cycle, between the rising edge and the falling edge. *Rising edge* is the trigger signal associated with the appearance of an object. *Falling edge* is the trigger signal associated with the subsequent disappearance of the object. This applies both to **External Level** and **External Edge**.

## External Edge

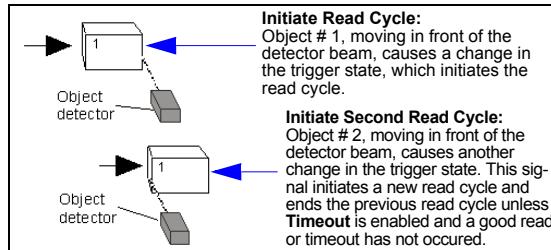

**Usage:** This mode is highly recommended in any application where conveying speed is constant, or if spacing, object size, or read cycle timeouts are consistent.

**Definition:** **External Edge**, as with Level, allows the read cycle (active state) to begin when a trigger (change of state) from an external sensing device is received. However, the passing of an object out of sensor range does not end the read cycle. The read cycle ends with a good read output, or, depending on the **End of Read Cycle** setting, a timeout or new trigger occurs.

**Serial Cmd:** <K200,3>

## **Serial Data**

*Usage:*      **Serial Data** is effective in a highly controlled environment where the host knows precisely when the object is in the field of view. It is also useful in determining if a No Read has occurred.

*Definition:*    In **Serial Data**, the imager accepts an ASCII character from the host or controlling device as a trigger to start a read cycle. A **Serial Data** trigger behaves the same as an **External Edge** trigger.  
Serial commands are entered inside angle brackets, as shown here: <**t**>.

*Serial Cmd:* <**K200,4**>

**Note:** In **Serial Data**, sending a non-delimited start serial character will start a read cycle; however, a non-delimited stop serial character has no effect.

## **Serial Data and Edge**

*Usage:*      **Serial Data or External Edge** is seldom used but can be useful in an application that primarily uses an external sensing device but occasionally needs to be triggered manually.

*Definition:*    In this mode the imager accepts either a serial ASCII character or an external trigger pulse to start the read cycle.

*Serial Cmd:* <**K200,5**>

**Note:** In **Serial Data**, sending a non-delimited start serial character will start a read cycle; however, a non-delimited stop serial character has no effect.

## **Leading Edge Trigger Filter**

- Usage:** Used to ignore spurious triggers when **Trigger Mode** is set to External Edge or External Level.
- Definition:** To consider a change in state on the trigger input, the level must be stable for the trigger filter duration. In an edge mode, the imager will trigger a read cycle if the active state has been uninterrupted for the entire trigger filter duration. In a level mode, the leading edge is filtered such that on an active edge, the state must be held interrupted for the trigger filter duration before a trigger will occur.
- Serial Cmd:** <**K200,trigger mode,leading edge trigger filter,trailing edge trigger filter**>
- Default:** **313** (~10 ms)
- Options:** 1 to 65535 (Trigger filter range: 32.0  $\mu$ s to 2.10 seconds)

## **Trailing Edge Trigger Filter**

- Usage:** Used to ignore spurious triggers when **Trigger Mode** is set to External Edge or External Level.
- Definition:** To consider a change in state on the trigger input, the level must be stable for the trigger filter duration. In an edge mode, the imager will trigger a read cycle if the active state has been uninterrupted for the entire trigger filter duration. In a level mode, the trailing edge is filtered such that on the falling edge, the state must be held for the trigger filter duration before the trigger will be deemed inactive.
- Serial Cmd:** <**K200,trigger mode,leading edge trigger filter,trailing edge trigger filter**>
- Default:** **313** (~10 ms)
- Options:** 1 to 65535 (Trigger filter range: 32.0  $\mu$ s to 2.10 seconds)

## External Trigger Polarity

*Usage:* Allows users to select the trigger polarity that will be used in their application.

*Definition:* Determines the active state of the trigger signal applied to the cable input of the imager.

*Serial Cmd:* <**K202,active state**>

*Default:* **Positive**

*Options:* 0 = Negative                    **1 = Positive**

## **Serial Trigger**

- Usage:** Allows the user to define the trigger character and delimiters that start and stop the read cycle.
- Definition:** A serial trigger is considered an online host command and requires the same command format as all host commands. It must be entered within angle bracket delimiters < > or, in the case of non-delimited triggers, it must define individual start and stop characters.

### ***Serial Trigger Character (Delimited)***

- Usage:** Allows the user to define the trigger character that initiates the read cycle.
- Definition:** A single ASCII host serial trigger character that initiates the read cycle.  
A delimited trigger character is one that either starts or ends the read cycle and is enclosed by delimiters such as < >.
- Serial Cmd:** <**K201,serial trigger character**>
- Default:** **Space bar**
- Options:** Any single ASCII character, including control characters, except NUL (00 in hex), an existing host command character, or an on-line protocol character. Control characters entered on the command line are displayed in the menu as mnemonic characters.

**Note:** **Serial Data** or **Serial Data or External Edge** triggering mode must be enabled for **Serial Trigger Character** to take effect.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K201h,3C**>

For >: <**K201h,3E**>

For , : <**K201h,2C**>

# Start Trigger Character (Non-Delimited)

- Usage:** Useful in applications where different characters are required to start a read cycle.
- Definition:** A single ASCII host serial trigger character that starts the read cycle and is not enclosed by delimiters such as < and >. Non-delimited **Start** characters can be defined and will function according to the trigger event.
- When defining **Start** trigger characters, the following rules apply:
- In **External Edge** the imager looks only for the **Start** trigger character and ignores any **Stop** trigger character that may be defined.
  - In **External Level** the **Start** trigger character begins the read cycle and the **Stop** trigger character ends it. Note that even after a symbol has been decoded and the symbol data transmitted, the imager remains in **External Level** trigger read cycle until a **Stop** character is received.
  - In **Serial Data or External Edge** trigger mode, either a **Start** trigger character or a hardware trigger can start an edge trigger read cycle.
- Serial Cmd:** <**K229,start character**>
- Default:** **NUL** (00 in hex) (disabled)
- Options:** Two hex digits representing any ASCII character except **XON** and **XOFF**.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K229h,3C**>

For >: <**K229h,3E**>

For , : <**K229h,2C**>

## Stop Trigger Character (Non-Delimited)

**Usage:** Useful in applications where different characters are required to end a read cycle.

**Definition:** A single ASCII host serial trigger character that ends the read cycle and is not enclosed by delimiters such as < and >.

Non-delimited **Stop** characters can be defined and will function according to the trigger event.

When defining **Stop** trigger characters, the following rules apply:

- In **External Edge** the imager looks only for the **Start** trigger character and ignores any **Stop** trigger character that may be defined.
- In **External Level** the **Start** trigger character begins the read cycle and the **Stop** trigger character ends it. Note that even after a symbol has been decoded and the symbol data transmitted, the imager remains in **External Level** trigger read cycle until a **Stop** character is received.
- In **Serial Data or External Edge** trigger mode, either a **Start** trigger character or a hardware trigger can start an edge trigger read cycle.

**Serial Cmd:** <**K230,stop character**>

**Default:** **NUL** (00 in hex) (disabled)

**Options:** Two hex digits representing an ASCII character.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K230h,3C**>

For >: <**K230h,3E**>

For , : <**K230h,2C**>

# End of Read Cycle

**Definition:** The read cycle is the time during which the imager will attempt to capture and decode a symbol. A read cycle can be ended by a timeout, a new trigger, or by the last frame in a capture sequence or a combination of the above.

## End of Read Cycle Mode

**Note:** When operating in Continuous Read or Continuous Read 1 Output, the imager is always in the read cycle.

**Serial Cmd:** <**K220,end of read cycle,read cycle timeout>**

**Default:** **Timeout**

**Options:** **0 = Timeout**

1 = New Trigger

2 = Timeout or new Trigger

3 = Last Frame

4 = Last Frame or New Trigger

## Timeout

**Usage:** Typically used with **Serial Data or External Edge** and **Continuous Read 1 Output**.

It is effective in highly controlled applications when the maximum length of time between objects can be predicted. It assures that a read cycle ends before the next symbol appears, giving the system extra time to decode and transmit the data to the host.

**Definition:** **Timeout** ends the read cycle, causing the reader to stop reading symbols and send the symbol data or No Read message when the time set in **Timeout** elapses (times out), *if When to Output* is set to **End of Read Cycle**.

If in **Continuous Read 1 Output**, a timeout initiates a new read cycle and allows the same symbol to be read again.

With **External Edge, Serial Data, or Serial Data or External Edge** enabled, a timeout ends the read cycle and symbol data or a No Read message is sent to the host.

With **External Level** enabled, the read cycle does not end until the falling edge trigger occurs or a timeout occurs. The next read cycle does not begin until the next rising edge trigger.

## New Trigger

- Usage:** **New Trigger** is an effective way to end a read cycle when objects move past the reader at irregular intervals (not timing-dependent).
- Definition:** **New Trigger** ends the current read cycle and initiates a new one when a new trigger occurs. **New Trigger** refers only to a rising edge trigger. With **External Edge**, **Serial Data**, or **Serial Data or External Edge** enabled, an edge or serial trigger ends a read cycle and initiates the next read cycle. In the case of **External Level**, a falling edge trigger ends the read cycle but the next read cycle does not begin until the occurrence of the next rising edge trigger.

## Timeout or New Trigger

- Usage:** Useful in applications that require an alternative way to end the read cycle. For example, if an assembly line should stop completely or the intervals between objects are highly irregular.
- Definition:** **Timeout or New Trigger** is identical to **Timeout** except that a timeout or a new trigger (whichever occurs first) ends the read cycle.

## Last Frame

- Usage:** Useful in applications in which the number of captures needed can be defined but the timeout duration varies.
- Definition:** **Last Frame** only applies to **Rapid Capture Mode**.

## Last Frame or New Trigger

- Usage:** Useful in applications in which line speeds are irregular and a new labelled object could appear before the last frame in a **Rapid Capture** sequence.
- Definition:** **Last Frame or New Trigger** is identical to **New Trigger** except that a new trigger or last frame (whichever occurs first) ends the read cycle.

## Read Cycle Timeout

- Definition:** **Read Cycle Timeout** is the duration of the read cycle.
- Serial Cmd:** <**K220**,*end of read cycle,read cycle timeout*>
- Default:** **200** (x10 ms)
- Options:** 1 to 65535

# Capture Mode

**Definition:** **Capture Mode** relates to the way that images are captured and processed.

**Serial Cmd:** <K241,capture mode,number of captures,rapid capture mode>

**Default:** **Continuous Capture**

**Options:** 0 = Rapid Capture      **1 = Continuous Capture**


## Rapid Capture

**Definition:** In a rapid capture mode, one or multiple captures (as many as 32) can be taken at an interval specified by the time-between-captures parameter. In this mode, the only limiting time factor is integration and transfer timing.

## Continuous Capture

**Usage:** **Continuous Capture** is useful in applications with slower line speeds or where symbol spacing may be random or not time-dependent.

**Definition:** In **Continuous Capture Mode**, image captures are taken throughout the read cycle in a multi-buffered format (see diagram below). The imager begins processing the first captured image at the same time that it captures the second image. Captures will continue occurring throughout the read cycle until an end condition occurs, such as a timeout, a new trigger, the last frame in a capture sequence, or a combination of the above.

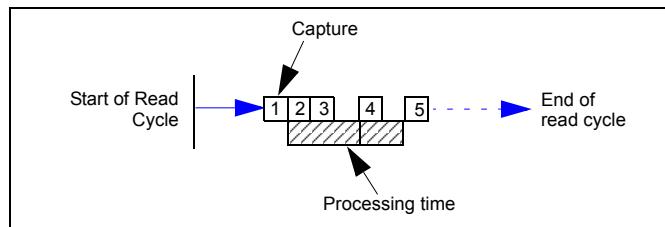

## Number of Captures

**Usage:** Number of Captures is used to specify the number of captures to be processed in **Rapid Capture Mode**.

**Definition:** Sets the total number of captures that are processed during a read cycle in **Rapid Capture Mode**. This feature is used in conjunction with **Capture Timing** parameters to specify the capture sequence of a rapid capture read cycle.

**Serial Cmd:** <**K241,capture mode,number of captures,rapid capture mode**>

**Default:** **1**

**Options:** **1** to 64

**Note:** The range of maximum number of captures is dynamic. This range is dependent on the maximum image size in the system. A full-size image (1280 x 1024) reduces the maximum number of images to **6**. The smaller the image size, the greater the maximum number of captures. Once the image size is reduced to small enough dimensions, the maximum number of captures will be capped at **64**.

If a user enters a maximum capture value greater than that allowed, the value will be limited to the number of system images. This command also affects the number of stored images allowed in the system. If the maximum number of captures is selected, the number of stored images allowed will be **0**.

## Rapid Capture Mode

**Definition:** In **Rapid Capture Mode**, one or multiple captures (as many as 32) can be taken at an interval specified by the time-between-captures parameter. In this mode, the only limiting time factor is integration and transfer timing.

**Serial Cmd:** <**K241,capture mode,number of captures,rapid capture mode**>

**Default:** **Timed Capture**


**Options:** **0 = Timed Capture**      **1 = Triggered Capture**

## Timed Capture

**Usage:** **Timed Rapid Capture** is useful in fast-moving applications in which symbols are only in the field of view for a short time and precise timing is required.

**Definition:** In **Timed Rapid Capture**, decoding occurs independent of and simultaneous with capturing, thus allowing precise timing or no delay at all between captures.

Also, consecutive captures are regarded as the same symbol if the output data is the same.

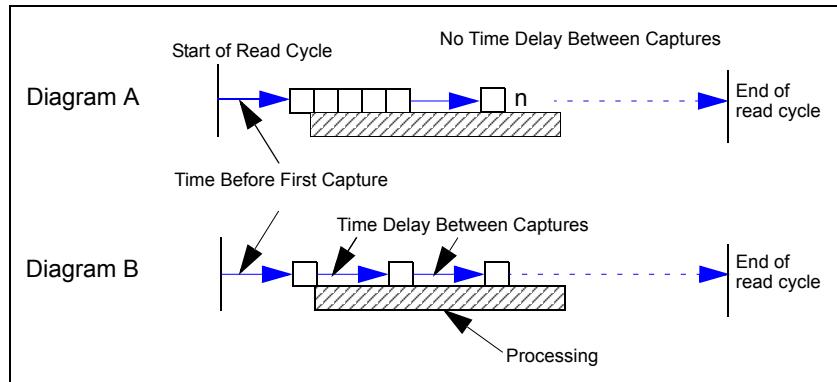


## Triggered Capture

**Usage:** Useful in applications where each decode must be treated as a discrete event, regardless of symbol data.

**Definition:** The first trigger event starts the read cycle, and subsequent triggers will continue until the predetermined **Number of Captures** is met, or until the predetermined **End of Read Cycle** condition is met-- whichever occurs first.

**Note:** If **End of Read Cycle** is set for **New Trigger** and the read cycle qualifications have not been met, the read cycle will only end *once it receives the first trigger after reaching the predetermined Number of Captures setting*.

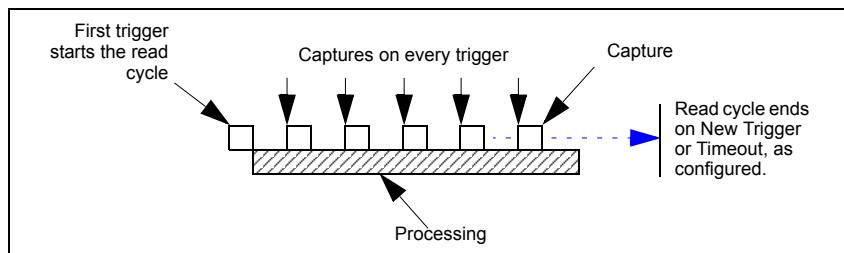

# Capture Timing

**Note:** Capture Timing applies only to **Rapid Capture Mode**.

## Time Before First Capture

**Usage:** In almost any moving line application, a time delay is needed to ensure that a symbol will be in the imager's field of view at the beginning of the capture sequence.


**Definition:** **Time Before First Capture** in a moving line application is the time between an external trigger event and the occurrence of the first capture.

**Serial Cmd:** <K242,**time before 1st capture**,time between capture 1 and capture 2,.....,time between capture 7 and capture 8>

**Default:**

**0**

**Options:** 0 to 65535 (2.097 seconds, in 32 µS increments)

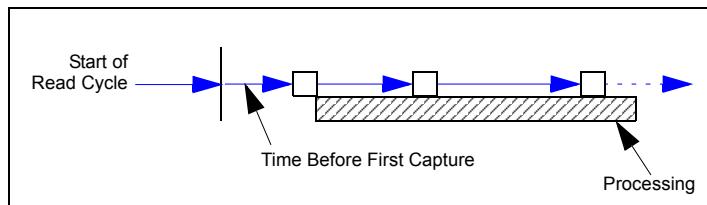

## Time Between Captures

**Usage:** This is useful in applications where more than one symbol can appear during a single read cycle (multisymbol), or where line speeds are slow enough that captured frames might overlap or miss a symbol.

**Definition:** A time delay can be inserted between individual frame captures in **Rapid Capture Mode**.

**Serial Cmd:** <**K242**,time before 1st capture,**time between captures** [time 1,time 2,...time7]

Entering 0s will result in no time between captures.

Entering a different value in each field will vary the time delays accordingly.


**Note:** You must enter time values along with comma separators for each field you want to change. If you omit fields, or enter only commas, the fields will remain as previously set.

**Important:** If the imager is configured to capture more than 8 images, the last (or 8th) delay value will be repeated for the remaining captures.

**Default:** **0**

**Options:** 0 to 65535 (2.097 seconds, in 32 µS increments)

**Note:** Number of Captures and number of frame delays (**Time Between Captures**) must be the same.

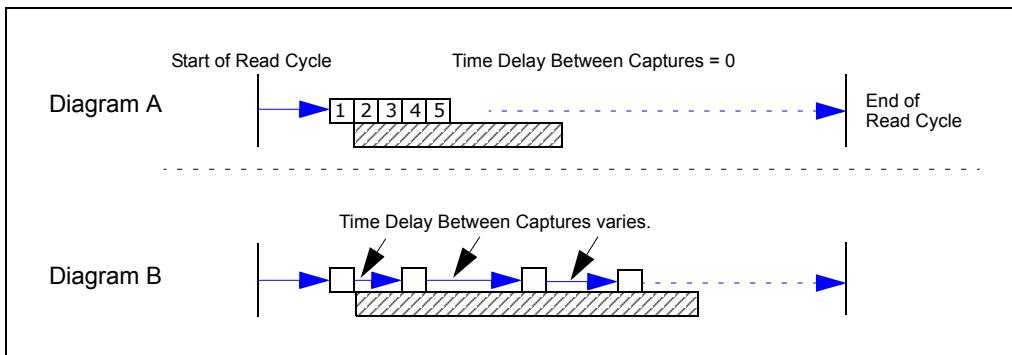

# Image Processing Timeout

**Usage:** Useful in higher speed applications where image processing time is long enough that not all captures have an opportunity to be processed.

**Definition:** Specifies the maximum amount of time to process a captured image. When the timeout expires, the image processing is aborted. This timeout works in both **Rapid Capture** and **Continuous Capture** modes, as well as with the Configuration Database.

**Serial Cmd:** **<K245,image processing timeout>**

**Default:** **5000 ms** (5 sec.)

**Options:** 1 to 65535 (in 1 ms increments)

## Notes:

- The timeout period does not include capture time.
- If a timeout occurs during processing and no symbols in the field of view have been decoded, the image will be recorded as a No Read. For this reason, a longer timeout should be tried to ensure that the symbol is decoded successfully.

# Image Storage

## Image Storage Type

**Definition:** Allows the user to store images from separate read cycles and to retrieve them later. The number of available slots for storage depends on the mode of operation. If the imager is in **Rapid Capture Mode**, the number of images that can be stored is equivalent to the maximum number of the rapid count (the current rapid count setting). If the imager is in **Continuous Capture Mode**, a number of images equivalent to the maximum number of the rapid count minus 3.

**Serial Cmd:** <**K244,image storage type,image storage mode**>

**Default:** **Disabled/Clear**

**Options:** **0 = Disabled/Clear**                    1 = Store on No Read

### Disabled/Clear

Upon selection of this option, all saved images will be cleared and the imager will not store images for later viewing.

### Store on No Read

This option will cause the imager to store an image upon exiting the read cycle for retrieval at a later time. If multiple captures are present during the duration of a read cycle, the stored image will be the last image processed for that read cycle. This image is stored in RAM and can be retrieved as long as power is cycled to the imager, and as long as the imager has not been reset via a reset/save sequence. Other commands that can initialize storage in RAM are ones that change capture modes or put the imager in a test capture mode.

## Image Storage Mode

**Serial Cmd:** <**K244,image storage type,image storage mode**>

**Default:** **First Mode**

**Options:** **0 = First Mode**                    1 = Last Mode

### First Mode

This mode allows the imager to store images until the available image memory has been filled. At that point the imager will stop saving additional images. In this mode, you will always have the first image captured, because the saving process stops once memory has been filled.

### Last Mode

In this mode, image storage continues after available memory limits are reached. The oldest image in memory is overwritten, so you will always have the most recent stored image.

## ***Image Storage Example***

The following example assumes that the imager is in a rapid capture mode of 3 captures.

<b><i>Number of Symbols:</i></b>	1
<b><i>Frame # 1:</i></b>	No Read
<b><i>Frame # 2:</i></b>	No Read
<b><i>Frame # 3:</i></b>	Good Read, Symbol # 1
<b><i>Read Cycle Result:</i></b>	Good Read
<b><i>Stored Frame:</i></b>	<b>None</b>
<b><i>Number of Symbols:</i></b>	1
<b><i>Frame # 1:</i></b>	No Read
<b><i>Frame # 2:</i></b>	No Read
<b><i>Frame # 3:</i></b>	No Read
<b><i>Read Cycle Result:</i></b>	No Read
<b><i>Stored Frame:</i></b>	<b>Frame # 3</b>
<b><i>Number of Symbols:</i></b>	2
<b><i>Frame # 1:</i></b>	No Read
<b><i>Frame # 2:</i></b>	No Read
<b><i>Frame # 3:</i></b>	Good Read, Symbol # 1
<b><i>Read Cycle Result:</i></b>	No Read
<b><i>Stored Frame:</i></b>	<b>Frame # 2</b>

## **Minimum Good Reads**

*Definition:* This value specifies the number of times a symbol needs to be read to qualify as a good read.

*Serial Cmd:* <**K221,minimum good reads>**


*Default:* **1**

*Options:* 1 to 255


# Setting Up the Imager for EZ Trax

If you are using **EZ Trax** software, it is important to set up the MS-4Xi correctly before beginning.

Click the **Read Cycle** tab to display the Read Cycle tree control.

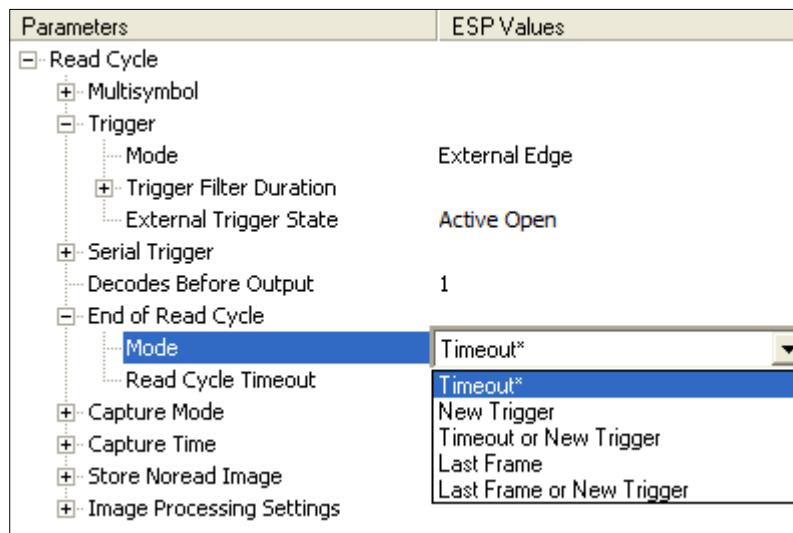

Set **Trigger Mode**, <K200>, to **External Edge**.

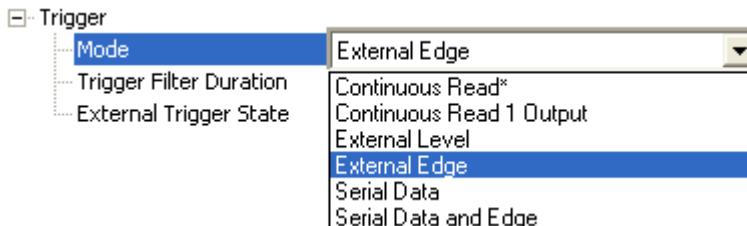

Set **Capture Mode**, <K241>, to **Rapid Capture**.



Once these Read Cycle parameters are set, you will be ready to connect to **EZ Trax**. For a description of how to configure **EZ Trax** using serial commands or **ESP**, see [Configuring EZ Trax Output in I/O Parameters](#).

For more detailed information about using **EZ Trax**, refer to the Help menu in EZ Trax software, or the *EZ Trax Quick Start Guide*, available on the Microscan Tools Drive.

---

*Setting Up the Imager for EZ Trax*


# 6 Symbologies

## Contents

Symbologies by ESP .....	6-2
Symbologies Serial Commands .....	6-3
Data Matrix .....	6-4
Aztec Code .....	6-6
QR Code .....	6-7
Micro QR Code .....	6-8
Code 39 .....	6-9
Code 128 .....	6-12
BC412 .....	6-15
Interleaved 2 of 5 .....	6-16
Code 93 .....	6-19
Codabar .....	6-20
UPC/EAN .....	6-23
Pharmacode .....	6-27
Postal Symbologies .....	6-29
GS1 DataBar .....	6-34
PDF417 .....	6-36
MicroPDF417 .....	6-37
Composite .....	6-38
Narrow Margins/Symbology Identifier .....	6-39
Background Color .....	6-41

This section describes the various symbol types that can be read and decoded by the MS-4Xi.

# Symbologies by ESP

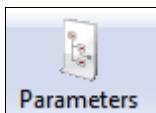

Click the **Parameters** button and then the **Symbologies** tab.

To change a setting, **double-click** the setting and use your cursor to scroll through the options.

Parameters	ESP Values
2D Symbologies	
Data Matrix	
ECC 200 Status	Enabled
ECC 000 Status	Disabled
ECC 050 Status	Disabled
ECC 080 Status	Disabled
ECC 100 Status	Disabled
ECC 140 Status	Disabled
ECC 120 Status	Disabled
ECC 130 Status	Disabled
QR Code	Disabled*
1D Symbologies	Disabled*
Stacked Symbologies	Enabled
Composite	Disabled
Narrow Margin Status	2D Enhanced
Symbology Identifier	Disabled
Background Color	Both

To open nested options, **single-click** the +.

# Symbolologies Serial Commands

Narrow Margins/Symbology ID	<K450,narrow margin status,symbology identifier status>
Background Color	<K451,background color>
Composite	<K453,symbology status,separator status,separator>
Aztec Code	<K458,status>
Micro QR Code	<K459,status>
Postal Symbolologies	<K460,postal symbology type,POSTNET status,PLANET status,USPS4CB status,POSTNET allow B and B' fields,Australia Post allow 0 FCC>
Code 39	<K470,status,check character status,check character output status,large intercharacter gap,fixed symbol length status,fixed symbol length,full ASCII set>
Codabar	<K471,status,start/stop match,start/stop output,large intercharacter gap,fixed symbol length status,symbol length,check character type,check character output>
Interleaved 2 of 5	<K472,status,check character status,check character output status,symbol length #1, symbol length #2, guard bar status,range mode status>
UPC/EAN	<K473,UPC status,EAN status, supplemental status,separator status,separator character, supplemental type,format UPC-E as UPC-A>
Code 128/EAN 128	<K474,status,fixed symbol length status,fixed symbol length,EAN 128 status,output format,application record separator status,application record separator character,application record brackets,application record padding>
Code 93	<K475,status,fixed symbol length status,symbol length>
PDF417	<K476,status,[unused],fixed symbol length status,fixed symbol length,[unused],codeword collection>
Pharmacode	<K477,status,fixed bar count status,fixed bar count,minimum bar count,bar width mode,direction,fixed threshold value>
Data Matrix	<K479,ECC 200 status, ECC 000 status,ECC 050 status, ECC 080 status,ECC 100 status,ECC 140 status,ECC 120 status,ECC 130 status>
QR Code	<K480,status>
BC412	<K481,status,check character output,fixed symbol length status,fixed symbol length>
DataBar-14 (RSS-14)	<K482,status>
DataBar Limited (RSS Limited)	<K483,status>
DataBar Expanded (RSS Expanded)	<K484,status,fixed symbol length status,fixed symbol length>
MicroPDF417	<K485,status,[unused],fixed symbol length status,fixed symbol length>

## Data Matrix

**Usage:** Very useful where information needs to be packed into a small area, and/or where symbols need to be applied directly to the substrate with laser etching, chemical etching, dot peen, or other methods.

**Definition:** Data Matrix is a type of Matrix symbology and has subsets ECC 000 - ECC 200. ECC 200 symbols have an even number of rows and an even number of columns. Most of the symbols are square with sizes from 10x10 to 144x144. Some symbols, however, are rectangular, with sizes from 8x18 to 16x48. All ECC 200 symbols can be recognized by the upper right corner module being light (binary 0) instead of dark.

## ECC 200

**Definition:** When enabled, will decode ECC 200 Data Matrix symbols.

**Serial Cmd:** <**K479,ECC 200 status,ECC 000 status,ECC 050 status,ECC 080 status,ECC 100 status,ECC 140 status,ECC 120 status,ECC 130 status**>

**Default:** **Enabled**

**Note:** This is the only symbol type enabled by default.

**Options:** 0 = Disabled      **1 = Enabled**

## ECC 000

**Definition:** When enabled, will decode ECC 000 symbols.

**Serial Cmd:** <**K479,ECC 200 status,ECC 000 status,ECC 050 status,ECC 080 status,ECC 100 status,ECC 140 status,ECC 120 status,ECC 130 status**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## ECC 050

**Definition:** When enabled, will decode ECC 050 symbols.

**Serial Cmd:** <**K479,ECC 200 status,ECC 000 status,ECC 050 status,ECC 080 status,ECC 100 status,ECC 140 status,ECC 120 status,ECC 130 status**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## ECC 080

**Definition:** When enabled, will decode ECC 080 symbols.

**Serial Cmd:** <**K479,ECC 200 status,ECC 000 status,ECC 050 status,ECC 080 status,ECC 100 status,ECC 140 status,ECC 120 status,ECC 130 status>**

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## ECC 100

**Definition:** When enabled, will decode ECC 100 symbols.

**Serial Cmd:** <**K479,ECC 200 status,ECC 000 status,ECC 050 status,ECC 080 status,ECC 100 status,ECC 140 status,ECC 120 status,ECC 130 status>**

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## ECC 140

**Definition:** When enabled, will decode ECC 140 symbols.

**Serial Cmd:** <**K479,ECC 200 status,ECC 000 status,ECC 050 status,ECC 080 status,ECC 100 status,ECC 140 status,ECC 120 status,ECC 130 status>**

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## ECC 120

**Definition:** When enabled, will decode ECC 120 symbols.

**Serial Cmd:** <**K479,ECC 200 status,ECC 000 status,ECC 050 status,ECC 080 status,ECC 100 status,ECC 140 status,ECC 120 status,ECC 130 status>**

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## ECC 130

**Definition:** When enabled, will decode ECC 130 symbols.

**Serial Cmd:** <**K479,ECC 200 status,ECC 000 status,ECC 050 status,ECC 080 status,ECC 100 status,ECC 140 status,ECC 120 status,ECC 130 status>**

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## Aztec Code

**Usage:** Used in document imaging, railway ticket validation, and some postal applications.

**Definition:** A 2D matrix symbology built on a square grid with a square “bull’s-eye” pattern at the center. **Aztec Code** can encode up to 3,832 numeric or 3,067 alphabetical characters, or 1,914 bytes of data.

The level of Reed-Solomon error correction used with Aztec Code is configurable, from 5% to 95% of the total data region. The recommended error correction level is 23% of symbol capacity plus codewords.

**Serial Cmd:** <**K458,status**>

**Default:** **Disabled**

**Options:** **0 = Disabled**                    **1 = Enabled**

## QR Code

- Usage:* Widely implemented in the automotive industry in Japan and throughout their worldwide supply chain.
- Definition:* QR Code is capable of handling numeric, alphanumeric, and byte data as well as kanji and kana characters. Up to 7,366 characters (numeric data) can be encoded using this symbol. Therefore, less space is required to encode the same amount of data in a QR Code symbol than in a conventional symbol, lowering the cost of labelling.  
Three Position Detection Patterns in the symbol make omnidirectional, ultra-fast reading possible.  
QR Code has error protection capability. Data can often be restored even if a part of the symbol has become dirty or damaged.
- Serial Cmd:* <**K480,status**>
- Default:* **Disabled**
- Options:* **0 = Disabled**                    1 = Enabled

## **Micro QR Code**

**Usage:** Used in various applications that require higher data density than that provided by standard QR Code. Some application examples are automotive inventory, vehicle ID, and mobile phone URL encodation.

**Definition:** **Micro QR Code** is a 2D matrix symbology that comes in 4 different symbol sizes, the largest capable of encoding 35 numeric characters.

**Serial Cmd:** <**K459,status**>

**Default:** **Disabled**

**Options:** **0 = Disabled**                    **1 = Enabled**

## Code 39

<b>Usage:</b>	<b>Code 39</b> is considered the standard for non-retail 1D symbology.
<b>Definition:</b>	An alphanumeric symbology with unique start/stop code patterns, composed of 9 black and white elements per character, of which 3 are wide.
<b>Serial Cmd:</b>	<b>&lt;K470,status,check character status,check character output status,large intercharacter gap,fixed symbol length status,fixed symbol length,full ASCII set&gt;</b>
<b>Default:</b>	<b>Enabled</b>
<b>Options:</b>	<b>0 = Disabled</b> <b>1 = Enabled</b>

### Check Character Status (Code 39)

<b>Serial Cmd:</b>	<b>&lt;K470,status,<b>check character status</b>,check character output status,large intercharacter gap,fixed symbol length status,fixed symbol length,full ASCII set&gt;</b>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> <b>1 = Enabled</b>

### Check Character Output Status (Code 39)

<b>Usage:</b>	<b>Check Character Output Status</b> , added to the symbol, provides additional data security.
<b>Definition:</b>	When enabled, the check character character is read and compared along with the symbol data. When disabled, symbol data is sent without the check character.
<b>Note:</b>	With <b>Check Character Output Status</b> and an <b>External</b> or <b>Serial</b> trigger option enabled, an invalid check character calculation will cause a No Read message to be transmitted at the end of the read cycle.
<b>Serial Cmd:</b>	<b>&lt;K470,status,check character status,<b>check character output status</b>,large intercharacter gap,fixed symbol length status,fixed symbol length,full ASCII set&gt;</b>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> <b>1 = Enabled</b>

## Large Intercharacter Gap (Code 39)

<b>Usage:</b>	Large Intercharacter Gap is helpful for reading symbols that are printed out of specification.
	<b>Important:</b> Do not use Large Intercharacter Gap with Narrow Margins enabled, because a large intercharacter gap (over 3x) could cause a narrow margin (5x) to be interpreted as an intercharacter gap.
<b>Definition:</b>	When enabled, the imager can read symbols with gaps between symbol characters that exceed three times (3x) the narrow element width.
<b>Serial Cmd:</b>	< <b>K470</b> ,status,check character status,check character output status, <b>large intercharacter gap</b> ,fixed symbol length status,fixed symbol length,full ASCII set>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

## Fixed Symbol Length Status (Code 39)

<b>Definition:</b>	When enabled, the imager will check the symbol length against the symbol length field. If disabled, any length will be considered valid.
<b>Serial Cmd:</b>	< <b>K470</b> ,status,check character status,check character output status, <b>large intercharacter gap</b> , <b>fixed symbol length status</b> ,fixed symbol length,full ASCII set>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

## Fixed Symbol Length (Code 39)

<b>Usage:</b>	<b>Fixed Symbol Length</b> helps prevent truncations and increases data integrity by ensuring that only one symbol length will be accepted.
<b>Definition:</b>	Specifies the exact number of characters that the imager will recognize (this does not include start and stop and check character characters). The imager ignores any symbology that does not match the specified length.
<b>Serial Cmd:</b>	< <b>K470</b> ,status,check character status,check character output status, <b>large intercharacter gap</b> ,fixed symbol length status, <b>fixed symbol length</b> ,full ASCII set>
<b>Default:</b>	<b>10</b>
<b>Options:</b>	1 to 64

## Full ASCII Set (Code 39)

- Usage:* Must be enabled when reading characters outside the standard character set (0-9, A-Z, etc.)  
The user must know in advance whether or not to use the **Full ASCII Set** option. Since **Full ASCII Set** requires two code words to encode one character, it is less efficient.
- Definition:* Standard Code 39 encodes 43 characters; zero through nine, capital "A" through capital "Z", minus symbol, plus symbol, forward slash, space, decimal point, dollar sign, and percent symbol. When **Full ASCII Set** is enabled, the imager can read the full ASCII character set, from 0 to 255.
- Serial Cmd:* <**K470**,status,check character status,check character output status,large intercharacter gap,fixed symbol length status,fixed symbol length,**full ASCII set**>
- Default:* **Disabled**
- Options:* **0 = Disabled**      1 = Enabled

## Code 128

<b>Usage:</b>	<b>Code 128</b> is a smaller symbology useful in applications with tight spots and high security needs.
<b>Definition:</b>	A very dense alphanumeric symbology. It encodes all 128 ASCII characters, it is continuous, has variable length, and uses multiple element widths measured edge to edge.
<b>Serial Cmd:</b>	< <b>K474,status,fixed symbol length status,fixed symbol length,EAN 128 status, output format,application record separator status,application record separator character,application record brackets,application record padding</b> >
<b>Default:</b>	<b>Enabled</b>
<b>Options:</b>	0 = Disabled <b>1 = Enabled</b>

### Fixed Symbol Length Status (Code 128)

<b>Definition:</b>	When enabled, the imager will check the symbol length against the symbol length field. If disabled, any length will be considered a valid symbol.
<b>Serial Cmd:</b>	< <b>K474,status,fixed symbol length status,fixed symbol length,EAN 128 status, output format,application record separator status,application record separator character,application record brackets,application record padding</b> >
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

### Fixed Symbol Length (Code 128)

<b>Usage:</b>	<b>Fixed Symbol Length</b> helps prevent truncations and increases data integrity by ensuring that only one symbol length will be accepted.
<b>Definition:</b>	This specifies the exact number of characters that the imager will recognize (this does not include start, stop, and check character characters). The imager ignores any symbol not having the specified length.
<b>Serial Cmd:</b>	< <b>K474,status,fixed symbol length status,fixed symbol length,EAN 128 status, output format,application record separator status,application record separator character,application record brackets,application record padding</b> >
<b>Default:</b>	<b>10</b>
<b>Options:</b>	1 to 64

## EAN 128 Status (Code 128)

<b>Definition:</b>	When this field is disabled, the imager will not check any Code 128 labels for conformance to EAN requirements, or perform any special formatting. When enabled, the imager can read symbols with or without a function 1 character in the first position. If a symbol has a function 1 character in the first position, it must conform to EAN format. Symbols that conform to EAN format will also be subject to the special output formatting options available in this command.
<b>Note:</b>	Code 128 status must be enabled for EAN status to be active. If EAN status is required, the imager will only decode symbols that have a function 1 character in the first position and that conform to EAN format. All symbols read will be subject to the special output formatting options available in this command.
<b>Note:</b>	Code 128 status must be enabled for EAN status to be active.
<b>Serial Cmd:</b>	< <b>K474</b> ,status,fixed symbol length status,fixed symbol length, <b>EAN 128 status</b> ,output format,application record separator status,application record separator character,application record brackets,application record padding>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled      2 = Required

## Output Format (Code 128)

<b>Definition:</b>	In <b>Standard</b> , the imager will not apply special EAN output formatting options. In <b>Application</b> , the imager will apply the special EAN output formatting options to decoded EAN-conforming symbols.
<b>Serial Cmd:</b>	< <b>K474</b> ,status,fixed symbol length status,fixed symbol length, <b>EAN 128 status</b> , <b>output format</b> ,application record separator status,application record separator character,application record brackets,application record padding>
<b>Default:</b>	<b>Standard</b>
<b>Options:</b>	<b>0 = Standard</b> 1 = Application

## Application Record Separator Status (Code 128)

<b>Definition:</b>	When enabled, an EAN separator will be inserted into the output between fields whenever an EAN-conforming symbol is decoded and EAN output formatting applies.
<b>Serial Cmd:</b>	< <b>K474</b> ,status,fixed symbol length status,fixed symbol length, <b>EAN 128 status</b> ,output format, <b>application record separator status</b> ,application record separator character,application record brackets,application record padding>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

## Application Record Separator Character (Code 128)

**Definition:** This is an ASCII character that serves as an EAN separator in formatted EAN output.

**Serial Cmd:** <**K474**,status,fixed symbol length status,fixed symbol length,EAN 128 status, output format,application record separator status,**application record separator character**,application record brackets,application record padding>

**Default:** ,

**Options:** Any ASCII character (7 bit)

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K474h**,**3C**>

For >: <**K474h**,**3E**>

For , : <**K474h**,**2C**>

## Application Record Brackets (Code 128)

**Definition:** If an EAN-conforming symbol is decoded and EAN formatting applies, this feature places bracket characters around the application identifiers in the formatted output.

**Serial Cmd:** <**K474**,status,fixed symbol length status,fixed symbol length,EAN 128 status, output format,application record separator status,**application record separator character**,**application record brackets**,application record padding>

**Default:** **Disabled**

**Options:** 0 = **Disabled**                  1 = **Enabled**

## Application Record Padding (Code 128)

**Definition:** This feature causes the imager to pad variable-length application fields with leading zeroes. This is not done for the last field of a symbol.

**Serial Cmd:** <**K474**,status,fixed symbol length status,fixed symbol length,EAN 128 status, output format,application record separator status,**application record separator character**,**application record brackets**,**application record padding**>

**Default:** **Enabled**

**Options:** 0 = **Disabled**                  1 = **Enabled**

## BC412

<b>Usage:</b>	Widely used in semiconductor manufacturing. Particularly useful where speed, accuracy, and ease of printing are required.
<b>Definition:</b>	BC412 (Binary Code 412), a proprietary IBM symbology since 1988, is an alphanumeric symbol with a set of 35 characters, each encoded by a set of 4 bars in 12 module positions. All bars have a single width; it is the presence (1) or absence (0) of bars in each of the twelve module positions that make BC412 binary. This symbology is also bi-directional and self-clocking, with a start character and a stop character.
<b>Serial Cmd:</b>	<b>&lt;K481,status,check character output,fixed symbol length status,fixed symbol length&gt;</b>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

### Check Character Output (BC412)

<b>Usage:</b>	Check Character Output, added to the symbol, provides additional security.
<b>Definition:</b>	When enabled, the check character character is read and compared along with the symbol data. When disabled, symbol data is sent without the check character.
<b>Serial Cmd:</b>	<b>&lt;K481,status,check character output,fixed symbol length status,fixed symbol length&gt;</b>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

### Fixed Symbol Length Status (BC412)

<b>Definition:</b>	When enabled, the imager will check the symbol length against the symbol length field. If disabled, any length will be considered valid.
<b>Serial Cmd:</b>	<b>&lt;K481,status,check character output,fixed symbol length status,fixed symbol length&gt;</b>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

### Fixed Symbol Length (BC412)

<b>Definition:</b>	When enabled, the check character character is read and compared along with the symbol data. When disabled, symbol data is sent without the check character.
<b>Serial Cmd:</b>	<b>&lt;K481,status,check character output,fixed symbol length status,fixed symbol length&gt;</b>
<b>Default:</b>	<b>10</b>
<b>Options:</b>	1 to 64

## Interleaved 2 of 5

- Usage:** I-2/5 has been popular because it is the most dense symbology for printing numeric characters less than 10 characters in length; however, Microscan does not recommend this symbology for any new applications because of inherent problems such as truncation.
- Definition:** A dense, continuous, self-checking, numeric symbology. Characters are paired together so that each character has five elements, two wide and three narrow, representing numbers 0 through 9, with the bars representing the first character and the interleaved spaces representing the second character. (A check character is highly recommended).
- Important:** You must set Symbol Length in order to decode I-2/5 symbols, unless **Range Mode** is enabled.
- Serial Cmd:** <**K472,status,check character status,check character output status,symbol length #1,symbol length #2,guard bar status,range mode status**>
- Default:** **Enabled**
- Options:** 0 = Disabled                    **1 = Enabled**

### Check Character Status (Interleaved 2 of 5)

- Usage:** This option is not typically used, but it can be enabled for additional security in applications where the host requires redundant check character verification.
- Definition:** An error correcting routine in which the check character character is added.
- Serial Cmd:** <**K472,status,check character status,check character output status,symbol length #1,symbol length #2,guard bar status,range mode status**>
- Default:** **Disabled**
- Options:** **0 = Disabled**                    1 = Enabled

### Check Character Output Status (Interleaved 2 of 5)

- Definition:** When enabled, a check character character is sent along with the symbol data for added data security.
- Serial Cmd:** <**K472,status,check character status,check character output status,symbol length #1,symbol length #2,guard bar status,range mode status**>
- Default:** **Disabled**
- Options:** **0 = Disabled**                    1 = Enabled

## **Symbol Length #1 (Interleaved 2 of 5)**

- Usage:** Useful in applications where 1 2/5 symbols of a specific length are required.
- Definition:** The **Symbol Length # 1** field is one of two fields against which the decoded symbol is compared before accepting it as valid or rejecting it.
- Serial Cmd:** <**K472**,status,check character status,check character output,**symbol length #1**,symbol length #2,guard bar status,range mode status>
- Default:** **16**
- Options:** 0 to 64, even only
- Important:** If Range Mode is disabled, the length of the symbol must match either **Symbol Length # 1** or **Symbol Length # 2** to be considered a valid symbol.
- If Range Mode is enabled, **Symbol Length # 1** and **Symbol Length # 2** form a range into which the length of the symbol must fall to be considered valid.

## **Symbol Length #2 (Interleaved 2 of 5)**

- Usage:** Useful in applications where 1 2/5 symbols of a specific length are required.
- Definition:** The **Symbol Length # 2** field is one of two fields against which the decoded symbol is compared before accepting it as valid or rejecting it.
- Serial Cmd:** <**K472**,status,check character status,check character output,symbol length #1,**symbol length #2**,guard bar status,range mode status>
- Default:** **6**
- Options:** 0 to 64, even only
- Important:** If Range Mode is disabled, the length of the symbol must match either **Symbol Length # 2** or **Symbol Length # 1** to be considered a valid symbol.
- If Range Mode is enabled, **Symbol Length # 2** and **Symbol Length # 1** form a range into which the length of the symbol must fall to be considered valid.

## Guard Bar Status (Interleaved 2 of 5)

**Note:** Whenever **Guard Bar** is enabled, the presence of guard bars (also called “bearer bars”) is required for decoding to take place.

**Usage:** Useful when I-2/5 multisymbols are enabled to prevent false data output. This typically occurs with highly tilted or skewed symbols.

**Definition:** A guard bar is a heavy bar, at least twice the width of the wide bar, surrounding the printed I-2/5 symbol and helping to prevent false reads.

**Serial Cmd:** <**K472**,status,check character status,check character output,symbol length #1,symbol length #2,**guard bar status**,range mode status>

**Default:** **Disabled**

**Options:** **0 = Disabled**                   **1 = Enabled**

## Range Mode Status (Interleaved 2 of 5)

**Usage:** Useful in applications where I 2/5 symbols of a specific length are required.

**Definition:** When **Range Mode** is disabled, the imager checks the value of the symbol length against the values set in **Symbol Length # 1** and **Symbol Length # 2**. If the symbol length does not match either of the preset values, then it is rejected as invalid.

When **Range Mode** is enabled, **Symbol Length # 1** and **Symbol Length # 2** are combined to form a range of valid symbol lengths. Any symbol length that does not fall into this range is rejected as an invalid symbol. Either of the preset symbol length values in the **Symbol Length # 1** and **Symbol Length # 2** fields can form the start or end of the range.

**Serial Cmd:** <**K472**,status,check character status,check character output,symbol length #1,symbol length #2,**guard bar status**,**range mode status**>

**Default:** **Enabled**

**Options:** **0 = Disabled**                   **1 = Enabled**

## Code 93

- Usage:* Sometimes used in clinical applications.
- Definition:* Code 93 is a variable-length, continuous symbology employing four element widths. Each Code 93 character has nine modules that may be either black or white. Each character contains three bars and three spaces.
- Serial Cmd:* <**K475**,*status*,*fixed symbol length status*,*symbol length*>
- Default:* **Disabled**
- Options:* **0 = Disabled**      1 = Enabled

### **Fixed Symbol Length Status (Code 93)**

- Definition:* When disabled, the imager will accept any Code 93 symbol provided it doesn't exceed the system's maximum capabilities.  
When enabled, the imager will reject any Code 93 symbol that doesn't match the fixed symbol length.
- Serial Cmd:* <**K475**,*status*,**fixed symbol length status**,*symbol length*>
- Default:* **Disabled**
- Options:* **0 = Disabled**      1 = Enabled

### **Symbol Length (Code 93)**

- Definition:* This is the symbol length value against which all Code 93 symbols will be compared.
- Serial Cmd:* <**K475**,*status*,*fixed symbol length status*,**symbol length**>
- Default:* **10**
- Options:* 1 to 64

## Codabar

**Usage:** Used in photo-finishing and library applications. Previously used in medical applications, but not typically used in newer medical applications.

**Definition:** Codabar is a 16-bit character set (0 through 9, and the characters \$, :, /, ., +, and -) with start/stop codes and at least two distinctly different bar widths.

**Serial Cmd:** <**K471**,status,*start/stop match,start/stop output,large intercharacter gap,fixed symbol length status,symbol length,check character type,check character output*>

**Default:** **Disabled**

**Options:** **0 = Disabled**                    **1 = Enabled**

### Start/Stop Match (Codabar)

**Definition:** When disabled, the imager will decode Codabar symbols whether or not the start and stop characters are the same.  
When enabled, the imager will not decode Codabar symbols unless the start and stop characters are the same.

**Serial Cmd:** <**K471**,status,**start/stop match**,*start/stop output,large intercharacter gap,fixed symbol length status,symbol length,check character type,check character output*>

**Default:** **Enabled**

**Options:** **0 = Disabled**                    **1 = Enabled**

### Start/Stop Output (Codabar)

**Definition:** When disabled, the start and stop characters will *not* be present in the data output of the decoded symbol.  
When enabled, the start and stop characters *will* be present in the data output of the decoded symbol.

**Note:** Because the start and stop characters are included as part of the data, the characters must be included as part of the length in a fixed length mode of operation.

**Serial Cmd:** <**K471**,status,*start/stop match,start/stop output,large intercharacter gap,fixed symbol length status,symbol length,check character type,check character output*>

**Default:** **Enabled**

**Options:** **0 = Disabled**                    **1 = Enabled**

## **Large Intercharacter Gap (Codabar)**

- Definition:** When disabled, the spaces between characters, or the “intercharacter gap”, are ignored during the decode process.
- Note:** If the intercharacter space is large enough to be considered a margin, the symbol will not decode, regardless of this parameter’s setting.
- Serial Cmd:** <**K471**,status,start/stop match,start/stop output,**large intercharacter gap**,fixed symbol length status,symbol length,check character type,check character output>
- Default:** **Disabled**
- Options:** **0 = Disabled**                    1 = Enabled

## **Fixed Symbol Length Status (Codabar)**

- Definition:** When disabled, the imager will accept any Codabar symbol provided it doesn’t exceed the system’s maximum capabilities.
- When enabled, the imager will reject any Codabar symbol that doesn’t match the fixed length.
- Serial Cmd:** <**K471**,status,start/stop match,start/stop output,**large intercharacter gap**,**fixed symbol length status**,symbol length,check character type,check character output>
- Default:** **Disabled**
- Options:** **0 = Disabled**                    1 = Enabled

## **Symbol Length (Codabar)**

- Definition:** This is the value against which all Codabar symbol lengths will be compared.
- Serial Cmd:** <**K471**,status,start/stop match,start/stop output,**large intercharacter gap**,**fixed symbol length status**,**symbol length**,check character type,check character output>
- Default:** **10**
- Options:** 1 to 64

## **Check Character Type (Codabar)**

**Definition:** When disabled, the imager will not perform any character checking calculations on decoded Codabar symbols.

When set to **Mod 16**, the imager will perform a modulus 16 check character calculation on the symbol. If the symbol does not pass this calculation, it will not be decoded.

When set to **NW7**, The imager will perform an NW7 modulus 11 check character calculation on the symbol. If the symbol does not pass this calculation, it will not be decoded.

When set to **Both**, the imager will perform both the Mod 16 and NW7 modulus 11 check character calculations on the symbol. If the symbol does not pass either calculation, it will not be decoded.

Serial Cmd: <**K471**,status,start/stop match,start/stop output,large intercharacter gap,fixed symbol length status,symbol length,**check character type**,check character output>

*Default:* **Disabled**

**Options:**    **0 = Disabled**                  1 = Mod 16                  2 = NW7 (Mod 11)  
                  3 = Mod 16 and NW7

## ***Check Character Output (Codabar)***

**Definition:** When this field is disabled and a check character calculation is enabled, the imager will strip the verified check character from the symbol data output. This condition must be accounted for if a fixed length is also being used.

When enabled, the imager will output the check character as part of the symbol data. This condition must be accounted for if a fixed length is also being used.

Serial Cmd: <**K471**,status,start/stop match,start/stop output,large intercharacter gap,fixed symbol length status,symbol length,check character type,**check character output**>

*Default:* **Disabled**

Options:      0 = Disabled      1 = Enabled

## UPC/EAN

<b>Usage:</b>	Used primarily in point-of-sale applications in the retail industry. It is commonly used with Microscan readers in applications in combination with <b>Matchcode</b> when there is a need to verify that the right product is being placed in the right packaging.
<b>Definition:</b>	<b>UPC</b> (Universal Product Code) is a fixed length, numeric, continuous symbology. UPC can have two- or five-digit supplemental bar code data following the normal code. The UPC Version A (UPC, A) symbol is used to encode a 12 digit number. The first digit is the number system character, the next five are the manufacturer number, the next five are the product number, and the last digit is the checksum character. When enabled, the imager will read UPC Version A and UPC Version E only.
<b>Serial Cmd:</b>	< <b>K473,UPC status,EAN status,supplements status,separator status,separator character,supplemental type,format UPC-E as UPC-A</b> >
<b>Default:</b>	<b>Enabled</b>
<b>Options:</b>	0 = Disabled <b>1 = Enabled</b>

## EAN Status

<b>Usage:</b>	<b>EAN</b> is the European version of the UPC symbology and is used in European market applications. <b>Note:</b> <b>UPC</b> must be enabled for <b>EAN</b> to take effect.
<b>Definition:</b>	EAN is a subset of UPC. When enabled, the imager will read UPC Version A, UPC Version E, EAN 13, and EAN 8. It also appends a leading zero to UPC Version A symbol information and transmits 13 digits. If transmitting 13 digits when reading UPC Version A symbols is not desired, disable EAN. <b>Note:</b> The extra character identifies the country of origin.
<b>Serial Cmd:</b>	< <b>K473,UPC status,<b>EAN status</b>,supplements status,separator status,separator character,supplemental type,format UPC-E as UPC-A</b> >
<b>Default:</b>	<b>Enabled</b>
<b>Options:</b>	0 = Disabled <b>1 = Enabled</b>

## **Supplements Status (UPC/EAN)**

<b>Usage:</b>	Reads <b>Supplements</b> typically used in publications and documentation.
<b>Definition:</b>	A supplemental is a 2 to 5 digit symbol appended to the main symbol. When set to <b>Enabled</b> or <b>Required</b> , the imager reads supplemental code data that has been appended to the standard UPC or EAN codes.
<b>Serial Cmd:</b> <K473,UPC status,EAN status, <b>supplements status</b> ,separator status, separator character,supplemental type,format UPC-E as UPC-A>	
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled      2 = Required

### **Disabled**

UPC **Supplements** will not be decoded.

### **Enabled**

When enabled, the imager will try to decode a main and a supplemental. However, if a supplemental is not decoded, the main will be sent by itself at the end of the read cycle.

### **Required**

When set to **Required**, both the main and the supplemental symbols must be read or a single No Read condition results.

For example, if **Supplements** is set to **Required**, **Separator** is enabled, and an asterisk is defined as the UPC separator character. Then the data is displayed as:

MAIN \* SUPPLEMENTAL.

**Note:** Under no circumstances will the supplemental symbol data be sent without a main symbol.

**Note:** If additional symbols—other than the main or supplemental—will be read in the same read cycle, **Number of Symbols** should be set accordingly.

## **Separator Status (UPC/EAN)**

<b>Usage:</b>	Allows users to distinguish between the main and <b>Supplemental</b> symbols.
<b>Definition:</b>	A character can be inserted between the standard UPC or EAN symbology and the supplemental symbology when <b>Supplements</b> is set to <b>Enabled</b> or <b>Required</b> .
<b>Serial Cmd:</b> <K473,UPC status,EAN status, <b>supplements status</b> , <b>separator status</b> ,separator character,supplemental type,format UPC-E as UPC-A>	
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

## Separator Character (UPC/EAN)

**Note:** If **Separator Character** has been changed to any other character and you wish to redefine the separator as a comma, you will need to use **ESP**.

**Usage:** As required by the application.

**Definition:** Allows the user to change the separator character from a comma to a new character.

**Serial Cmd:** <**K473**,*UPC status,EAN status,supplements status,separator status,separator character, supplemental type,format UPC-E as UPC-A*>

**Default:** , (comma)

**Options:** Any ASCII character.

**Note:** Whenever **Separator Character** is defined as a comma ( , ) sending a <**K473,s?**> command will return the current settings, including the separator character comma which appears after the separator status comma.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K473h,00,3C**>

For >: <**K473h,00,3E**>

For , : <**K473h,00,2C**>

## **Supplemental Type (UPC/EAN)**

**Usage:** As required by symbology used in application.

**Definition:** Allows the user to select 2 character or 5 character supplements, or both.

**Serial Cmd:** <**K473,UPC status,EAN status,supplements status,separator status,separator character, supplemental type,format UPC-E as UPC-A**>

**Default:** **Both**

**Options:** **0 = Both**      1 = 2 characters only      2 = 5 characters only

### **Both**

Either 2 character or 5 character supplementals will be considered valid.

### **2 Characters Only**

Only two character supplementals will be considered valid.

### **5 Characters Only**

Only five character supplementals will be considered valid.

## **Format UPC-E as UPC-A (UPC/EAN)**

**Definition:** When disabled, the imager will output the version E symbols in their encoded 6-character format.  
When enabled, the imager will format the symbol as either a 12-character UPC-A symbol or an EAN-13 symbol, depending on the state of the EAN status parameter. This formatting reverses the zero suppression that is used to generate the symbol in the UPC specification.

**Serial Cmd:** <**K473,UPC status,EAN status,supplements status,separator status,separator character, supplemental type,format UPC-E as UPC-A**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## Pharmacode

- Usage:** Used mostly with packaging for the pharmaceuticals industry.
- Definition:** Encodes up to five different numbers, each with its own color, which may be entered in decimal or “binary” format with a 1 represented by a thick bar and a 0 represented by a thin bar. Bar width is independent of height. In decimal format, each part can be up to 999,999. In binary format, each input can have up to 19 ones and zeros.
- Important:** When Pharmacode is enabled, other linear symbologies will not decode properly. Disable Pharmacode before reading other linear symbologies.
- Serial Cmd:** <**K477**,status,**fixed symbol length status**,**fixed symbol length**,**minimum number of bars**,**bar width status**,**direction**,**fixed threshold value**>
- Default:** **Disabled**
- Options:** **0 = Disabled**      1 = Enabled

### Fixed Symbol Length Status (Pharmacode)

- Definition:** When enabled, the imager will check the symbol length against the symbol length field. If disabled, any length will be considered valid.
- Serial Cmd:** <**K477**,status,**fixed symbol length status**,**fixed symbol length**,**minimum number of bars**,**bar width status**,**direction**,**fixed threshold value**>
- Default:** **Disabled**
- Options:** **0 = Disabled**      1 = Enabled

### Fixed Symbol Length (Pharmacode)

- Definition:** Specifies the exact number of bars that must be present for the imager to recognize and decode the Pharmacode symbol.
- Serial Cmd:** <**K477**,status,**fixed symbol length status**,**fixed symbol length**,**minimum number of bars**,**bar width status**,**direction**,**fixed threshold value**>
- Default:** **5**
- Options:** 1 to 16

### Minimum Number of Bars (Pharmacode)

- Definition:** Sets the minimum number of bars that a Pharmacode symbol must have to be considered valid.
- Serial Cmd:** <**K477**,status,**fixed symbol length status**,**fixed symbol length**,**minimum number of bars**,**bar width status**,**direction**,**fixed threshold value**>
- Default:** **2**
- Options:** 1 to 16

## Bar Width Status (Pharmacode)

**Definition:** If set to **Mixed**, the imager will autodiscriminate between narrow bars and wide bars. If set to **All Narrow**, all bars will be considered as narrow bars. If set to **All Wide**, all bars will be considered as wide bars. If set to **Fixed Threshold**, it will use the fixed threshold value to determine whether the bars are narrow or wide. The **Bar Width Status** setting will be ignored when the imager is able to tell the difference between the narrow and the wide bars.

**Serial Cmd:** <**K477**,status,fixed symbol length status,fixed symbol length,minimum number of bars,**bar width status**,direction,fixed threshold value>

**Default:** **Mixed**

**Options:** **0 = Mixed**

1 = All Narrow

2 = All Wide

3 = Fixed Threshold

## Direction (Pharmacode)

**Definition:** Specifies the direction in which a symbol can be read.

**Serial Cmd:** <**K477**,status,fixed symbol length status,fixed symbol length,minimum number of bars,**bar width status**,**direction**,fixed threshold value>

**Default:** **Forward**

**Options:** **0 = Forward**                    1 = Reverse

## Fixed Threshold Value (Pharmacode)

**Definition:** Used when **Bar Width Status** is set to **Fixed Threshold**. Defines the minimum difference in pixels that will distinguish a narrow bar from a wide bar.

**Serial Cmd:** <**K477**,status,fixed symbol length status,fixed symbol length,minimum number of bars,**bar width status**,direction,**fixed threshold value**>

**Default:** **10**

**Options:** 1 to 65535

# Postal Symbolologies


**Important:** Postal Symbolologies must have a minimum pixels-per-element value of **4** to be decoded reliably by the MS-4Xi.

The imager must be configured to specific read range, field of view, and camera parameters before decoding Postal Symbolologies.

## For optimal decode results with a Standard Density (SD) imager:

- Set **Focal Distance** and set gain and shutter settings for a high contrast image.
- Position the imager **3.5"** to **6"** from the symbol (5-10" if Pixel Sub-Sampling is disabled).
- Position the symbol as close to the center of the imager's field of view as possible.

**Note:** Measurements based on a 16 mil (60 dpi) POSTNET symbol.

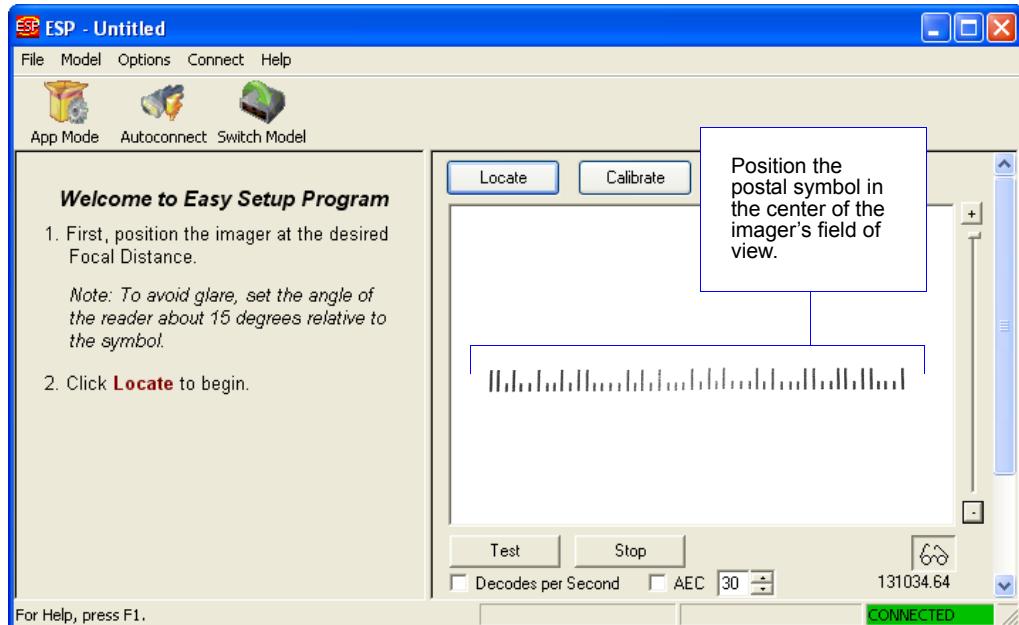

## **Postal Symbology Type**

**Usage:** The following 1D **Postal Symbologies** are used in mail sortation, auditing, certified mail, registered mail, metered mail, and point-of-sale (POS) applications.

**Definition:** Determines the postal symbology that will be decoded by the imager.

**Serial Cmd:** <**K460,postal symbology type,POSTNET status,PLANET status,USPS4CB status,POSTNET allow B and B' fields,Australia Post allow 0 FCC>**

**Default:** **Disabled**

**Options:** **0 = Disabled**

1 = U.S. Post (POSTNET, PLANET, USPS4CB)

2 = Australia Post

3 = Japan Post

4 = Royal Mail

5 = KIX

6 = UPU

## **U.S. Post (POSTNET, PLANET, USPS4CB)**

When **U.S. Post** is enabled (**<K460,1>**), the imager will only decode **POSTNET**, **PLANET**, and **USPS4CB** symbols.

**Important:** **POSTNET Status**, **PLANET Status**, and **USPS4CB Status** are enabled by default. However, if any of the three U.S. Post symbologies is set to **disabled** individually, symbols of that type will not be decoded by the imager even when U.S. Post is enabled.

For example, if **U.S. Post** is enabled but **POSTNET Status** is disabled (**<K460,1,0>**), **POSTNET** symbols will not be decoded by the imager.

See **POSTNET Status**, **PLANET Status**, and **GS1 DataBar** for more detail about U.S. Post symbologies.

## **Australia Post**

When **Australia Post** is enabled (**<K460,2>**), the imager will only decode Australia Post symbols.

## **Japan Post**

When **Japan Post** is enabled (**<K460,3>**), the imager will only decode Japan Post symbols.

## **Royal Mail**

When **Royal Mail** is enabled (**<K460,4>**), the imager will only decode Royal Mail symbols.

## **KIX**

When **KIX** is enabled (**<K460,5>**), the imager will only decode KIX symbols.

## **UPU**

When **UPU** is enabled, the imager will decode UPU symbols.

For example, if **Postal Symbology Type** is set to **UPU** and **POSTNET Status** is enabled and (**<K460,6,1>**), the imager will attempt to decode both UPU and POSTNET symbols.

## POSTNET Status

**Usage:** POSTNET is used by the United States Postal Service to direct mail. The ZIP Code or ZIP+4 Code is encoded in the symbol. Data is encoded in half-height and full-height bars, making POSTNET a “2-state” symbology. The delivery point (usually the last two digits of the address or post office box number) is also typically encoded in POSTNET symbols.

**Definition:** If U.S. Post and POSTNET Status are both enabled, the imager will decode POSTNET symbols.

**Serial Cmd:** <K460,postal symbology type,POSTNET status,PLANET status,USPS4CB status,POSTNET allow B and B' fields,Australia Post allow 0 FCC>

**Default:** **Enabled**

**Options:** 0 = Disabled  
**1 = Enabled**

## PLANET Status

**Usage:** PLANET (Postal Alphanumeric Encoding Technique) is a symbology used by the United States Postal Service to track and identify items during delivery. Each PLANET symbol is either 12 or 14 digits long, and encodes data in half-height and full-height bars, making PLANET a “2-state” symbology. The symbol always starts and ends with a full-height bar, or “guard rail”, and each individual digit is represented by a set of five bars in which two of the bars are always short.

**Definition:** If U.S. Post and PLANET Status are both enabled, the imager will decode PLANET symbols.

**Serial Cmd:** <K460,postal symbology type,POSTNET status,PLANET status,USPS4CB status,POSTNET allow B and B' fields,Australia Post allow 0 FCC>

**Default:** **Enabled**

**Options:** 0 = Disabled  
**1 = Enabled**

## USPS4CB Status

<b>Usage:</b>	USPS4CB, also called <b>Intelligent Mail</b> , is used by the United States Postal Service to sort and track individual items as well as flats of mail. USPS4CB combines the capabilities of POSTNET and PLANET, and can encode 31 digits (65 bars). USPS4CB symbols are slightly longer than POSTNET symbols, and offer additional flexibility in choosing symbol height and width. Data is encoded in four types of bars ("states"), each of which is identified by a name and a value. This type of postal symbol is known as "4-state". Each bar has a "tracker", or middle section, to which an "ascender" (top section) or "descender" (bottom section) may be added. The 4-state format allows the symbol to contain more information, and makes it easier to decode. 4-state symbols can also be printed easily in a variety of media, including dot matrix, inkjet, and laser.
<b>Definition:</b>	If <b>U.S. Post</b> and <b>USPS4CB Status</b> are both enabled, the imager will decode USPS4CB symbols.
<b>Serial Cmd:</b>	< <b>K460</b> ,postal symbology type,POSTNET status,PLANET status, <b>USPS4CB status</b> ,POSTNET allow B and B' fields,Australia Post allow 0 FCC>
<b>Default:</b>	<b>Enabled</b>
<b>Options:</b>	0 = Disabled <b>1 = Enabled</b>

## POSTNET Allow B and B' Fields

<b>Definition:</b>	If <b>U.S. Post</b> and <b>POSTNET</b> are enabled, and <b>POSTNET Allow B and B' Fields</b> is enabled, the imager will allow B and B' fields in POSTNET symbols.
<b>Serial Cmd:</b>	< <b>K460</b> ,postal symbology type,POSTNET status,PLANET status, <b>USPS4CB status</b> , <b>POSTNET allow B and B' fields</b> ,Australia Post allow 0 FCC>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

## Australia Post Allow 0 FCC

<b>Definition:</b>	If <b>Australia Post</b> is enabled, and <b>Australia Post Allow 0 FCC</b> is enabled, the imager will allow 0 FCC in Australia Post symbols.
<b>Serial Cmd:</b>	< <b>K460</b> ,postal symbology type,POSTNET status,PLANET status, <b>USPS4CB status</b> ,POSTNET allow B and B' fields, <b>Australia Post allow 0 FCC</b> >
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

# GS1 DataBar

## DataBar Expanded

**Usage:** Used to encode primary and supplementary data in retail point-of-sale and other applications.

**Definition:** DataBar Expanded is a variable length symbology that can encode supplementary information in addition to the 14-digit EAN item identification number and is capable of encoding up to 74 numeric or 41 alphabetic characters.

**Serial Cmd:** <**K484**,**status**,**fixed symbol length status**,**fixed symbol length**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

Where appropriate, use 1 (non-stacked) for better performance over 2 (stacked and non-stacked).

## Fixed Symbol Length Status (DataBar Expanded)

**Definition:** When enabled, the imager will check the symbol length against the symbol length field, minus the embedded check character. If disabled, any length would be considered valid.

**Serial Cmd:** <**K484**,**status**,**fixed symbol length status**,**fixed symbol length**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## Fixed Symbol Length (DataBar Expanded)

**Usage:** **Fixed Symbol Length** helps prevent truncations and increases data integrity by ensuring that only one symbol length will be accepted.

**Definition:** Specifies the exact number of characters that the imager will recognize (this does not include start, stop, and check character characters). The imager ignores any symbol not having the specified length.

**Serial Cmd:** <**K484**,**status**,**fixed symbol length status**,**fixed symbol length**>

**Default:** **14**

**Options:** 1 to 74

## **DataBar Limited**

*Usage:* DataBar Limited is designed to be read by laser and CCD readers. It is not recommended for omnidirectional slot scanners.

*Definition:* Encodes a smaller 14-digit symbol (74 modules wide) that is not omnidirectional.

*Serial Cmd:* <**K483,status**>

*Default:* **Disabled**

*Options:* **0 = Disabled**      1 = Enabled

## **DataBar-14**

*Usage:* Used in the grocery, retail, and prescription drug industries where 14-digit EAN item identification may be needed.

*Definition:* DataBar-14 is a fixed symbol length symbology that encodes 14 digits, including a 1-digit indicator. DataBar-14 is 96 modules wide. It can be stacked in two rows, it can read omnidirectionally if printed in full height, or horizontally if height-truncated for small marking.

*Serial Cmd:* <**K482,status**>

*Default:* **Disabled**

*Options:* **0 = Disabled**      1 = Enabled

## PDF417

- Usage:** Used in applications where a large amount of information (over 32 characters) needs to be encoded within a symbol, typically where the symbol is transported from one facility to another. For example, an automobile assembly line might use a single symbol with multiple fields of information that will be read at several stations along the way, without reference to a database.
- Definition:** A two-dimensional, multi-row (3 to 90), continuous, variable length symbology that has high data capacity for storing up to 2,700 numeric characters, 1,800 printable ASCII characters, or 1,100 binary characters per symbol. Each symbol character consists of 4 bars and 4 spaces in a 17-module structure.
- Serial Cmd:** <**K476**,*status*,[*unused*],**fixed symbol length status**,**fixed symbol length**>
- Default:** **Enabled**
- Options:** 0 = Disabled                    **1 = Enabled**

**Note:** Sending <**a1**> will cause PDF417 data to be prefaced with information consisting of error correction level (ECC Level *n*), number of rows (*n* Rows), number of columns (*n* Columns), number of informative code words (*n* Info Code Words) and the number of data characters (*n* Data Characters). This feature can be disabled by re-sending <**a1**>.

## Fixed Symbol Length Status (PDF417)

- Serial Cmd:** <**K476**,*status*,[*unused*],**fixed symbol length status**,**fixed symbol length**>
- Default:** **Disabled**
- Options:** **0 = Disabled**                    1 = Enabled

## Fixed Symbol Length (PDF417)

- Usage:** Used to increase data integrity by ensuring that only one symbol length will be accepted.
- Definition:** When enabled, the PDF symbol must contain the same number of characters as the symbol length setting before it can be considered a good read. The imager will ignore any symbol not having the specified length.
- Serial Cmd:** <**K476**,*status*,[*unused*],**fixed symbol length status**,**fixed symbol length**>
- Default:** **10**
- Options:** 1 to 2710

**Note:** Fixed Symbol Length Status must be enabled for Fixed Symbol Length to take effect.

## MicroPDF417

**Usage:** Used for labelling small items that need large data capacity.

**Definition:** A variant of PDF417, a very efficient and compact stacked symbology that can encode up to 250 alphanumeric characters or 366 numeric characters per symbol.

**Serial Cmd:** <**K485**,**status**,[unused],fixed symbol length **status**,fixed symbol length>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

### Fixed Symbol Length Status (MicroPDF417)

**Serial Cmd:** <**K485**,**status**,[unused],**fixed symbol length status**,fixed symbol length>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

### Fixed Symbol Length (MicroPDF417)

**Usage:** Used to increase data integrity by ensuring that only one symbol length will be accepted.

**Definition:** When enabled, the MicroPDF417 symbol must contain the same number of characters as the symbol length setting before it can be considered a good read. The imager will ignore any symbol not having the specified length.

**Serial Cmd:** <**K485**,**status**,[unused],fixed symbol length **status**,fixed symbol length>

**Default:** **10**

**Options:** 1 to 366

**Note:** Fixed Symbol Length Status must be enabled for Fixed Symbol Length to take effect.

## Composite

When set to **Enabled** or **Required**, will decode the 2D composite component of a linear symbol. The linear symbol can be DataBar-14, DataBar Expanded, DataBar Limited, EAN-128, UPC-A, EAN-13, EAN-8, and UPC-E.

**Usage:** Allows reading by both linear and 2D readers.

**Definition:** Combines 2D and linear width-modulated symbology on the same symbol where different messages can be read by each reader type.

**Serial Cmd:** <**K453,mode,separator status,separator**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled      2 = Required

### Enabled

If **Composite** is set to **Enabled**, the imager will decode both the 2D composite and linear components. However, if the 2D composite component is not decoded, the linear data will be sent by itself at the end of the read cycle.

### Required

If set to **Required**, the imager must decode both components, or a No Read will occur.

## Separator Status (Composite)

**Usage:** Allows the user to distinguish between the main and **Supplemental** symbols.

**Definition:** Separates the linear and the composite component.

**Serial Cmd:** <**K453,mode,separator status,separator**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## Separator Character (Composite)

**Note:** The Separator Character will be the same as the character defined in the **Multisymbol Separator** field of the <**K222**> command.

**Usage:** As required by the application.

**Definition:** Allows the user to change the separator character from a comma to a new character.

**Serial Cmd:** <**K453,mode,separator status,separator**>

**Default:** , (comma)

**Options:** Any ASCII character.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K453h,,3C**>

For >: <**K453h,,3E**>

For , : <**K453h,,2C**>

# Narrow Margins/Symbology Identifier

## Narrow Margins

*Usage:* Used when the leading and trailing edges of the symbols are smaller than the standard margin or other objects encroach into the margins.

*Definition:* Allows the imager to read 1D symbols with quiet zones less than 8 times the width of the narrow bar element. “Quiet zone” is the space at the leading and trailing ends of a symbol. Each quiet zone can be as narrow as only five times the width of the narrow bar element when **Narrow Margins** is enabled.

*Serial Cmd:* <**K450,narrow margins,symbology identifier status**>

*Default:* **Enabled**

*Options:* 0 = Disabled                    **1 = Enabled**

### Enabled

When Narrow Margins is set to **Enabled**, the imager uses a 5x margin requirement for standard linear symbols.

## Symbology Identifier

**Definition:** Symbology Identifier is an ISO/IEC 16022 standard prefix set of characters that identifies the symbol type.

When enabled, the imager analyzes and identifies the symbology and adds a three-character identifying prefix to the data:

- ] (closed bracket character) indicating the presence of a symbology identifier.
- A, C, E, F, G, I, L, Q, Y, b, d, e, p, z
- (A = Code 39; C = Code 128; E = UPC/EAN; F = Codabar; G = Code 93; I = I-2/5; L = PDF417 and MicroPDF417; Q = QR Code and Micro QR Code; Y = Postal Symbologies; b = BC412; d = Data Matrix; e = GS1 DataBar (RSS); p = Pharmacode; z = Aztec; Z = Non-Bar Code)
- Modifier

*Example:* ]d indicates a Data Matrix symbol.

**Serial Cmd:** <**K450,narrow margins,symbology identifier status**>

**Default:** **Disabled**

**Options:** **0 = Disabled**                    1 = Enabled

### Explanation of Modifiers for Code 39 and Interleaved 2 of 5

- For Code 39 and Interleaved 2 of 5, the modifier indicates **Check Character** and **Check Character Output** status.
- For Code 39 only, Full ASCII must be enabled to see modifiers **4**, **5**, and **7**.

<b>Modifier</b>	<b>Check Character</b>	<b>Check Character Output</b>	<b>Full ASCII conversion performed (Code 39 only)</b>
<b>0</b>	Disabled	N/A	No
<b>1</b>	Enabled	Enabled	No
<b>3</b>	Enabled	Disabled	No
<b>4</b>	Disabled	N/A	Yes
<b>5</b>	Enabled	Enabled	Yes
<b>7</b>	Enabled	Disabled	Yes

*Example:* ]A5 indicates a **Code 39** symbol with **Check Character** and **Check Character Output** enabled and Full ASCII conversion performed.

### Explanation of Modifiers for Other Symbologies

- For Code 128, a **1** indicates EAN 128; otherwise the modifier is **0**.
- For QR Code and Micro QR Code, a **0** indicates QR Code; a **1** indicates Micro QR Code.
- For Postal Symbologies, a **0** indicates POSTNET; a **1** indicates Japan Post; a **2** indicates Australia Post; a **3** indicates PLANET; a **4** indicates Royal Mail; a **5** indicates KIX; a **6** indicates UPU (56-bar); a **7** indicates UPU (75-bar); and an **8** indicates USPS4CB.

*Example:* ]Y0 indicates a **POSTNET** symbol.

- For all other symbologies, the modifier is **0**.

# Background Color

**Note:** Background Color only applies to **Pharmacode**.

**Usage:** Symbol backgrounds are often **White**, or other very light colors. If the background is darker than the symbol, **Black** background should be enabled.

**Definition:** Allows the user to specify the symbol background used in the application.

**Serial Cmd:** <K451,background color>

**Default:** **Both**

**Options:** 0 = White                    1 = Black                    **2 = Both**

## **White**

When **White** background is enabled, the bars of the symbol are recognized as dark on a light background.

## **Black**

When **Black** background is enabled, the bars of the symbol are recognized as light on a dark background.

## **Both**

When **Both** is enabled, the imager will attempt to decode for white background first, and if there is no decode, will then attempt to decode for black background.

---

*Background Color*


# 7 I/O Parameters

## Contents

I/O Parameters by ESP .....	7-2
I/O Parameters Serial Commands .....	7-3
Symbol Data Output .....	7-4
No Read Message.....	7-7
Output Indicators .....	7-8
Beeper.....	7-12
LED Configuration .....	7-13
Serial Verification .....	7-14
EZ Button .....	7-16
EZ Button Modes.....	7-18
Configurable Output 1 .....	7-20
Trend Analysis Output 1 .....	7-23
ISO/IEC 16022 Symbol Quality Output 1 .....	7-26
Diagnostic Output 1 .....	7-29
Configurable Output 2 .....	7-30
Trend Analysis Output 2 .....	7-30
ISO/IEC 16022 Symbol Quality Output 2 .....	7-30
Diagnostic Output 2 .....	7-30
Configurable Output 3 .....	7-31
Trend Analysis Output 3 .....	7-31
ISO/IEC 16022 Symbol Quality Output 3 .....	7-31
Diagnostic Output 3.....	7-31
Power-On/Reset Counts .....	7-32
Time Since Reset.....	7-33
Service Message.....	7-34
Frame Information .....	7-35
Image Output.....	7-36
Database Identifier Output .....	7-39
Quality Output .....	7-40
Configuring EZ Trax Output .....	7-41

This section includes instructions on setting up conditions for changing input/output electrical transitions for control of the imager's internal and external devices. A discrete I/O (in/out) signal is an electrical transition from one voltage level to another so that digital switching can occur.

# I/O Parameters by ESP

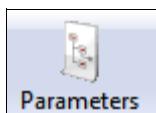

Click the **Parameters** button and then the I/O tab.

Parameters	ESP Values
Symbol Data Output	Good Read
No Read Message	Enabled
Bad / No Symbol Qualification	
Read Duration Output	Disabled
Output Object Info	Disabled
Output Indicators	
Serial Verification	
Image Output	Disabled
EZ Trax Output	Disabled
EZ Button	Enabled
Calibration Options	
Database Identifier Output	Disabled*
Output 1 Parameters	Disabled*
Output 2 Parameters	Enabled
Output 3 Parameters	
Quality Output	
Quality Output Separator	,
Decodes/Trigger Status	Disabled

To change a setting,  
**double-click** the  
setting and use your  
cursor to scroll  
through the options.

To open nested options,  
**single-click** the +.

# I/O Parameters Serial Commands

Power On/Reset Counts	<K406,power-on, resets, power-on saves, power-on flash saves>
Time Since Reset	<K407, hours, minutes>
Service Message	<K409, status, service message, threshold, resolution>
Serial Verification	<K701, serial command echo status, serial command beep status, control/hex output>
Beeper	<K702, status>
Quality Output	<K704, quality output separator, decodes per trigger status>
Symbol Data Output	<K705, symbol data output status, when to output>
No Read Message	<K714, status, message>
Frame Information	<K734, output frame number, output coordinates>
LED Configuration	<K737, LED mode, ISO/IEC 16022 grade>
Image Output	<K739, image output mode, communication port, file format, JPEG quality>
Target/Flood LEDs	<K750, green flash LED status, target pattern LED status, green flash duration>
EZ Trax Output	<K757, comm port, image mode, image format, JPEG quality, object info output, grade output>
Database Identifier Output	<K759, status, separator>
EZ Button	<K770, global status, default on power-on, load Configuration Database, save for power-on>
EZ Button Modes	<K771, single beep, two beeps, three beeps, four beeps>
Trend Analysis Output 1	<K780, trend analysis mode, trigger evaluation period, number to output on, decodes per trigger threshold>
Trend Analysis Output 2	<K781, trend analysis mode, trigger evaluation period, number to output on, decodes per trigger threshold>
Trend Analysis Output 3	<K782, trend analysis mode, trigger evaluation period, number to output on, decodes per trigger threshold>
Diagnostic Output 1	<K790, unused 1, service unit>
Diagnostic Output 2	<K791, unused 1, service unit>
Diagnostic Output 3	<K792, unused 1, service unit>
ISO/IEC 16022 Symbol Quality Output 1	<K800, output on symbol contrast, symbol contrast threshold, output on print growth, print growth threshold, output on axial non-uniformity, axial non-uniformity threshold, output on UEC, UEC threshold>
ISO/IEC 16022 Symbol Quality Output 2	<K801, output on symbol contrast, symbol contrast threshold, output on print growth, print growth threshold, output on axial non-uniformity, axial non-uniformity threshold, output on UEC, UEC threshold>
ISO/IEC 16022 Symbol Quality Output 3	<K802, output on symbol contrast, symbol contrast threshold, output on print growth, print growth threshold, output on axial non-uniformity, axial non-uniformity threshold, output on UEC, UEC threshold>
Configurable Output 1	<K810, output on, output state, pulse width, output mode>
Configurable Output 2	<K811, output on, output state, pulse width, output mode>
Configurable Output 3	<K812, output on, output state, pulse width, output mode>

# Symbol Data Output

## Symbol Data Output Status

**Note:** Symbol Data Output relates to data and should not be confused with **Outputs 1, 2, and 3** listed in the **Output Parameters** which describe output states and functions.

**Usage:** Useful when the host needs symbol data only under certain conditions.

**Definition:** Defines the conditions under which decoded symbol data is transmitted to the host.

**Serial Cmd:** <**K705,symbol data output status**,when to output>

**Default:** **Good Read**

**Options:** 0 = Disabled

1 = Match

2 = Mismatch

**3 = Good Read**

**Note:** Symbol Data Output Status, if set to **Match** or **Mismatch**, will not take effect unless **Matchcode Type** is enabled and a master symbol is loaded into memory.

### Disabled

**Usage:** It is useful when an application only needs to use the discrete outputs and can allow the imager to do the decision-making. When **Disabled**, the host does not need the symbol data and the communication lines are used only for setup and status checks.

**Definition:** When set to **Disabled**, the imager will not transmit any data that is generated during a read cycle (symbols, No Reads, etc.)

### Match

**Usage:** **Match** is used in an application that requires specific symbol information and needs to sort, route, or verify based on matching the specific symbol data.

**Definition:** When set to **Match**, the imager transmits symbol data whenever a symbol matches a master symbol. However, if **Matchcode Type** is **Disabled**, it transmits on any good read.

**Note:** A No Read can still be transmitted if **Enabled**.

### Mismatch

**Usage:** Mismatch is typically used as a flag within the host system to prevent an item from being routed in the wrong container.

**Definition:** With Mismatch enabled, the imager transmits symbol data whenever the symbol data information does NOT match the master symbol.

**Note:** A No Read can still be transmitted if **Enabled**.

## Good Read

*Usage:* **Good Read** is used when an application requires all symbol data to be transmitted. It's typically used in tracking applications in which each object is uniquely identified.

*Definition:* With **Good Read** enabled, the imager transmits symbol data on any good read regardless of **Matchcode Type** setting.

**Note:** A No Read can still be transmitted if **Enabled**.

## When to Output Symbol Data

**Definition:** This command allows the user to choose when symbol data can be sent to the host.

**Serial Cmd:** <K705,symbol data output status,**when to output**>

**Default:** **As Soon As Possible**

**Options:** **0 = ASAP**      1 = End of Read Cycle

### As Soon As Possible

**Usage:** **As Soon As Possible** is useful in applications in which symbol data needs to be moved quickly to the host, typically when the host is making decisions based on symbol data.


**Definition:** Enabling **As Soon As Possible** causes symbol data to be sent to the host immediately after a symbol has been successfully decoded.

**Note:** More than one decode might in fact be required to qualify as a good read, depending on how **Decodes Before Output** is set.

### End of Read Cycle

**Usage:** **End of Read Cycle** is useful in timing-based systems in which the host is not ready to accept data at the time that it is decoded.

**Definition:** Enabling **End of Read Cycle** means that symbol data does not get sent to the host until the read cycle ends with a timeout or new trigger.

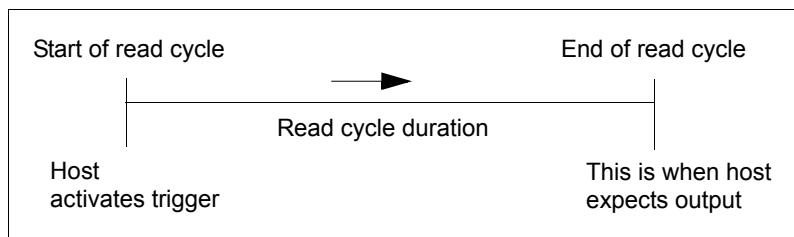

# No Read Message

**Usage:** Used in applications where the host needs serial verification that a symbol has not been read and especially useful in new print verification.

**Definition:** When enabled, and if no symbol has been decoded before timeout or the end of the read cycle, the No Read message will be transmitted to the host.

## No Read Message Mode

**Serial Cmd:** <**K714, No Read message status, No Read message**>

**Default:** **Enabled**

**Options:** 0 = Disabled      **1 = Enabled**

### Disabled

Only symbol data is output after a read cycle.

### Enabled

When the imager is in a triggered mode, a No Read message will be appended for each failed read attempt.

## No Read Message

**Definition:** Any combination of ASCII characters can be defined as the No Read message.

**Serial Cmd:** <**K714, No Read message status, No Read message**>

**Default:** **NOREAD**

**Options:** A string of up to 64 characters.

**Note:** No Read Message will only be transmitted if Symbol Data Output is set to **Match**, **Mismatch**, or **Good Read**.

**No Read Message** can be set to any ASCII character.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K714h,,3C**>

For >: <**K714h,,3E**>

For , : <**K714h,,2C**>

## Output Indicators

The MS-4Xi has a beeper and three LED arrays, as follows:

1. A target pattern of blue LEDs for centering the field of view, which is projected from the front of the imager .
2. An array of green LEDs projected from the front of the imager that can be programmed to flash in response to user-defined conditions.
3. A row of five status LEDs on the side of the imager.

### **Green Flash Mode**

**Usage:** Used as a visual verification that a good read has occurred.

**Definition:** An array of green LEDs in the front of the imager can be programmed to flash in response to user-defined conditions.

**Serial Cmd:** <**K750,green flash mode,target pattern status,green flash duration**>

**Default:** **Good Read**

**Options:** 0 = Disabled

**1 = Good Read**

2 = Static Presentation

3 = Match

4 = Mismatch

5 = Strobe

### **Disabled**

Green flash LEDs are disabled.

### **Good Read**

Green flash LEDs will flash when a good read condition is met or when **Matchcode** is enabled and a match occurs.

## Static Presentation Mode

**Static Presentation Mode** is used in conjunction with **Continuous Read Mode: <K200,0>**.

When operating in **Static Presentation Mode**, the red LEDs will illuminate while the imager is searching for a symbol in **Continuous Read Mode**. When a symbol is placed in the field of view and a good read occurs, the green LEDs will illuminate and stay on for the duration of time set in **Green Flash Duration**. Only one read will occur during that time unless more than one symbol is enabled in **Number of Symbols**.

**Note:** If **Static Presentation Mode** is selected but the imager is not in **Continuous Read**, the **Green Flash** will not occur.

### To use Static Presentation:

1. Enable **Continuous Read**.
2. Select the number of symbols.
3. Enable **Static Presentation in Green Flash Mode**.
4. Select the read time in **Green Flash Duration**.

## Match

The green LEDs will flash when a match condition is met. If multisymbol is enabled, then green flash LEDs will illuminate only if all symbols qualify as a match. If matchcode is disabled, then this mode will activate the LEDs on a good read.

## Mismatch

Same as **Match**, except that LEDs will illuminate on a mismatch.

## Strobe

Green flash LEDs will act as an illumination strobe for image capture. If it is required that the green flash LEDs be the *only* illumination for image capture, then the internal illumination LEDs can be disabled.

## **Target Pattern**

**Usage:** Assists users in positioning and locating symbols in the center of the imager's field of view.

**Definition:** The user can control when the targeting system is ON or OFF, and can save this condition for power-on.

**Serial Cmd:** <**K750**,green flash mode,**target pattern status**,green flash duration>

**Default:** **Always ON**

**Options:**

- 0 = Always OFF
- 1 = ON only when not in the read cycle
- 2 = ON only when in the read cycle
- 3 = Always ON**

### **Always OFF**

The target pattern will remain OFF at all times unless overridden by the EZ button or operational command.

### **ON Only When Not in the Read Cycle**

The target pattern is always ON except during the read cycle. If the EZ button or operational command overrides this setting, the target pattern will remain on at all times.

### **ON Only When in the Read Cycle**

The target pattern will remain OFF except during the read cycle. If the EZ button or operational command overrides this setting, the target pattern will remain on at all times.

### **Always ON**

The target pattern is always ON.

## Green Flash Duration

*Usage:* Provides visual verification that a good read has occurred.

*Definition:* When a good read occurs, the green LEDs will illuminate and stay on for the time set in the **Green Flash Duration** value.

*Serial Cmd:* <**K750**,green flash mode,target pattern status,**green flash duration**>

*Default:* **100** (1 second)

*Options:* 0 to 65535 (in 10 ms increments)

## Beeper

*Usage:* An audible verification that either a good read or a No Read has occurred.

*Definition:* A beep is emitted after each good read or No Read.

*Serial Cmd:* <**K702,beeper status**>

*Default:* **Good Read**

*Options:* 0 = Disabled      **1 = Good Read**      2 = No Read

**Note:** The beeper will also sound at any of the following times:

- When the imager is defaulted.
- When a send/save command is sent from **ESP**.
- At the conclusion of a calibration procedure.
- When a <**Z**>, <**Zp**>, <**Zrd**>, or <**K701,,1**> command is sent.

# LED Configuration

**Usage:** Useful as a visible indicator of read rates and symbol quality.

**Definition:** Determines the mode in which the status LEDs operate.

**Serial Cmd:** <**K737,LED mode,ISO/IEC 16022 grade**>

**Default:** **Standard**

**Options:** **0 = Standard**      1 = ISO/IEC 16022 grade

In ISO/IEC 16022 grade mode the LEDs represent the grade of the first Data Matrix symbol decoded in the read cycle.

The parameter to be graded is set in the **ISO/IEC 16022 Grade** options.

For example, to program the LEDs to indicate the ISO/IEC 16022 print growth grade, set **LED Mode** to **ISO/IEC 16022 Grade** and set **ISO/IEC 16022 Grade** to **Print Growth**. If all the LEDs from 20% to 100% are illuminated, the read result is a grade A; if only the 20% LED is illuminated, the result is a grade F.

## Standard

In **Standard Mode**, the STATUS LED indicates read cycle status and the GOOD READ LED illuminates upon a good read at the end of a read cycle. In a read rate test, these LEDs represent the percentage of good reads per images captured.

## ISO/IEC 16022 Grade

**Usage:** Provides visual grading of specific ISO/IEC 16022 parameters.

**Definition:** Determines which ISO/IEC 16022 parameter the imager will grade via the LEDs.

**Serial Cmd:** <**K737,LED mode,ISO/IEC 16022 grade**>

**Default:** **Final Grade**

**Options:** **0 = Final Grade**

1 = Symbol Contrast

2 = Print Growth

3 = Axial Non-Uniformity


4 = Unused ECC

## Serial Verification

Allows the user to verify configuration command status.

### Serial Command Echo Status

- Usage:** This command is useful in removing any doubt about the imager's interpretation of any configuration command.  
For example, if the current preamble is "SOM" and <K701,1,START> is entered, the imager will echo back <K701,SOM> since the attempted entry "START" exceeds the four character limit for that command. Therefore, it is rejected and the existing "SOM" message is echoed back and remains the preamble message.
- Definition:** When enabled, a configuration command received from the host is echoed back to the host with the resultant settings.
- Function:** If a command with multiple fields is processed, some of the fields may have been processed properly while others were not. The changes will appear in the string echoed back so that the user will know which fields did or did not change.
- Serial Cmd:** <K701,serial command echo status,serial command beep status,control/hex output>
- Default:** **Disabled**
- Options:** **0 = Disabled**      1 = Enabled

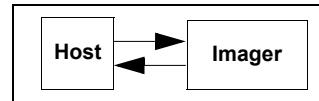

### Serial Command Beep Status

- Usage:** Used to audibly verify the acceptance and validity of a command.
- Definition:** Causes the imager to beep once whenever a K command is entered to indicate that the command was accepted and processed.
- Function:** If an invalid command is entered, the imager beeps 5 times to indicate an invalid entry. However, this does not necessarily mean that all data fields have been entered incorrectly. Only one bad field needs to be found in order to activate the 5 beep response.
- Serial Cmd:** <K701,serial command echo status,serial command beep status,control/hex output>
- Default:** **Disabled**
- Options:** **0 = Disabled**      1 = Enabled

## Control/Hex Output

**Usage:** Useful for viewing settings with binary characters when using serial commands on a terminal.

**Definition:** Determines the response to a **Serial Command Echo** or status request command.

When set to **Control**, two characters are transmitted to represent a non-displayable character. For example, a carriage return will be shown as: **^M**.

**Serial Cmd:** <**K701**,serial command echo status,serial command beep status,control/hex output>

**Default:** **Control**

**Options:** **0 = Control**              1 = Hex

## **EZ Button**

The EZ button has four positions, selectable by the length of time the button is held down, and indicated by one, two, three, and four beeps in succession. Each position can be programmed for any of eight options.

**Definition:** Serves as a master switch to enable/disable the EZ button status.

**Serial Cmd:** <**K770,global status**,*default on power-on,load Configuration Database, save for power-on*>

**Default:** **Enabled**

**Options:** 0 = Disabled

**1 = Enabled**

2 = Trigger

3 = Unlatch Outputs

4 = Parameter Switch

## **Global Status**

### **Disabled**

When set to **Disabled**, the EZ button does not function.

### **Enabled**

When selected, the EZ button is enabled and the function of each button position is selected by the **EZ Button Mode** command.

### **Trigger**

When selected, the EZ button acts as a trigger for the imager to start and end read cycles. All other button operations are inactive.

**In External Level:** The read cycle endures for as long as the EZ button is pressed, unless a timeout occurs and **Timeout** is enabled for **End of Read Cycle**.

**In External Edge:** As with **Level**, **Edge** allows a read cycle to be initiated by pressing the EZ button, but unlike **Level**, the read cycle ends with a good read output, a timeout, or a new trigger.

### **Unlatch Outputs**

In this configuration, the EZ button will unlatch any logic outputs that have been latched.

### **Parameter Switch**

The parameter switch toggles between custom defaults and power-on settings. The condition is the same as that achieved by sending the <**Arc**> and <**Arp**> commands consecutively.

## Default on Power-On

**Definition:** When enabled, if the EZ button is held down on power-on the imager will default to customer defaults and save for power-on. This is the same as sending a <Zrc> command.

**Serial Cmd:** <**K770,global status,default on power-on,load Configuration Database, save for power-on**>

**Default:** **Enabled**

**Options:** 0 = Disabled      **1 = Enabled**

## Load Configuration Database

**Definition:** Allows the user to load the Configuration Database with calibration results. When the user performs a calibration using the EZ button, all the database entries are moved down one index and the results of the calibration are saved to index 1. The results will be saved as current settings as well.

**Serial Cmd:** <**K770,global status,default on power-on,load Configuration Database, save for power-on**>

**Default:** **Enabled**

**Options:** 0 = Disabled      **1 = Enabled**

## Save for Power-On

**Definition:** If enabled, after calibration is complete, all parameters will be saved for power-on.

**Serial Cmd:** <**K770,global status,default on power-on,load Configuration Database, save for power-on**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

# EZ Button Modes

**Usage:** Useful for performing multiple, repetitive tasks at the work site.

**Definition:** Allows the user to program each of the EZ button's 4 positions from a selection of 8 modes.

**Serial Cmd:** <**K771**,position 1 mode,position 2 mode,position 3 mode,position 4 mode>

**Options:** 0 = Disabled                            1 = Enabled

Single Beep	Two Beeps	Three Beeps	Four Beeps
0 = Disabled	0 = Disabled	0 = Disabled	0 = Disabled
1 = Read Rate	1 = Read Rate	<b>1 = Read Rate</b>	1 = Read Rate
2 = Calibrate	<b>2 = Calibrate</b>	2 = Calibrate	2 = Calibrate
3 = Save for Power-On	3 = Save for Power-On	3 = Save for Power-On	<b>3 = Save for Power-On</b>
4 = Unused	4 = Unused	4 = Unused	4 = Unused
5 = Load New Master	5 = Load New Master	5 = Load New Master	5 = Load New Master
6 = Unused	6 = Unused	6 = Unused	6 = Unused
<b>7 = Target System</b>	7 = Target System	7 = Target System	7 = Target System
8 = Unused	8 = Unused	8 = Unused	8 = Unused
9 = Bar Code Config.	9 = Bar Code Config.	9 = Bar Code Config.	9 = Bar Code Config.

## **Disabled**

When set to disabled, the associated button position will have no function associated with it, and the position will be skipped over.

## **Read Rate**

Read Rate will be initiated when the associated button position is selected. Read Rate will perform decodes/second and is the same as sending a <**C**> from the terminal. To exit Read Rate Mode quickly press and release the EZ button.

## **Calibrate**

Calibration will be initiated when the associated button position is selected. To abort calibration, quickly press and release the EZ button.

## **Save for Power-On**

All imager settings will be saved to non-volatile memory to be recalled on power-on whenever the associated button position is selected. This is the same as sending a <**Z**> from the terminal.

## **Load New Master**

Functions in the same way as new master pin input whenever the associated button position is selected. The new master pin's **Consecutive Decode** requirement holds true for this function.

## **Target System**

Turns on the target pattern whenever the associated button position is selected. To disable, quickly press and release the EZ button.

**Note:** This mode is the only one that does not require that the button be released before taking effect. Thus, as soon as the imager beeps the appropriate number of times for the position, it will take effect. If it is necessary to have the target system on before another operation such as calibration or read rate is performed, ensure that the target system mode is assigned a lower position so that it will be activated first.

## **Bar Code Configuration**

Enables bar code configuration mode whenever the associated button position is selected. When enabled, the imager can accept configuration commands from symbols. To disable, quickly press and release the EZ button.

## **EZ Button Operation**

To execute EZ button commands:

### **Single Beep (Position #1)**

Hold down button until a single beep is heard (and the 20% LED illuminates).

### **Two Beeps (Position #2)**

Hold down button until two quick beeps are heard (and the 20% and 40% LEDs illuminate.)

### **Three Beeps (Position #3)**

Hold down button until three quick beeps are heard (and the 20%, 40%, and 60% LEDs illuminate).

### **Four Beeps (Position #4)**

Hold down button until four quick beeps are heard (and the 20%, 40%, 60%, and 80% LEDs illuminate).

# Configurable Output 1

## Output 1 Parameters

Output On	Trend Analysis
Output State	Normally Closed
Pulse Width	5
Output Mode	Pulse
+ Trend Analysis	
+ Symbol Quality (ISO/IEC 16022)	
- Diagnostics	

**Usage:** This option provides discrete signalling to host software to control external devices such as PLCs and relays. It is useful for routing, sorting, and to prevent mis-packaging and mis-routing.

**Definition:** Sets the discrete output functions for specific user-selected conditions. Allows the user to set the conditions under which an output (or outputs) will be activated.

**Serial Cmd:** <**K810, output on, output state, pulse width, output mode**>

**Default:** **Mismatch or No Read**

**Options:** **0 = Mismatch or No Read**  
1 = Match (or Good Read)  
2 = Mismatch  
3 = No Read  
4 = Trend Analysis  
5 = Symbol Quality  
6 = Diagnostic Warning  
7 = In Read Cycle

**Note:** If **Output On** is set to **Match** or **Mismatch**, a transition (switching) will not occur unless **Matchcode Type** is enabled and a master symbol is loaded into memory.

## Mismatch or No Read

Activates discrete output when the data does not match that of the master symbol or the symbol has not been decoded before the end of the read cycle.

## Match (or Good Read)

Activates a discrete output when the symbol data matches the master symbol.

**Note:** If you want to output for a good read and **Matchcode** is not enabled, you can enable any output for **Match**.

## Mismatch

Activates a discrete output whenever the symbol data does not match that of the master symbol.

## No Read

Activates a discrete output whenever the symbol data is not decoded before the end of the read cycle.

## Trend Analysis

*Usage:* Typically used when successful decodes are occurring but a discrete output is needed to flag a trend in quality issues.

*Definition:* Activates discrete output when a trend analysis condition is met, depending on the trend analysis option enabled.

## Symbol Quality

*Usage:* Typically used when a discrete indication is needed to flag a symbol quality condition.

*Definition:* Activates discrete output when a symbol quality condition is met, depending on the symbol quality option enabled.

## Diagnostic Warning

*Usage:* Typically used when a discrete indication of a diagnostic condition is needed.

*Definition:* Activates discrete output when a diagnostic warning condition is met, depending on the diagnostic option enabled.

## In Read Cycle

*Definition:* Activates a discrete output when the imager is in a read cycle.

---

## Configurable Output 1

### Output State

**Definition:** Sets the active electrical state of the discrete output.

**Serial Cmd:** <**K810**,**output on**,**output state**,**pulse width**,**output mode**>

**Default:** **Negative**

**Options:** **0 = Normally Open**      1 = Normally Closed

### Pulse Width

**Definition:** Sets the time in 10 ms increments that the discrete output remains active.

**Serial Cmd:** <**K810**,**output on**,**output state**,**pulse width**,**output mode**>

**Default:** **5** (Corresponds to 50 ms)

**Options:** 0 to 255 (0 to 2.55 seconds). Divide the number entered on the command line by 100 for time in seconds.

### Output Mode

**Definition:** Sets the condition in which the discrete output is de-activated.

**Serial Cmd:** <**K810**,**output on**,**output state**,**pulse width**,**output mode**>

**Default:** **Pulse**

**Options:** **0 = Pulse**

2 = Latch Mode 2

3 = Latch Mode 3

### Pulse

This is the default mode of operation in which the programmable output is activated when the **Output On** condition has been met and held active for the duration of the selected pulse width.

### Latch Mode 2 (*Unlatch Opposite Condition*)

The programmable output is activated when the **Output On** condition has been met and held active until the opposite condition selected under **Output On** has been met.

For example, if **No Read** is enabled under **Output On**, the programmable output will go active on a No Read and remain active until the opposite condition, a good read, occurs.

### Latch Mode 3 (*Unlatch Re-enter Read Cycle*)

The programmable output is active when the **Output On** condition has been met and is held active until a new read cycle begins.


**Note:** All of the **Output On** modes are inhibited when any **Output on Warning** is active for **Output 1**.

# Trend Analysis Output 1

**Note:** Output On under **Output 1 Parameters** must be set to **Trend Analysis** for this output to function.



Under **Output 1 Parameters**, expand the **Trend Analysis** tree:

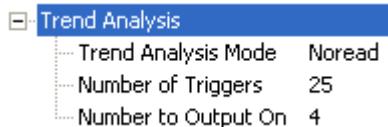

**Usage:** Useful in cases where the user doesn't want to shut down for one condition but wants to monitor quality and read conditions.

**Definition:** Applies **Trend Analysis** settings to **Output 1**.

With **Trend Analysis**, the user can track the occurrences and frequency of mismatches, No Reads, and the number of reads per trigger, and output the results to any of three outputs.

**Example:** *Trend Analysis Mode = No Read*

*Trigger Evaluation Period= 25 triggers (read cycles)*

*Number to Output On = 4*

In this example, the imager will activate an output when 4 No Reads occur within a period of 25 triggers (read cycles).

## Trend Analysis Mode

**Definition:** Sets the trend condition (**Mismatch**, **No Read**, or **Decodes per Trigger**) that will activate the output.



**Serial Cmd:** <**K780,trend analysis mode**,trigger evaluation period,number to output on, decodes per trigger threshold>

**Default:** **No Read**

**Options:** 0 = Mismatch

**1 = No Read**

2 = Decodes per Trigger

### Mismatch

Output will be activated when the number of mismatches equals the value entered for **Number to Output On** within the trigger window selected in **Number of Triggers**.

### No Read

Output will be activated when the number of No Reads equals the value entered for **Number to Output On** within the trigger window selected in **Number of Triggers**.

### Decodes per Trigger

Output will be activated when the number of decodes equals the value entered for **Number to Output On** within the trigger window selected in **Number of Triggers**.

## Trigger Evaluation Period

**Definition:** The number of triggers to examine for the trend analysis condition.

**Serial Cmd:** <**K780,trend analysis mode,trigger evaluation period,number to output on,decodes per trigger threshold**>

**Default:** **0**

**Options:** 0 to 255

## Number to Output On

**Usage:** Example: If **Number to Output On** is set to 3 and **Trend Analysis Mode** is set to **No Read**, then the output will not be activated until 3 No Reads have occurred.

**Definition:** Sets the number of **Trend Analysis Mode** events (mismatches, No Reads, or reads/trigger as configured by Trend Analysis Mode) to occur within the trigger evaluation period before activating the associated output.

**Serial Cmd:** <**K780,trend analysis mode,trigger evaluation period,number to output on,decodes per trigger threshold**>

**Default:** **0**

**Options:** 0 to 255

## Decodes per Trigger Threshold

**Definition:** The appropriate output will be activated if, at the end of the read cycle, the symbol decode count is below this setting.

**Note:** To activate this feature the imager must be in Decodes per Trigger mode. To put the imager in this mode during the read cycle and the Trend Analysis operation, the Decodes per Trigger status in the quality settings must be enabled. Enabling this setting will also append the decode count to the symbol data.

**Serial Cmd:** <**K780,trend analysis mode,trigger evaluation period,number to output on,decodes per trigger threshold**>

**Default:** **0**

**Options:** 0 to 65535

# ISO/IEC 16022 Symbol Quality Output 1

**Note:** Output On under Output 1 Parameters must be set to **Symbol Quality** for this output to function.



Under **Output 1 Parameters**, expand the **Symbol Quality (ISO/IEC 16022)** tree.

Symbol Quality (ISO/IEC 16022)	
Output on Symbol Contrast	Disabled
Output on Print Growth	Disabled
Output on Axial Non-uniformity	Disabled
Output on Unused ECC	Disabled
Symbol Contrast Threshold	Grade C
Print Growth Threshold	Grade C
Axial Non-uniformity Threshold	Grade C
Unused ECC Threshold	Grade C

## Output on Symbol Contrast

**Usage:** Lets the user know if symbol quality is less than acceptable.

**Definition:** If enabled, toggles Output 1 to an active state when **Symbol Contrast Threshold** is met.

**Serial Cmd:** <**K800,output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,output on axial non-uniformity,axial non-uniformity threshold,output on UEC,UEC threshold>**

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## Output on Print Growth

**Usage:** Lets the user know if symbol quality is less than acceptable.

**Definition:** If enabled, toggles **Output 1** to an active state when **Print Growth Threshold** is met.

**Serial Cmd:** <**K800,output on symbol contrast,symbol contrast threshold,**output on print growth**,print growth threshold,output on axial non-uniformity,axial non-uniformity threshold,output on UEC,UEC threshold>**

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## **Output on Axial Non-Uniformity**

**Usage:** Lets the user know if symbol quality is less than acceptable.

**Definition:** If enabled, toggles **Output 1** to an active state when **Axial Non-Uniformity Threshold** is met.

**Serial Cmd:** <**K800**,*output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,**output on axial non-uniformity**,axial non-uniformity threshold,output on UEC,UEC threshold*>

**Default:** **Disabled**

**Options:** **0 = Disabled**                            1 = Enabled

## **Output on Unused Error Correction**

**Usage:** Lets the user know if symbol quality is less than acceptable.

**Definition:** If enabled, toggles **Output 1** to an active state when **UEC Threshold** is met.

**Serial Cmd:** <**K800**,*output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,**output on axial non-uniformity**,axial non-uniformity threshold,**output on UEC**,UEC threshold*>

**Default:** **Disabled**

**Options:** **0 = Disabled**                            1 = Enabled

## **Symbol Contrast Threshold**

**Usage:** Lets the user set the acceptable level of symbol quality.

**Definition:** Conforms to ISO/IEC 16022 symbol quality grading (A,B,C,D).

**Serial Cmd:** <**K800**,*output on symbol contrast,**symbol contrast threshold**,output on print growth,print growth threshold,**output on axial non-uniformity**,axial non-uniformity threshold,output on UEC,UEC threshold*>

**Default:** **Grade C**

**Options:** 0 = Grade A  
1 = Grade B  
**2 = Grade C**  
3 = Grade D

---

## **Print Growth Threshold**

**Usage:** Lets the user set the acceptable level of symbol quality.

**Definition:** Conforms to ISO/IEC 16022 symbol quality grading (A,B,C,D).

**Serial Cmd:** <**K800**,*output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,output on axial non-uniformity,axial non-uniformity threshold,output on UEC,UEC threshold*>

**Default:** **Grade C**

**Options:** 0 = Grade A  
1 = Grade B  
**2 = Grade C**  
3 = Grade D

## **Axial Non-Uniformity Threshold**

**Usage:** Lets the user set the acceptable level of symbol quality.

**Definition:** Conforms to ISO/IEC 16022 symbol quality grading (A,B,C,D).

**Serial Cmd:** <**K800**,*output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,output on axial non-uniformity,**axial non-uniformity threshold**,output on UEC,UEC threshold*>

**Default:** **Grade C**

**Options:** 0 = Grade A  
1 = Grade B  
**2 = Grade C**  
3 = Grade D

## **Unused Error Correction Threshold**

**Usage:** Lets the user set the acceptable level of symbol quality.

**Definition:** Conforms to ISO/IEC 16022 symbol quality grading (A,B,C,D).

**Serial Cmd:** <**K800**,*output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,output on axial non-uniformity,axial non-uniformity threshold,output on UEC,**UEC threshold***>

**Default:** **Grade C**

**Options:** 0 = Grade A  
1 = Grade B  
**2 = Grade C**  
3 = Grade D

# Diagnostics Output 1

**Note:** Output On under Output 1 Parameters must be set to Diagnostic Warning for this output to function.



Under **Output 1 Parameters**, expand the **Diagnostics** tree.



**Serial Cmd:** <K790,unused 1,service unit>

**Default:** 0

**Options:** 0 = Disabled

## Service Unit

When **Diagnostic Warning** is enabled, the **Output On** configuration has no effect. The output will remain active as long as one of the diagnostic warning conditions is met. The output will become inactive once it detects that there are no diagnostic warning conditions.

**Definition:** Allows the user to set up the output to toggle to active when the service timer has expired. This condition will only be held for one service timer click.

**Note:** This feature cannot be used if the imager is in a **Continuous Read** mode.

**Serial Cmd:** <K790,unused 1,service unit>

**Default:** 0

**Options:** 0 = Disabled                    1 = Enabled

## Configurable Output 2

Note: Output 2 has the same parameters and default settings as Output 1.

[-] Output 2 Parameters	
[-] Output On	Symbol Quality
[-] Output State	Normally Closed
[-] Pulse Width	5
[-] Output Mode	Pulse
[+] Trend Analysis	
[+] Symbol Quality (ISO/IEC 16022)	
[+] Diagnostics	

Serial Cmd: <K811,output on,output state,pulse width,output mode>

## Trend Analysis Output 2

Note: Output On under Output 2 Parameters must be set to Trend Analysis for this output to function.

[-] Output 2 Parameters	
[-] Output On	Trend Analysis

Serial Cmd: <K781,trend analysis mode,trigger evaluation period,number to output on>

## ISO/IEC 16022 Symbol Quality Output 2

Note: Output On under Output 2 Parameters must be set to Symbol Quality for this output to function.

[-] Output 2 Parameters	
[-] Output On	Symbol Quality

Serial Cmd: <K801,output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,output on axial non-uniformity,axial non-uniformity threshold,output on UEC,UEC threshold>

## Diagnostics Output 2

Note: Output On under Output 2 Parameters must be set to Diagnostic Warning for this output to function.

[-] Output 2 Parameters	
[-] Output On	Diagnostic Warning

Serial Cmd: <K791,unused 1,service unit>

# Configurable Output 3

**Note:** Output 3 has the same parameters and default settings as **Output 1** and **Output 2**.

[-] Output 3 Parameters	
- Output On	Mismatch or Noread
- Output State	Normally Closed
- Pulse Width	5
- Output Mode	Pulse
[+] Trend Analysis	
[+] Symbol Quality (ISO/IEC 16022)	
[+] Diagnostics	

Serial Cmd: <**K812**,output on,output state,pulse width,output mode>

# Trend Analysis Output 3

**Note:** Output On under **Output 3 Parameters** must be set to **Trend Analysis** for this output to function.

[-] Output 3 Parameters	
- Output On	Trend Analysis

Serial Cmd: <**K782**,trend analysis mode,trigger evaluation period,number to output on>

# ISO/IEC 16022 Symbol Quality Output 3

**Note:** Output On under **Output 3 Parameters** must be set to **Symbol Quality** for this output to function.

[-] Output 3 Parameters	
- Output On	Symbol Quality

Serial Cmd: <**K802**,output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,output on axial non-uniformity,axial non-uniformity threshold,output on UEC,UEC threshold>

# Diagnostics Output 3

**Note:** Output On under **Output 3 Parameters** must be set to **Diagnostic Warning** for this output to function.

[-] Output 3 Parameters	
- Output On	Diagnostic Warning

Serial Cmd: <**K792**,unused 1,service unit>

## Power On/Reset Counts

**Note:** Power On/Reset Counts is a read-only command.

### Power-On

*Serial Cmd: <K406,power-on,resets,power-on saves,power-on flash saves>*

**Power-On** uses a 16-bit counter that increments each time the imager is powered-on.

### Resets

*Serial Cmd: <K406,power-on,resets,power-on saves,power-on flash saves>*

**Resets** uses a 16-bit counter that increments each time the imager is reset. This value is reset at power-on.

### Power-On Saves

*Serial Cmd: <K406,power-on,resets,power-on saves,power-on flash saves>*

**Power-On Saves** uses a 16-bit counter that increments each time an imager setting is saved for power-on with a **<Z>** command.

### Power-On Flash Saves

*Serial Cmd: <K406,power-on,resets,power-on saves,power-on flash saves>*

**Power-On Flash Saves** uses a 16-bit counter that increments each time an imager setting is saved to the customer parameter section of flash memory with a **<Zc>** command.

## Time Since Reset

**Note:** Time Since Reset is a read-only command.

### Hours

*Serial Cmd:* <K407, hours, minutes>

*Default:* **16-bit counter** (0 to 65535)

**Hours** uses a 16-bit counter that increments every 60 minutes.

### Minutes

*Serial Cmd:* <K407, hours, minutes>

*Default:* **16-bit counter** (0 to 60)

**Minutes** uses a 16-bit counter that increments every 60 seconds.

**Note:** Time counts are reset at power-on, but not with an <A> or <Z> command.

## Service Message

When **Service Message** is enabled, a message of up to 10 ASCII characters is sent whenever the system detects that the service timer's limit has been reached. The service timer is reset at power-on, meaning that the service timer's limit is the amount of time since last reset. Service timer increments can be set in seconds or minutes.

**Serial Cmd:** <**K409,status,service message,threshold,resolution**>

**Default:** **0**

**Options:** **0 = Disabled**      1 = Enabled

## Service Message

**Serial Cmd:** <**K409,status,service message,threshold,resolution**>

**Default:** **SERVICE**

**Options:** An ASCII string between 1 and 10 characters.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K409h,,3C**>

For >: <**K409h,,3E**>

For , : <**K409h,,2C**>

## Threshold

**Serial Cmd:** <**K409,status,service message,threshold,resolution**>

**Default:** **300** (5 minutes)

**Options:** 1 to 65535

## Resolution

**Serial Cmd:** <**K409,status,service message,threshold,resolution**>

**Default:** **Seconds**

**Options:** **0 = Seconds**      1 = Minutes

# Frame Information

## Output Frame Number

Serial Cmd: <**K734**,*output frame number*,*output coordinates*>

Default: **Disabled**

Options: **0 = Disabled**                    1 = Enabled

### Disabled

When **Output Frame Number** is set to **Disabled**, the frame number is not output as part of the symbol data.

### Enabled

When **Output Frame Number** is set to **Enabled**, the number of the frame in which the symbol was first decoded is attached to the symbol output information. The output format is “Fnnn”, where “nnn” is a 3-digit decimal value from 0 to 255. The frame number rolls over to 0 once it passes 255.

If this feature is enabled, the frame information will follow the symbol data, and it will precede any symbol quality data (if symbol quality settings are enabled—see [Symbol Quality Separator](#)). The symbol quality separator is located between the end of the already-formatted data and the “F” that precedes the frame number.

## Output Coordinates

Serial Cmd: <**K734**,*output frame number*,*output coordinates*>

Default: **Disabled**

Options: **0 = Disabled**                    1 = Enabled

### Disabled

When **Output Coordinates** is set to **Disabled**, the coordinates are not output as part of the symbol data.

### Enabled

When **Output Coordinates** is set to **Enabled**, the four sets of object coordinates for the first successfully decoded symbol are attached to the symbol data output in the following format:

“(nnn,mmm)”, where “nnn” is a 3-digit X-coordinate and “mmm” is a 3-digit Y-coordinate. The validation separator is located between the end of the already formatted data and the first coordinate point. The point with the lowest X + Y sum will be output first, followed by the next three points in a clockwise direction.

*Example:*

(032,040)(287,056)(287,279)(048,271)

# Image Output

**Usage:** This feature allows the user to select what read cycle condition triggers the image file output.

**Definition:** Used to output an image file when a specified read cycle condition has been met, such as No Read or Good Read. When the read cycle is complete, the normal read cycle output will occur, including any configured postamble or preamble data. The read cycle will check if image output is enabled, and if the specified read cycle condition has been met. If both these conditions are true, the image file will be output to the user-specified communication port in the user-specified image file format.

**Serial Cmd:** <**K739,image output mode,communication port,file format,JPEG quality>**

**Default:** **Disabled**

**Options:** **0 = Disabled**

1 = Good Read

2 = No Read

3 = No Read or Good Read

4 = Mismatch

## Good Read

If a Good Read condition is met during the read cycle, the image file corresponding with the first Good Read will be output. The image file will immediately follow the read cycle output and postambles. For a Good Read condition to occur, all symbols in the read cycle must qualify.

## No Read

If a No Read condition occurs during the read cycle, the image file corresponding with the first No Read will output. The image file will immediately follow the read cycle output and postambles. There are conditions in which the read cycle may have a No Read condition but the image will *not* be output. For example, if the read cycle is looking for two No Read symbols in the same image capture but one is a Good Read, the image will not be output, because it is not considered a No Read image.

## No Read or Good Read

If a No Read condition or a Good Read condition occurs, the first image of either kind will be output.

## Mismatch

If a Good Read occurs during the read cycle but the image is a Mismatch condition, the first Mismatch image will be output.

## Communication Port

**Definition:** This setting selects the communication port through which the image file will be transferred to the host.

**Serial Cmd:** <K739,image output mode,**communication port**,file format,JPEG quality>

**Default:** **Host**

**Options:** **0 = Host**                            1 = TCP Port 1                            2 = TCP Port 2

## File Format

**Definition:** This setting selects the format of the image file to be output.

Note: If JPEG is the chosen image file format, the resolution of the image will be determined by the setting in the **JPEG Quality** field.

**Serial Cmd:** <K739,image output mode,communication port,**file format**,JPEG quality>

**Default:** **JPEG**

**Options:** 0 = Bitmap                            **1 = JPEG**                                    2 = Binary

## JPEG Quality

**Definition:** This setting determines the quality of JPEG image compression. The user may select a value from 1 (lowest) to 100 (highest).

**Serial Cmd:** <K739,image output mode,communication port,file format,**JPEG quality**>

**Default:** **90**

**Options:** 1 to 100 (percent)

## ***Image Output Example***

The following example assumes that the imager is set to output on No Read, and that it is in a rapid capture mode of 3 captures.

***Number of Symbols:*** 1  
***Frame # 1:*** No Read  
***Frame # 2:*** No Read  
***Frame # 3:*** No Read  
***Read Cycle Result:*** No Read  
***Output Frame:*** **Frame # 1**

***Number of Symbols:*** 1  
***Frame # 1:*** No Read  
***Frame # 2:*** No Read  
***Frame # 3:*** Good Read  
***Read Cycle Result:*** Good Read  
***Output Frame:*** **None**

***Number of Symbols:*** 2  
***Frame # 1:*** No Read  
***Frame # 2:*** No Read  
***Frame # 3:*** Good Read, Symbol # 1  
***Read Cycle Result:*** No Read  
***Output Frame:*** **Frame # 1**

# Database Identifier Output

**Usage:** Useful in keeping track of which database entries read which symbols.

**Serial Cmd:** <K759,**status**,**separator**>

**Default:** 0

**Options:** 0 = Disabled                    1 = Enabled

## Output Status

### Disabled

When this command is disabled, no database identifier information will be output.

### Enabled

When this command is enabled, the imager will append a two-digit number and the characters “DB” to the data output following the separator for each symbol decoded using **Configuration Database**. For example, if the separator is an underscore character and the second database entry reads a symbol encoded with “data capture” during the read cycle, the symbol data output will be “data capture\_DB02”. If the database is not active, no identifiers will be attached to output.

## Separator

**Usage:** The separator character separates the symbol data from the database identifier.

**Serial Cmd:** <K759,**status**,**separator**>

**Default:** <space>

**Options:** Any ASCII character.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <K759h,,3C>

For >: <K759h,,3E>

For , : <K759h,,2C>

# Quality Output

## Separator

**Definition:** The separator character separates quality output data from symbol data.

**Serial Cmd:** <**K704,separator,decodes per trigger status**>

**Default:** ,

**Options:** Any ASCII character.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K704h,3C**>

For >: <**K704h,3E**>

For , : <**K704h,2C**>

## Decodes per Trigger Status

**Definition:** When this feature is enabled, the imager enters a state where it processes frames as configured until the end of a read cycle, with or without a successful symbol decode. When the read cycle ends, the imager outputs any decoded symbol data along with the decodes per trigger count.

**Serial Cmd:** <**K704,separator,decodes per trigger status**>

**Default:** 0

**Options:** 0 = **Disabled**                    1 = **Enabled**

# Configuring EZ Trax Output

After you have set up your imager for **EZ Trax**, you can configure the software in three different ways: using the **EZ Trax** interface, using the tree controls in **ESP**, and using serial commands.

For detailed information about how to use the **EZ Trax** user interface for configuration, refer to the Help menu in EZ Trax software, or the *EZ Trax Quick Start Guide*, available on the Microscan Tools Drive.

## Configuring EZ Trax Output by ESP

To configure **EZ Trax** using **ESP**, first click the **I/O** tab in **App Mode** to display the I/O Parameters tree control.

Parameters	ESP Values
- I/O Parameters	
+ Symbol Data Output	Good Read
+ Noread Message	Enabled
+ Read Duration Output	Disabled
+ Output Object Info	Disabled
+ Output Indicators	
+ Serial Verification	
+ Image Output	Disabled
+ EZ Trax Output	Disabled
Comm Port	Host
Image Mode	Disabled
Image Format	Compressed
JPEG Quality	90
Object Info Output	Disabled
Grade Output	Disabled
+ EZ Button	Enabled
+ Calibration Options	
+ Database Identifier Output	Disabled
+ Output 1 Parameters	
+ Output 2 Parameters	
+ Output 3 Parameters	
+ Quality Output	

## Configuring EZ Trax Output

### EZ Trax Output

EZ Trax Output	Enabled
Comm Port	Disabled*
Image Mode	Enabled
Image Format	Compressed
JPEG Quality	90
Object Info Output	Disabled
Grade Output	Disabled

When EZ Trax output is enabled, the imager will attempt to output all enabled EZ Trax options. EZ Trax will not function unless enabled.

### Comm Port

EZ Trax Output	Disabled
Comm Port	Host*
Image Mode	Host*
Image Format	TCP Port 1
JPEG Quality	TCP Port 2
Object Info Output	Disabled
Grade Output	Disabled

Selects the communication port that will be used to transfer image files.

### Image Mode

EZ Trax Output	Disabled
Comm Port	Host
Image Mode	Both Noread and Good Read
Image Format	Disabled*
JPEG Quality	Good Read
Object Info Output	Noread
Grade Output	Both Noread and Good Read
	Mismatch

Determines which read cycle condition triggers image file output.

### Image Format

EZ Trax Output	Enabled
Comm Port	Host
Image Mode	Disabled
Image Format	Compressed*
JPEG Quality	Lossless
Object Info Output	Compressed*
Grade Output	Disabled

Selects the format of the image output file.

## JPEG Quality

EZ Trax Output	Enabled
Comm Port	Host
Image Mode	Disabled
Image Format	Compressed
JPEG Quality	90 <input type="button" value="▼"/> (1 - 100) %
Object Info Output	Disabled
Grade Output	Disabled

Sets the amount of JPEG image compression. A value of **1** represents the highest compression and lowest image quality, and **100** represents the lowest compression and highest image quality.

## Object Info Output

EZ Trax Output	Enabled
Comm Port	Host
Image Mode	Disabled
Image Format	Compressed
JPEG Quality	90
Object Info Output	Disabled* <input type="button" value="▼"/>
Grade Output	Disabled* Enabled

If a symbol is decoded during an image capture, the symbol type and other supplementary symbol information is also included.

## Grade Output

EZ Trax Output	Enabled
Comm Port	Host
Image Mode	Disabled
Image Format	Compressed
JPEG Quality	90
Object Info Output	Disabled
Grade Output	Disabled* <input type="button" value="▼"/>
	Disabled* Enabled

Symbol quality information will be output in the form of an abbreviated identifier for each read cycle.

## Configuring EZ Trax Output by Serial Command

**Usage:** Useful for when you want to configure EZ Trax output using serial commands instead of the EZ Trax graphic interface.

**Definition:** When EZ Trax output is enabled, the imager will attempt to output all enabled EZ Trax options. EZ Trax will not function unless enabled.

**Serial Cmd:** <**K757**,**status**,**comm port**,**image mode**,**image format**,**JPEG quality**,**object info output**,**grade output**>

**Default:** **Disabled**

**Options:** **0 = Disabled**                    1 = Enabled

### Comm Port

**Definition:** Selects the communication port that will be used to transfer image files.

**Serial Cmd:** <**K757**,**status**,**comm port**,**image mode**,**image format**,**JPEG quality**,**object info output**,**grade output**>

**Default:** **Host**

**Options:** **0 = Host**                    1 = TCP Port 1                    2 = TCP Port 2

### Host Port

Sends output using the current Host Port.

### Image Mode

**Definition:** Determines which read cycle condition triggers image file output.

**Serial Cmd:** <**K757**,**status**,**comm port**,**image mode**,**image format**,**JPEG quality**,**object info output**,**grade output**>

**Default:** **Disabled**

**Options:** **0 = Disabled**

1 = Good Read

2 = No Read

3 = No Read and Good Read

4 = Mismatch

### Good Read

Outputs the first Good Read image in the read cycle. The image file will immediately follow the symbol data.

## No Read

Outputs the first No Read image in the read cycle. The image file will immediately follow the symbol data.

**Note:** If two symbols are present in the same image capture and one of them is successfully decoded, no image will be output.

## No Read and Good Read

Outputs the first No Read or Good Read image in the read cycle.

## Mismatch

Outputs the image of the first mismatch condition.

## Image Format

**Definition:** Selects the format of the image output file.

**Serial Cmd:** <K757,status,comm port,image mode,**image format**,JPEG quality,object info output, grade output>

**Default:** **Compressed**

**Options:** 0 = Lossless                           **1 = Compressed**

## Lossless

A “lossless” image is one that is in a high resolution format, and that will not lose resolution even when manipulated and saved multiple times. When Lossless is enabled, the JPEG Quality setting has no effect.

## Compressed

Outputs the image in JPEG format. Image quality is determined by the JPEG Quality setting.

## JPEG Quality

**Definition:** Sets the amount of JPEG image compression. A value of **1** represents the highest compression and lowest image quality, and **100** represents the lowest compression and highest image quality.

**Serial Cmd:** <K757,status,comm port,image mode,**image format**,**JPEG quality**,object info output, grade output>

**Default:** **90**

**Options:** 1 to 100 (percent)

## Object Info Output

**Definition:** If a symbol is decoded during an image capture, the symbol type and other supplementary symbol information is also included.

**Serial Cmd:** <**K757**,*comm port,image mode,image format,JPEG quality,object info output,grade output*>

**Default:** **Disabled**

**Options:** **0 = Disabled**                    1 = Enabled

## Grade Output

**Definition:** Symbol quality information will be output in the form of an abbreviated identifier for each read cycle.

**Serial Cmd:** <**K757**,*comm port,image mode,image format,JPEG quality,object info output,grade output*>

**Default:** **Disabled**

**Options:** **0 = Disabled**                    1 = Enabled


# **8 Symbol Quality**

## **Contents**

Symbol Quality by ESP.....	8-2
Symbol Quality Serial Commands .....	8-3
Overview of Symbol Quality.....	8-4
Symbol Quality Separator/Data Matrix Output Mode.....	8-8
ISO/IEC 16022 Symbol Quality Output.....	8-10
ISO/IEC 16022 Symbol Quality Output by ESP.....	8-12
Microscan Symbol Quality Output .....	8-13
Microscan Symbol Quality Output by ESP .....	8-16

This section describes parameters that, when enabled, will output detailed symbol quality evaluations.

## Symbol Quality by ESP

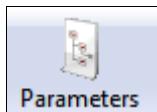

Click the **Parameters** button and then the **Symbol Quality** tab.

Parameters	ESP Values
Symbol Quality	
Global	
Symbol Quality Separator	SP
Output Mode	Grade
Data Matrix	
ISO/IEC 16022 Parameters	
Symbol Contrast	Disabled
Print Growth	Disabled
Axial Non-uniformity	Disabled
Unused ECC	Disabled*
Grading	

A blue arrow points from the 'Parameters' icon to the 'Parameters' column of the table. Another blue arrow points from the 'Symbol Quality' tab to the 'Symbol Quality' row. A third blue arrow points from the '+' sign next to 'Unused ECC' to the 'Unused ECC' row. A fourth blue arrow points from the dropdown menu to the 'Disabled\*' option.

To open nested options,  
**single-click** the +.

To change a setting, **double-click** the setting and use your cursor to scroll through the options.

# Symbol Quality Serial Commands


Symbol Quality Separator/ Data Matrix Output Mode	< <b>K708</b> ,symbol quality separator,data matrix output mode>
ISO/IEC 16022 Symbol Quality Output	< <b>K709</b> ,symbol contrast,print growth,axial non-uniformity, unused ECC>
Microscan Symbol Quality Output	< <b>K710</b> ,percent cell damage,total read time,capture time,locate time,decode time,pixels per element,ECC level,matrix size,quiet zone,symbol angle>
Static Validation Report	< <b>VAL</b> >

# Overview of Symbol Quality

Information about symbol quality and timing can be appended to symbol data by enabling specific evaluation parameters. The order in which these values are appended corresponds directly to the order in which they appear in **ESP's Symbol Quality** tree control.

Symbol Quality parameters are separated into ISO/IEC 16022 Symbol Quality Output and Microscan Symbol Quality Output.

**Total Read Time**, **Symbol Quality Separator**, and **Output Mode** are common to both ISO/IEC 16022 and Microscan Grading Parameters.

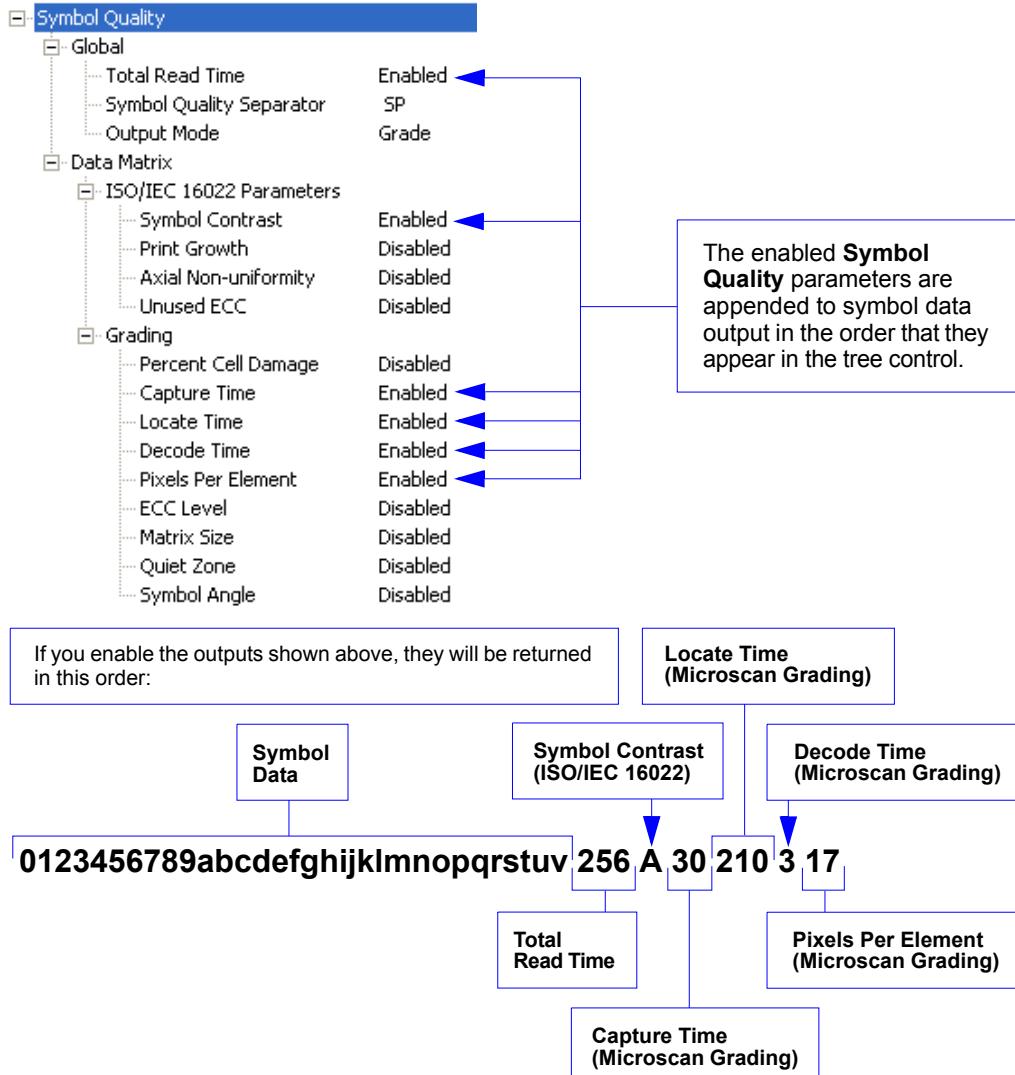


## Report Tab

The Report tab allows the user to initiate **Data Matrix Grading** and to generate and save grading reports.

To save the report as a PDF file, an HTML file, a CSV file, or an RTF file, click the **Save Report** button.


Reports appear in the viewing area underneath the **Data Matrix Grading** and **Save Report** buttons.

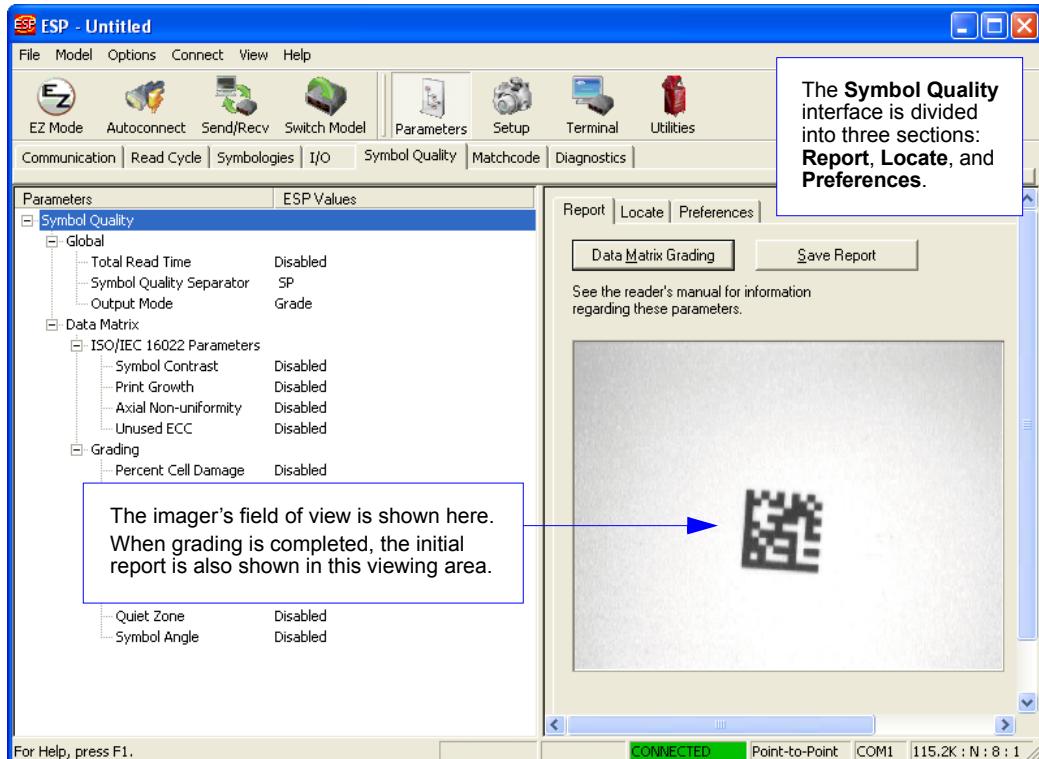

## Overview of Symbol Quality


### Locate Tab

The **Locate** tab allows the user to determine the position of the symbol within the imager's field of view, and to optimize the imager's camera settings for symbol quality evaluation.

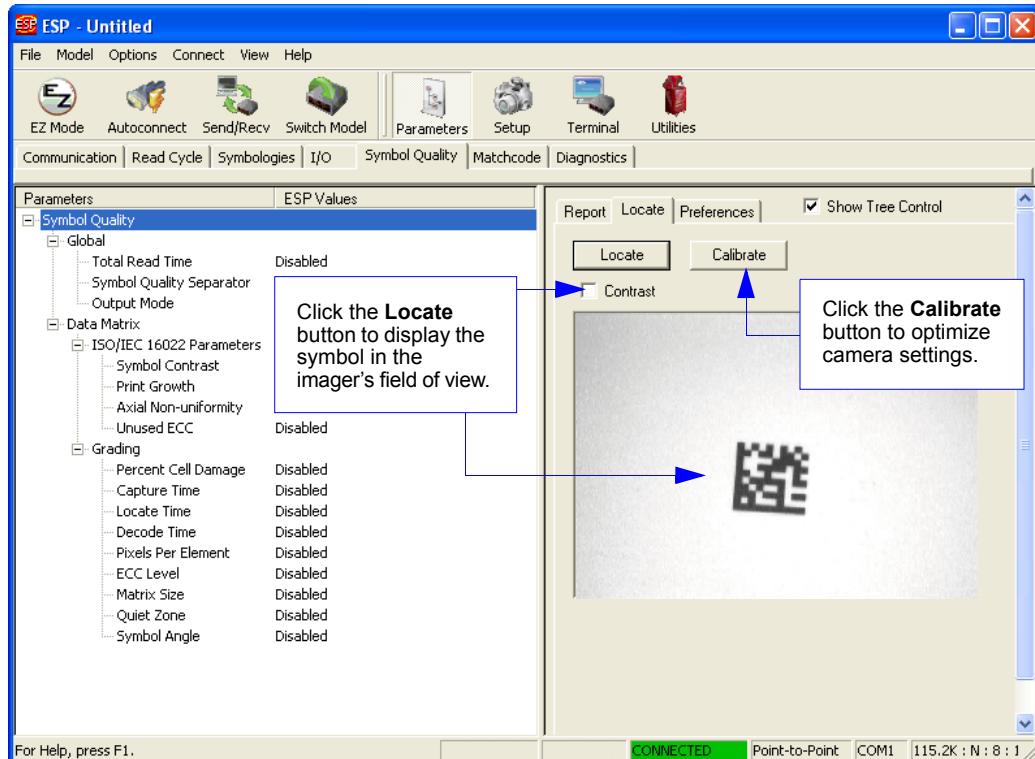

## Preferences Tab

The **Preferences** tab allows the user to set defaults that are automatically activated when grading is completed. For this reason, the user is advised to set preferences before performing grading.

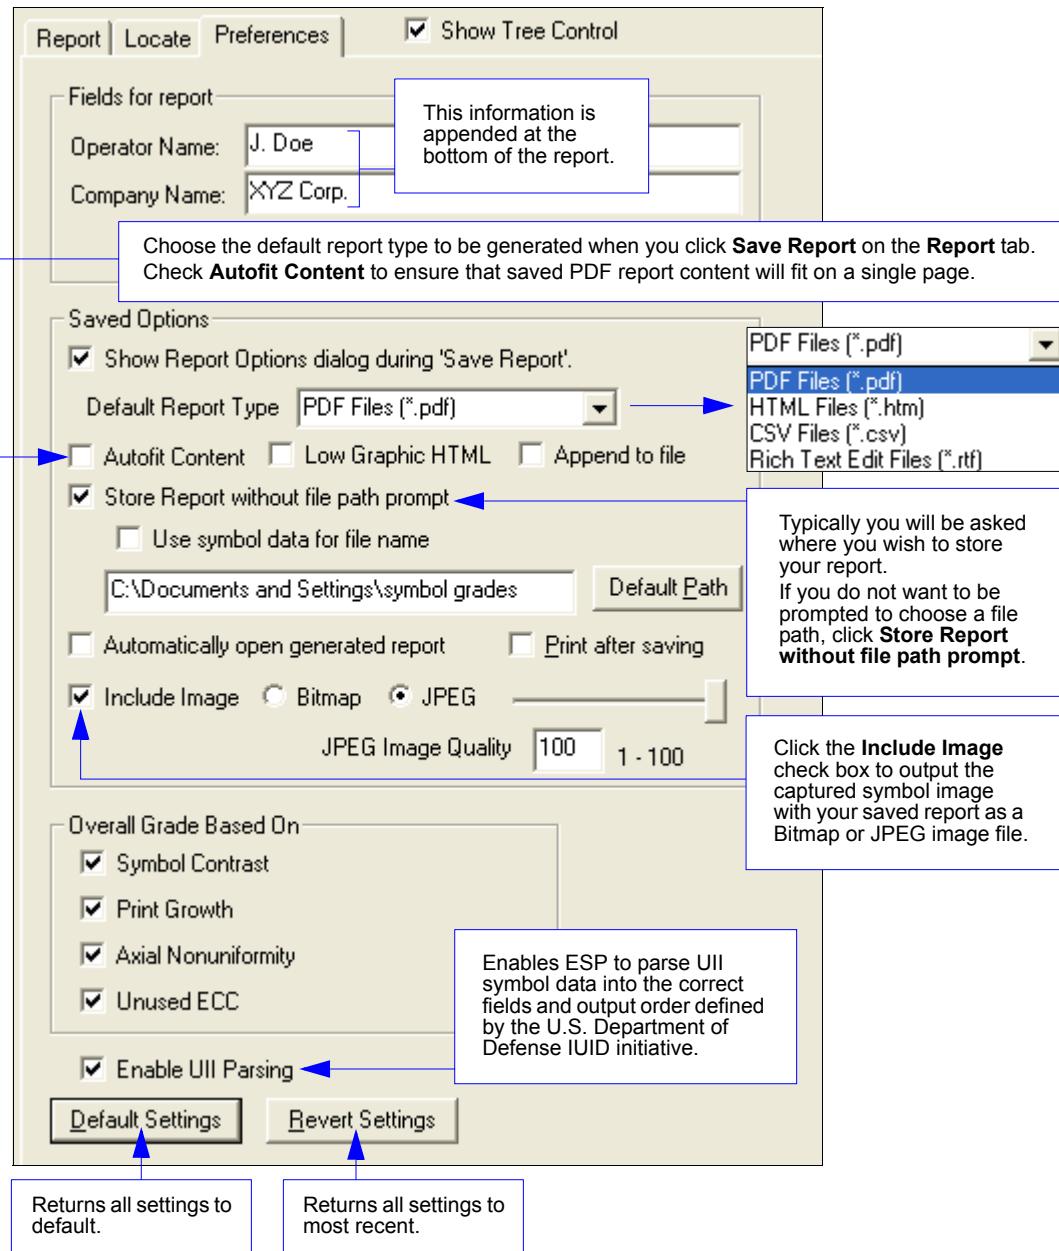

# Symbol Quality Separator/Data Matrix Output Mode

Symbol Quality Separator applies to both Symbol Quality groups: ISO/IEC 16022 Symbol Quality Output and Microscan Symbol Quality Output.

## Symbol Quality Separator

**Definition:** Inserts a separator between each enabled field of the symbol quality output.

**Serial Cmd:** <K708,symbol quality separator,output mode>

**Default:** <SP> (space character)

**Options:** Any ASCII character.


**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <K708h,3C>

For >: <K708h,3E>

For , : <K708h,2C>

## Symbol Quality Separator by ESP

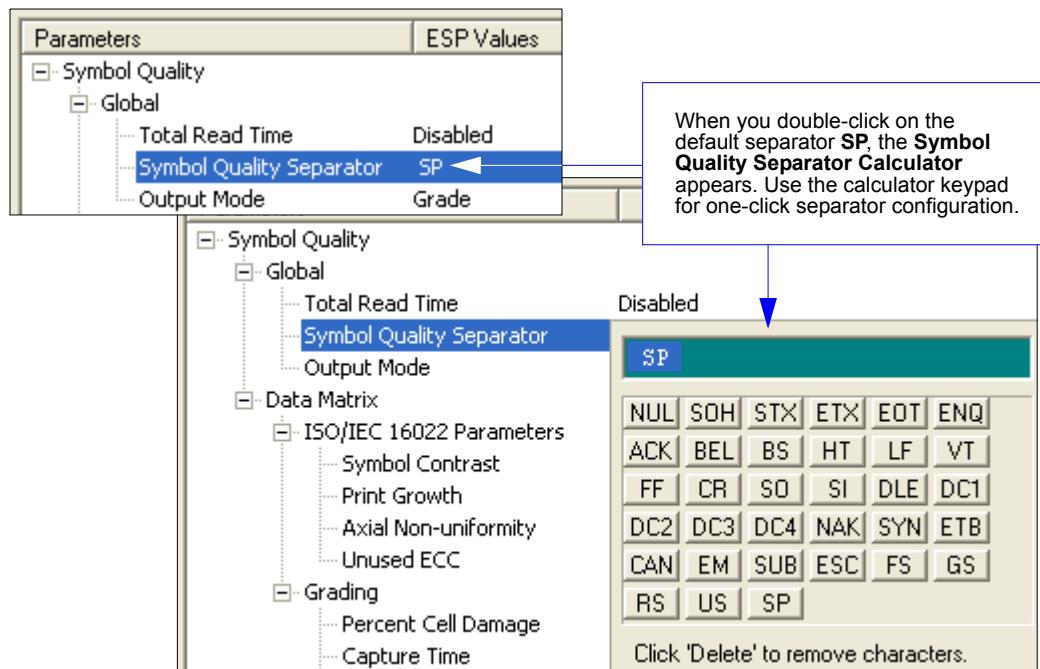

## Data Matrix Output Mode

**Note:** Output Mode applies to ISO/IEC 16022 symbol quality parameters.

**Definition:** Output Mode specifies how the four output parameters, if enabled, are formatted.

**Serial Cmd:** <**K708**,symbol quality separator,**output mode**>

**Default:** **Grade**

**Options:** **0 = Grade**              1 = Value

### Grade

If in **Grade Mode**, a grade (A,B,C,D) is appended to the symbol data.

### Value

If in **Value Mode**, the calculated value for the given parameter is appended to the symbol data.

# ISO/IEC 16022 Symbol Quality Output

Symbol Quality Parameters for Data Matrix symbols specified by ISO/IEC 16022.

## Symbol Contrast

**Usage:** Lets the user know if contrast settings are less than acceptable.

**Definition:** All the pixels that fall within the area of the test symbol, including its required zone, will be sorted by their reflectance values to select the darkest 10% and the lightest 10% of the pixels. The arithmetic mean of the darkest and the lightest pixels is calculated and the difference of the two means is the Symbol Contrast.

(ANSI) Symbol Contrast grading is defined this way:

- A (4.0) if SC > 70%
- B (3.0) if SC > 55%
- C (2.0) if SC > 40%
- D (1.0) if SC > 20%
- F (0.0) if SC < 20%

If enabled, the symbol contrast is appended to the symbol data according to the **ISO/IEC 16022 Symbol Quality Output Mode** setting.

**Serial Cmd:** <**K709,symbol contrast,print growth,axial non-uniformity,UEC**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## Print Growth

**Definition:** The extent to which dark or light markings appropriately fill or exceed their module boundaries. These values are determined by counting pixels in the clock pattern of the binary digitized image, then comparing it to a nominal value and minimum and maximum values. The print growth grade is defined in this way:

- A (4.0) if  $-0.050 < PG < 0.50$
- B (3.0) if  $-0.070 < PG < 0.70$
- C (2.0) if  $-0.085 < PG < 0.85$
- D (1.0) if  $-0.10 < PG < 1.00$
- F (0.0) if  $PG < -1.00$  or  $PG > 1.00$

If enabled, the print growth is appended to the symbol data according to the **ISO/IEC 16022 Symbol Quality Output Mode** setting.

**Serial Cmd:** <**K709,symbol contrast,print growth,axial non-uniformity,UEC**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled

## Axial Non-Uniformity (Data Matrix Only)

**Definition:** Axial non-uniformity is a measure of how much the sampling point spacing differs from one axis to another, namely  $AN = \text{abs}(\bar{XAVG} - \bar{YAVG}) / ((\bar{XAVG} + \bar{YAVG})/2)$  where  $\text{abs}()$  yields the absolute value. If a symbology has more than two major axes, then AN is computed for those two average spacings which differ the most. (ANSI) axial non-uniformity grading is defined this way:

- A (4.0) if  $AN < .06$
- B (2.0) if  $AN < .08$
- C (2.0) if  $AN < .10$
- D (1.0) if  $AN < .12$
- F (0.0) if  $AN > .12$

If enabled, the axial non-uniformity is appended to the symbol data according the **ISO/IEC 16022 Symbol Quality Output Mode** setting.

**Serial Cmd:** <**K709**,symbol contrast,print growth,**axial non-uniformity**,UEC>

**Default:** **Disabled**

**Options:** **0 = Disabled**                            1 = Enabled

## Unused Error Correction (Data Matrix Only)

**Definition:** The correction capacity of Reed-Solomon decoding is expressed in the equation:  $e + 2d < d - p$ , where **e** is the number of erasures, **d** is the number of error correction code words, and **p** is the number of code words reserved for error detection.

- A (4.0) if  $UEC > .62$
- B (3.0) if  $UEC > .50$
- C (2.0) if  $UEC > .37$
- D (1.0) if  $UEC > .25$
- F (0.0) if  $UEC < .25$

If enabled, the UEC is appended to the symbol data according to the **ISO/IEC 16022 Symbol Quality Output Mode** setting.

**Serial Cmd:** <**K709**,symbol contrast,print growth,**axial non-uniformity**,**UEC**>

**Default:** **Disabled**

**Options:** **0 = Disabled**                            1 = Enabled

# ISO/IEC 16022 Symbol Quality Output by ESP

ESP's **Symbol Quality** interface allows you to evaluate Data Matrix symbols for compliance with ISO/IEC 16022 requirements.

First, determine which ISO/IEC 16022 Parameters you need to evaluate, using the **Symbol Quality** tree control.

- Data Matrix
  - ISO/IEC 16022 Parameters
    - Symbol Contrast Enabled
    - Print Growth Enabled
    - Axial Non-uniformity Enabled
    - Unused ECC Enabled

Once you have set these Data Matrix evaluation parameters, go to the [Preferences Tab](#) and set your Data Matrix Grading Report output preferences.



After your output preferences are set, click the **Data Matrix Grading** button.

**Data Matrix Grading**

There will be a wait of a few seconds, and then the evaluation results will appear in the **Symbol Quality** view, in a format similar to the one shown below.

Data Matrix Grading Report					
ISO/IEC 16022:	Symbol Contrast	= 89 %	Dx = 51 %	Dnom = 50 %	GRADE A
	Print Growth	= 0.26	Dy = 54 %	Dmax = 65 %	
				Dmin = 35 %	
	Axial Nonuniformity	= 0.00	Xavg = 13.2	Yavg = 13.1	GRADE A
	Unused ECC	= 100 x	Eact = 0		
			Emax = 10		
GRADING:	% Cell Damage	= 0 %			
	Total Read Time	= 99 ms			
	Capture Time	= 65 ms			
	Locate Time	= 27 ms			
	Decode Time	= 7 ms			
	Bytes/Element	= 13.1			
	ECC Level	= 200			
	Matrix Size	= 14x14			
	Quiet Zone	= PASS			

If you want to view the results in a report format, click the **Save Report** button. The report will be output in the format you chose in the [Preferences](#) dialog.

**Save Report...**

# Microscan Symbol Quality Output

## Percent Cell Damage (Data Matrix Only)

<b>Definition:</b>	When this feature is enabled, the cell damage percentage is appended to data output.
<b>Serial Cmd:</b>	< <b>K710,percent cell damage</b> ,total read time,capture time,locate time,decode time,pixels per element,ECC level,matrix size,quiet zone,symbol angle>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

## Total Read Time

<b>Definition:</b>	The time that transpires between the image capture and the output of the decoded data, including locate time. When enabled, the total read time is appended to the symbol data.
<b>Serial Cmd:</b>	< <b>K710,percent cell damage,total read time</b> <sup>a</sup> ,capture time,locate time,decode time,pixels per element,ECC level,matrix size,quiet zone,symbol angle>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

a. Total Read Time applies globally to all three Symbol Quality standards.

## Capture Time

<b>Definition:</b>	Capture time (in milliseconds) is a fixed “overhead” that includes the time of capture and transfer of the image. When enabled, the capture time is appended to the symbol data.
<b>Serial Cmd:</b>	< <b>K710,percent cell damage,total read time,capture time</b> ,locate time,decode time,pixels per element,ECC level,matrix size,quiet zone,symbol angle>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

## Locate Time

<b>Definition:</b>	The time in milliseconds from the start of image processing until the symbol has been located and is ready to be decoded. When enabled, the locate time is appended to the symbol data.
<b>Serial Cmd:</b>	< <b>K710,percent cell damage,total read time,capture time,locate time</b> ,decode time,pixels per element,ECC level,matrix size,quiet zone,symbol angle>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

## Decode Time

**Definition:** The time in milliseconds required to decode a symbol.  
When enabled, the decode time is appended to the symbol data.

**Serial Cmd:** <**K710**,percent cell damage,total read time,capture time,locate time,**decode time**,pixels per element,ECC level,matrix size,quiet zone,symbol angle>

**Default:** **Disabled**

**Options:** **0 = Disabled** 1 = Enabled

## Pixels Per Element (Data Matrix Only)

**Definition:** The number of pixels for each element, either dark or light for both **x** and **y** directions.  
When enabled, the pixels per element value is appended to the symbol data.

**Serial Cmd:** <**K710**,percent cell damage,total read time,capture time,locate time,decode time,**pixels per element**,ECC level,matrix size,quiet zone,symbol angle>

**Default:** **Disabled**

**Options:** **0 = Disabled** 1 = Enabled

## Error Correction Level (Data Matrix Only)

**Definition:** Outputs the Data Matrix ECC level.  
When enabled, the ECC level is appended to the symbol data.

**Serial Cmd:** <**K710**,percent cell damage,total read time,capture time,locate time,decode time,pixels per element,**ECC level**,matrix size,quiet zone,symbol angle>

**Default:** **Disabled**

**Options:** **0 = Disabled** 1 = Enabled

## Matrix Size (Data Matrix Only)

**Definition:** Defines the symbol matrix size, in number of pixels in both the **x** and **y** axis.  
When enabled, the matrix size value is appended to the symbol data.

**Serial Cmd:** <**K710**,percent cell damage,total read time,capture time,locate time,decode time,pixels per element,ECC level,**matrix size**,quiet zone,symbol angle>

**Default:** **Disabled**

**Options:** **0 = Disabled** 1 = Enabled

## **Quiet Zone (Data Matrix Only)**

**Definition:** When this feature is enabled, the size of the quiet zone is evaluated and a PASS or FAIL message is appended to the symbol data.

**Serial Cmd:** <**K710,percent cell damage,total read time,capture time,locate time,decode time,pixels per element,ECC level,matrix size,quiet zone,symbol angle**>

**Default:** **Disabled**

**Options:** **0 = Disabled** 1 = Enabled

## **Symbol Angle (Data Matrix Only)**

**Definition:** When this feature is enabled, the symbol orientation is appended to data output as a degree value representing the angle of the Data Matrix symbol's L-shaped finder pattern relative to the imager.

**Serial Cmd:** <**K710,percent cell damage,total read time,capture time,locate time,decode time,pixels per element,ECC level,matrix size,quiet zone,symbol angle**>

**Default:** **Disabled**

**Options:** **0 = Disabled** 1 = Enabled


# Microscan Symbol Quality Output by ESP

ESP's **Symbol Quality** interface allows you to evaluate Data Matrix symbols for compliance with a rigorous set of standards, such as Locate Time, Capture Time, and Decode Time.

First, determine which parameters you want to evaluate, using the **Symbol Quality** tree control.

Grading	
Percent Cell Damage	Disabled
Capture Time	Disabled
Locate Time	Disabled
Decode Time	Disabled
Pixels Per Element	Disabled
ECC Level	Disabled
Matrix Size	Disabled
Quiet Zone	Disabled
Symbol Angle	Disabled

Once you have set these Data Matrix evaluation parameters, go to the [Preferences Tab](#) and set your Data Matrix Grading Report output preferences.

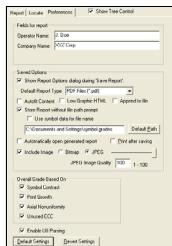

After your output preferences are set, click the **Data Matrix Grading** button.

**Data Matrix Grading**

There will be a wait of a few seconds, and then the evaluation results will appear in the **Symbol Quality** view, in a format similar to the one shown below.

Data Matrix Grading Report					
ISO/IEC 16022:	Symbol Contrast = 88 %	Dx = 51 %	Dy = 54 %	Dnom = 50 %	GRADE A
	Print Growth = 0.26	Dmax = 65 %	Dmin = 35 %		A
	Axial Nonuniformity = 0.00	Xavg = 13.2			A
	Unused ECC = 100 %	Yavg = 13.1			A
GRADING:	% Cell Damage = 8 %	Eact = 10	Emax = 10		
	Total Read Time = 99 ms				
	Capture Time = 65 ms				
	Locate Time = 27 ms				
	Decode Time = 7 ms				
	Pixels Per Element = 13				
	ECC Level = 200				
	Matrix Size = 14x14				
	Quiet Zone = PASS				

If you want to view the results in a report format, click the **Save Report** button. The report will be output in the format you chose in the **Preferences** dialog.

**Save Report...**


# 9 Matchcode

## Contents

Matchcode by ESP .....	9-2
Matchcode Serial Commands .....	9-3
Overview of Matchcode .....	9-4
Matchcode Type .....	9-5
Match Replace.....	9-10
Mismatch Replace .....	9-11
New Master Pin .....	9-12

This section explains the MS-4Xi's matchcode output functions and the master symbol database setup.

## Matchcode by ESP

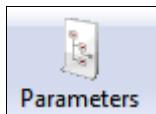

Click the **Parameters** button and then the **Matchcode** tab.

Parameters	ESP Values
Matchcode	
... Matchcode Type	Disabled
... Sequential Matching	Increment
... Match Start Position	0
... Match Length	1
... Wild Card	*
... Sequence on No Read	Enabled
... Sequence on Mismatch	Disabled
New Master Pin	Disabled*
Match Replace	
... Replacement String	Disabled*
Mismatch Replace	
... Replacement String	Disabled

To open nested options,  
**single-click** the +.

To change a setting,  
**double-click** the  
setting and use your  
cursor to scroll  
through the options.

# Matchcode Serial Commands

Matchcode Type	<K223,matchcode type,sequential matching,match start position,match length,wild card character,sequence on No Read,sequence on mismatch>
Number of Master Symbols	<K224,number of master symbols>
New Master Pin	<K225,status>
Enter Master Symbol Data	<K231,master symbol number,master symbol data>
Request Master Symbol Data	<K231?,>[for all] or <K231?,master symbol number>
Delete Master Symbol Data	<K231,master symbol number,>
Match Replace	<K735,status,match replacement string>
Mismatch Replace	<K736,status,mismatch replacement string>

## Overview of Matchcode

**Definition:** **Matchcode** allows the user to store master symbol data in the imager's memory, compare that data against other symbol data, and define how symbol data and/or discrete signal output will be directed.

A master symbol database can be set up for up to 10 master symbols.

**Note:** **Matchcode** will function with multiple symbols; however, if **Matchcode Type** is set to **Sequential** or if **Triggering Mode** is set to **Continuous Read 1 Output**, the imager will behave as if **Number of Symbols** were set to 1, regardless of the user-defined configuration.

**Usage:** Matchcode is used in applications to sort, route, or verify data based on matching the specific symbol in a variety of ways as defined in this section. For example, a manufacturer might sort a product based on dates that are embedded in the symbol.

### Steps for Entering and Using Master Symbols


1. Set **Triggering Mode** to **External** or **Serial**.
2. Choose the method of symbol comparison that fits your application.
3. Define the output you want to achieve with your matchcode setup:
  - a. Symbol data output
  - b. Discrete output
4. Select the number of master symbols you want to create.
5. Decide which of 4 ways you want to enter your master symbol(s):
  - a. Use **ESP** to type master symbol data directly.
  - b. Send a serial command with symbol data in the form of <**M231,master symbol#, data**>.
  - c. Send a <**G**> (**Read Next Symbol as Master Symbol**) command.
  - d. Enable the **New Master Pin** command and activate the discrete input to store the next symbol read as the master symbol.

# Matchcode Type

**Definition:** Allows the user to choose the way that master symbols will be compared with subsequently read symbols.

**Note:** First set **Triggering Mode** to **External** or **Serial**.

ESP:

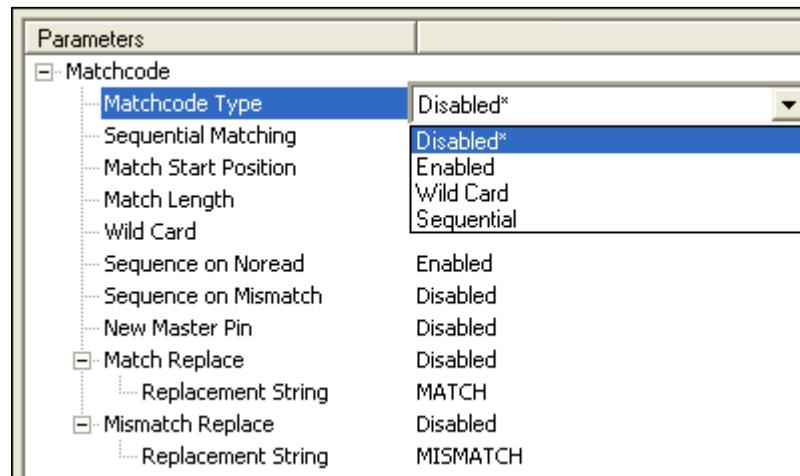

**Serial Cmd:** <**K223,matchcode type,sequential matching,match start position,match length,wild card character,sequence on No Read,sequence on mismatch**>

**Default:** **Disabled**

**Options:** **0 = Disabled**

1 = Enabled

2 = Wild Card

3 = Sequential

**Disabled:** Has no effect on operations.

**Enabled:** Instructs the imager to compare symbols or portions of symbols with the master symbol.

**Wild Card:** Allows the user to enter user-defined wild card characters in the master symbol.

**Sequential:** Instructs the imager to sequence after each match (numeric only) and compare symbols or portions of symbols for sequential numbers.

**Note:** If **Matchcode Type** is set to **Sequential**, the imager will behave as if **Number of Symbols** were set to **1**, regardless of the user-defined configuration.

## Sequential Matching

Usage:	Useful in tracking product serial numbers that increment or decrement sequentially.
Definition:	With Sequential enabled, Sequential Matching determines if a count is in ascending (incremental) or descending (decremental) order.
Serial Cmd:	<K223,matchcode type, <b>sequential matching</b> ,match start position,match length,wild card character,sequence on No Read,sequence on mismatch>
Default:	<b>Increment</b>
Options:	<b>0 = Increment</b> 1 = Decrement

## Match Start Position

Usage:	<b>Match Start Position</b> is useful in defining specific portions of a symbol for comparison. For example, if a symbol contains a part number, manufacturing date, and lot code info, but you are only interested in the part number information, you can set the imager to sort only the part number and ignore the other characters.
Definition:	<b>Match Start Position</b> determines the portions of symbols that will be matched by defining the first character in the symbol (from left to right) that will be compared with those of the master symbol, when <b>Matchcode Type</b> is set to <b>Enabled</b> or <b>Sequential</b> .
Function:	For example, if <b>Match Start Position</b> is set to <b>3</b> , the first 2 characters read in the symbol will be ignored and only the 3rd and subsequent characters to the right will be compared, up to the number of characters specified by <b>Match Length</b> .
Serial Cmd:	<K223,matchcode type,sequential matching, <b>match start position</b> ,match length,wild card character,sequence on No Read,sequence on mismatch>
Default:	<b>0</b>
Options:	0 to 3000

**Note:** **Match Start Position** must be set to **1** or greater to enable this feature. A **0** setting will disable this feature.

## Match Length

Usage:	<b>Example:</b> If <b>Match Length</b> is set to <b>6</b> in a 10-character symbol, and <b>Match Start Position</b> is set to <b>2</b> , only the 2nd through 7th characters (from left to right) will be compared.
Definition:	Defines the length of the character string that will be compared with that of the master symbol when <b>Match Start Position</b> is set to <b>1</b> or greater. When <b>Match Start Position</b> is set to <b>0</b> , no comparison will occur.
Serial Cmd:	<K223,matchcode type,sequential matching, <b>match start position</b> , <b>match length</b> ,wild card character,sequence on No Read,sequence on mismatch>
Default:	<b>1</b>
Options:	1 to 3000

## Wild Card Character

- Usage:* Example: With **Wild Card Character** defined as the default asterisk, defining CR\*34 as the master symbol will result in matches for CR134 and CR234, but not CR2345. Entering URGENT\*\* as your master symbol will result in matches for URGENT, URGENT1, and URGENT12 but not for URGENT123. This means any wild cards appended to the master symbol data will result in matches of symbols in variable lengths up to the master symbol lengths but not over. However, wild cards in the beginning or center of a symbol (e.g., UR\*\*NT) do not allow for variable symbol lengths.
- Definition:* Wild Card Character allows a user to define a wild card character as part of the master symbol.
- Serial Cmd:* <**K223**,matchcode type,sequential matching,match start position,match length,**wild card character**,sequence on No Read,sequence on mismatch>
- Default:* \* (asterisk)
- Options:* Any ASCII character.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K223h,„,3C**>

For >: <**K223h,„,3E**>

For , : <**K223h,„,2C**>

## Sequence on No Read

Usage:	Sequence on No Read is useful when the imager needs to stay in sequence even if no decode occurs.
Definition:	When Sequence on No Read is Enabled and Matchcode is set to Sequential, the imager sequences the master symbol on every match or No Read. When disabled, it does not sequence on a No Read.
Serial Cmd:	<K223,matchcode type,sequential matching,match start position,match length,wild card character, <b>sequence on No Read</b> ,sequence on mismatch>
Default:	<b>Enabled</b>
Options:	0 = Disabled <b>1 = Enabled</b>

As an example of **Sequence on No Read Enabled**, consider the following decodes:

Master Symbol	Decoded Symbol	Master Symbol after Decode
001	001	002
002	002	003
003	No Read	004 (sequenced on No Read)
004	004	005
005	No Read	006 (sequenced on No Read)
006	No Read	007 (sequenced on No Read)
007	007	008

As an example of **Sequence on No Read Disabled**, consider the following series of decodes:

Master Symbol	Decoded Symbol	Master Symbol after Decode
001	001	002
002	002	003
003	No Read	003 (not sequenced)
003	003	004
004	No Read	004 (not sequenced)
004	No Read	004 (not sequenced)
004	004	005

## Sequence on Mismatch

**Note:** Matchcode must be set to **Sequential** for this command to function.

**Usage:** Enable this parameter if every trigger event should have a decode and more than one consecutive mismatch may occur.

Disable this parameter if every trigger event should have a decode but no more than one consecutive mismatch may occur.

**Definition:** When set to Enabled, the master symbol sequences on every decode, match, or mismatch.

When set to Disabled, the master symbol will not sequence whenever consecutive mismatches occur.

**Serial Cmd:** <K223,matchcode type,sequential matching,match start position,match length,wild card character,sequence on No Read,**sequence on mismatch**>

**Default:** **Disabled**

**Options:** **0 = Disabled**                    1 = Enabled

The imager will sequence the master to one more or one less than the decoded symbol.

As an example of **Sequence on Mismatch Enabled**, consider the following decodes:

<b>Master Symbol</b>	<b>Decoded Symbol</b>	<b>Master Symbol after Decode</b>
001	001	002
002	002	003
003	abc	004 (sequenced on mismatch)
004	004	005
005	def	006 (sequenced on mismatch)
006	ghi	007 (sequenced on mismatch)
007	007	008

As an example of **Sequence on Mismatch Disabled**, consider the following decodes:

<b>Master Symbol</b>	<b>Decoded Symbol</b>	<b>Master Symbol after Decode</b>
001	001	002
002	002	003
003	abc	004 (sequenced because of previous match)
004	004	005
005	def	006 (sequenced because of previous match)
006	ghi	006 (not sequenced)
006	006	007

## Match Replace

<b>Usage:</b>	Provides a convenient shortcut for applications that need to output a predefined text string whenever a symbol matches a master symbol.
<b>Definition:</b>	Outputs a user-defined data string whenever a match occurs and <b>Matchcode</b> is enabled.
<b>Serial Cmd:</b>	< <b>K735</b> , <b>status</b> , <b>replacement string</b> >
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = Enabled

## Replacement String

<b>Definition:</b>	User-defined data string that, when enabled, replaces symbol data whenever a match occurs.
<b>Serial Cmd:</b>	< <b>K735</b> , <b>status</b> , <b>replacement string</b> >
<b>Default:</b>	<b>MATCH</b>
<b>Options:</b>	An ASCII string up to 64 characters.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K735h,,3C**>

For >: <**K735h,,3E**>

For , : <**K735h,,2C**>

## Mismatch Replace

<i>Usage:</i>	Provides a convenient shortcut for applications that need to output a predefined text string whenever a symbol does not match a master symbol.
<i>Definition:</i>	Outputs a user-defined data string whenever a mismatch occurs and <b>Matchcode</b> is enabled.
<i>Serial Cmd:</i>	< <b>K736</b> , <i>status,replacement string</i> >
<i>Default:</i>	<b>Disabled</b>
<i>Options:</i>	<b>0 = Disabled</b> <b>1 = Enabled</b>

### *Replacement String*

<i>Definition:</i>	User-defined data string that, when enabled, replaces symbol data whenever a mismatch occurs.
<i>Serial Cmd:</i>	< <b>K736</b> , <i>status,replacement string</i> >
<i>Default:</i>	<b>MISMATCH</b>
<i>Options:</i>	An ASCII string up to 64 characters.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs:

For <: <**K736h,,3C**>

For >: <**K736h,,3E**>

For , : <**K736h,,2C**>

## New Master Pin

<i>Definition:</i>	If Matchcode and New Master Pin are enabled and the new master pin is momentarily connected to ground (must be held low for a minimum of 10 ms) master symbol information will be loaded into the database based on the next read cycle that achieves a Good Read, starting with Index 1. The Master Symbol Database will be loaded with all symbols decoded in the read cycle as long as it does not exceed the Number of Master Symbols parameter.
<i>Serial Cmd:</i>	< <b>K225,status</b> >
<i>Default:</i>	<b>Disabled</b>
<i>Options:</i>	<b>0 = Disabled</b> 1 = Enabled

## New Master Load Status

<i>Definition:</i>	The new master status responds with the number of the next master position to be loaded, where 0 represents “idle” or “no master to be loaded.”
<i>Example:</i>	If the user has the Number of Master Symbols set to 1, and then either sends a < <b>G</b> > or toggles an active New Master Pin, the state will be <b>1</b> , and prior to reading and effectively loading position <b>1</b> , the response to < <b>NEWM</b> > would be < <b>NEWM/1</b> >. Once a symbol has been read and loaded, the status will be cleared: < <b>NEWM/0</b> >.
<i>Serial Cmd:</i>	< <b>NEWM</b> >

# ■ 10 Camera and IP Setup

## Contents

Camera and IP Setup by ESP .....	10-2
Camera and IP Setup Serial Commands.....	10-3
Video.....	10-4
Evaluation .....	10-5
Calibration.....	10-8
Window of Interest .....	10-9
Configuration Database.....	10-12
Dynamic Setup .....	10-13
X-Mode™ .....	10-14
Pixel Sub-Sampling .....	10-15
Camera Settings .....	10-17
Focal Distance .....	10-19
Focal Distance Table (Read-Only) .....	10-20
Mirrored Image .....	10-21
Illumination Brightness.....	10-22
Skew Correction .....	10-23
Morphological Pre-Processing.....	10-26
Morphological Operation and Operator Size .....	10-27

This section provides adjustment parameters for the physical controls of the camera, image acquisition, database settings, and image diagnostics.

# Camera and IP Setup by ESP



Click the **Setup** button to bring up the **Camera Setup** menu.

Parameters	ESP Values
Camera Setup	
Camera Settings	
Gain	20
Shutter Speed	1000
Illumination Brightness	High
Focus Distance	4.00
Camera Features	
Sub-sampling	Disabled
AEC/AGC Mode	Disabled
AEC/AGC Brightness	30
Window of Interest	
Top	0
Left	0
Height	480
Width	752
Image Processing Settings	
Image Processing Timeout	5000
Background Color	White
Mirrored Image	Regular Image
Morphological Preprocessing	Disabled
Operation	Erode*
Operator Size	

To open nested options, **single-click** the +.


# Camera and IP Setup Serial Commands

Mirrored Image	< <b>K514</b> , <i>mirrored image</i> >
Window of Interest	< <b>K516</b> , <i>row pointer, column pointer, row depth, column width</i> >
Focal Distance	< <b>K525</b> , <i>focal distance</i> >
Focal Distance Table (Read-Only)	< <b>K526</b> , <i>number of focal distances, focal distance</i> >
Illumination Brightness	< <b>K536</b> , <i>brightness</i> >
Skew Correction	< <b>K537</b> , <i>line speed, symbol direction</i> >
Camera	< <b>K541</b> , <i>shutter speed, gain</i> >
Pixel Sub-Sampling	< <b>K542</b> , <i>pixel sub-sampling, AEC/AGC mode, AEC/AGC brightness</i> >
Morphological Pre-Processing	< <b>K550</b> , <i>morphological pre-processing</i> >
Morphological Operation	< <b>K551</b> , <i>0, morphological operation, operator size</i> >

# Video

The **Video** view is similar to the **EZ Mode** interface, in that the user has the ability to perform the same **Locate**, **Calibrate**, and **Test** routines. There is also a focal distance adjustment tool to the right of the video view.

**Video** also features **Capture and Decode** functionality, which is similar to the **Configuration** interfaces (**Communication**, **Read Cycle**, **Symbologies**, **I/O**, **Matchcode**, and **Diagnostics**).

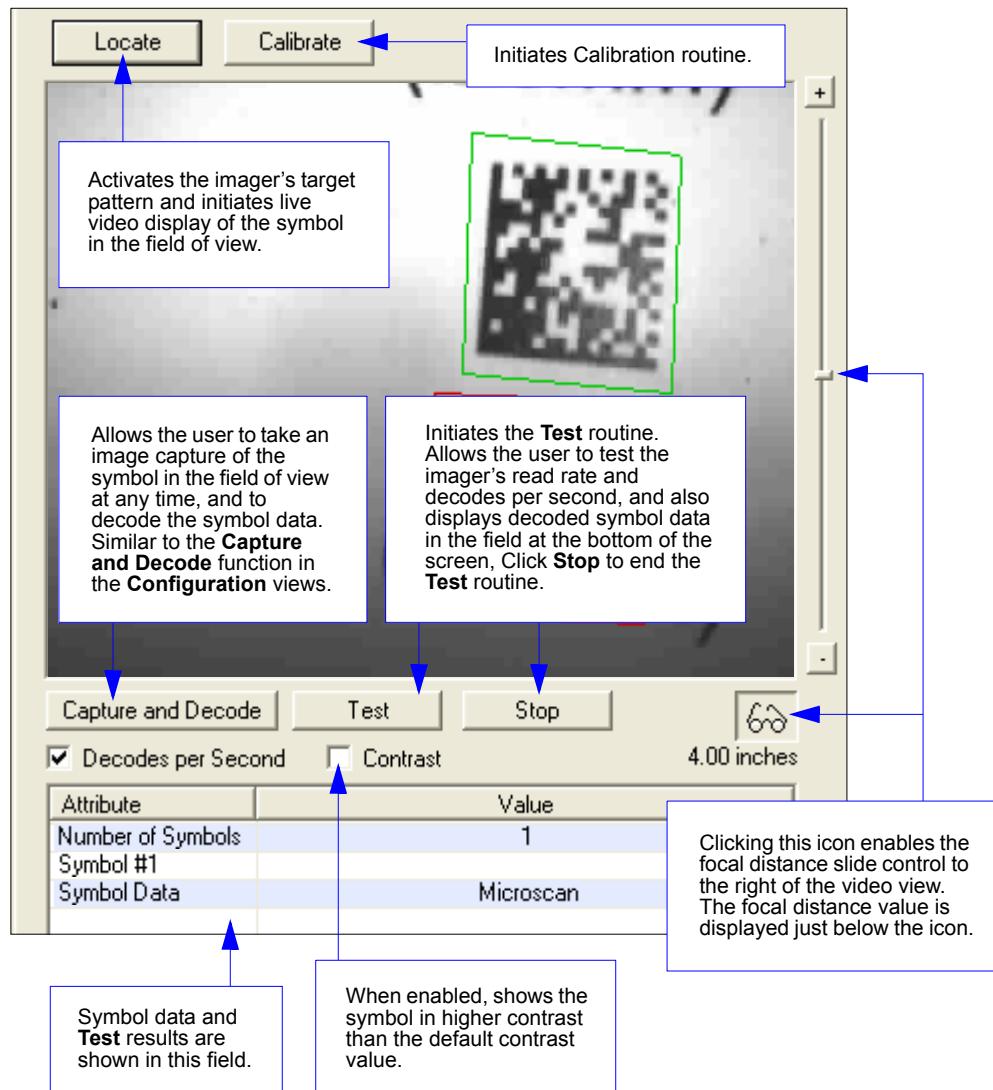

# Evaluation

In **Evaluation**, you can view images currently in the imager, capture and decode a symbol, save it as a digital file, and perform histogram and line scan evaluations.

When you click on the **Evaluation** tab, you will see the images that are currently stored in the imager.

Click **Receive** to refresh this view.

Click **Capture/Decode** to display the current stored image. Only one capture and decode event will occur, regardless of read cycle settings.

Click **Read** to trigger a read cycle. If there is enough time in the read cycle, up to 32 good reads (or 6 full-scale images) can be captured and displayed, depending on the size of the images, and depending on the number enabled in **Number of Captures** under **Capture Mode** in the **Camera Setup** menu tree to the left of the tabs.

If you click **Save**, the current image will be saved to the location of your choice.


**Note:** An image can only be saved in the format in which it was uploaded to **ESP**. JPEG images will be saved as **.jpg**, and bitmaps will be saved as **.bmp**.

When you click the **JPEG Image** box, notice that the **Line Scan** button is grayed out.

The JPEG option allows faster captures and transfers, but since the JPEG standard compresses image data, it is not suitable for the more rigorous demands of line scan evaluation.

JPEG also allows you to adjust the image quality (resolution) by adjusting the sliding tab between 1 and 100, 1 being the lowest quality and 100 being the highest.

When possible, use the highest quality; when image transfer speed must be increased, use a lower image quality setting. Adjustments for this setting will depend on your specific hardware and software limitations.

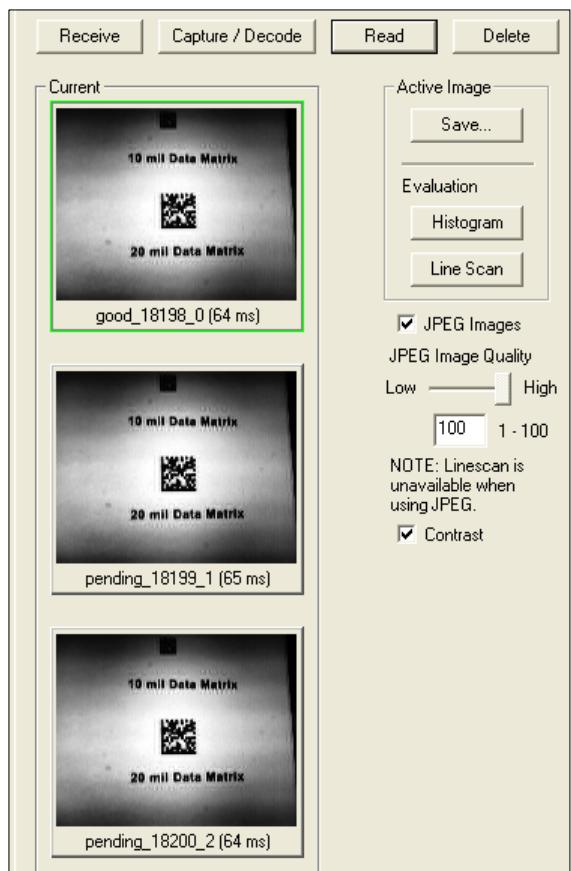

---

## Evaluation

### Histogram

**Usage:** Useful in determining quality and contrast of symbols.

**Definition:** A histogram is a graphic representation of the numeric count of the occurrence of each intensity (gray level) in an image. The horizontal axis represents the values of gray levels, and the vertical axis represents the number of pixels for each gray level.


**Note:** Since histograms are performed in the imager, the results will be saved regardless of whether the image was uploaded as a JPEG (.jpg) or a bitmap (.bmp).

1. From the **Evaluation** window, click the **Histogram** button.

The current image is transferred into the histogram operation. This may take a moment, since all the relevant pixels are being evaluated intensively.

2. When the **Histogram** window opens, you may need to expand the window and/or adjust the scroll bars in order to bring the image into view.
3. To generate a histogram, click and drag your cursor diagonally across the symbol or a portion of the symbol.


The image will be surrounded by an “area of interest box”, a dashed blue line with red anchor points that can be selected and moved by placing a cursor inside the box, and can be resized by clicking and dragging the anchor points.

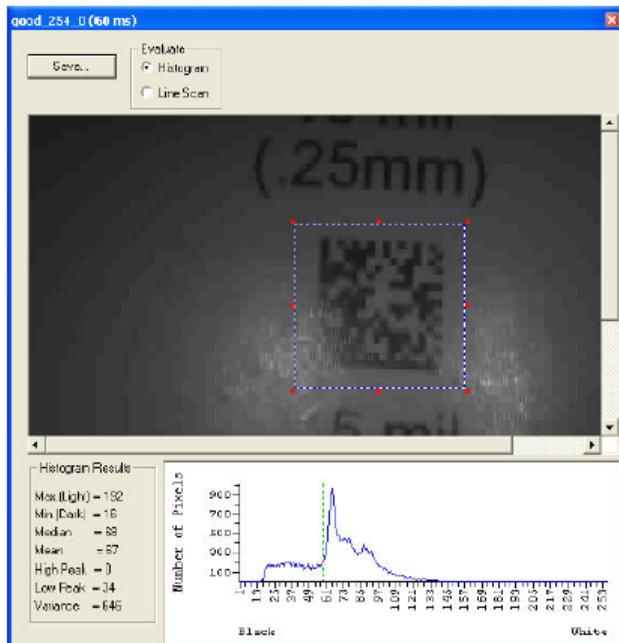

## Line Scan

1. From the **Evaluation** tab, click the **Line Scan** button. A window like that shown below will appear.
2. Drag your cursor *horizontally* across the image.

This will create a dashed horizontal line. Pixel information and a visual representation of the dark and light pixels will be displayed below the image.

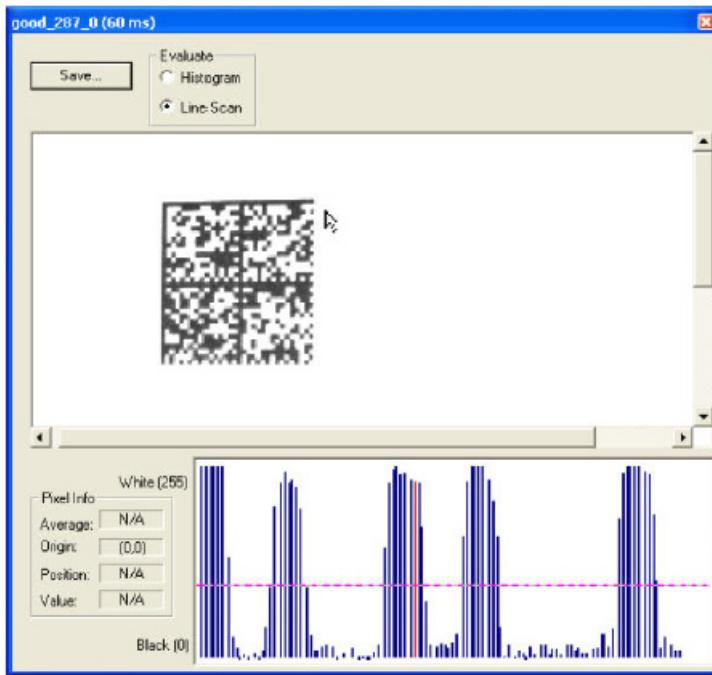

When you center your cursor over the dashed line, it becomes a double arrow cross. This allows you to move the line anywhere in the window. You can also use your keyboard arrows to move the line incrementally in any direction.


As with the histogram, the line scan compares light and dark pixels, but in a spatial distribution. On the **Y** axis of the graph below, **0** is black and **255** is white; the **X** axis represents the horizontal axis of the symbol as described by the line scan.

When you click anywhere on the graph, a vertical red line appears at that point and its position and value (in terms of black-to-white) are updated in the **Pixel Info** table to the left of the graph (237 in this example). In addition, a horizontal dashed red line is displayed that indicates the average value.


# Calibration

The Calibration interface in **ESP** is a powerful and intuitive way to optimize the imager's performance. It allows the user to control several complex, simultaneous calibration operations, and to follow the progress of those operations using cues such as progress bars, real-time representations of calibration values, and other dynamic user feedback.

See [Calibration](#) for full documentation of this feature.

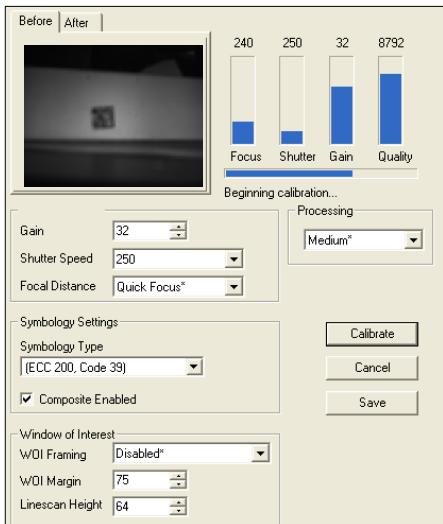

*ESP's Calibration interface shown during a calibration routine*

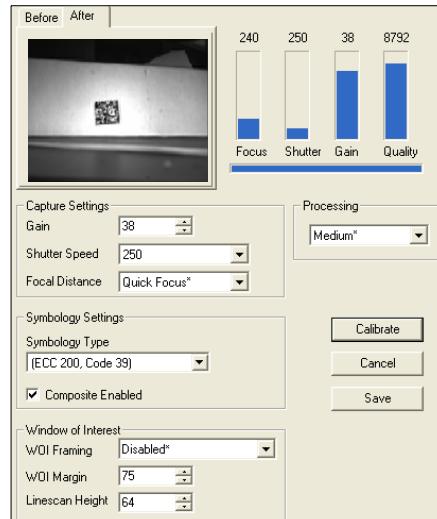

*ESP's Calibration interface shown after a calibration routine*

## Window of Interest

The active pixel area of the image sensor is called the **Window of Interest** (WOI). The WOI allows the user to select an area of the field of view in which the desired symbol is located.

The programmable window of interest increases decode speed, improves threshold, and makes it easy to select specific symbols from among several in the field of view. The user provides the upper-left pixel location and the size of the window to define the Window of Interest.

Window of Interest	
Top	0
Left	0
Height	480
Width	640

**Caution:** **Window of Interest** will shrink the field of view and therefore could cause symbols to be missed in dynamic applications.

## Window of Interest by ESP

1. From the **Camera** menu, click the **WOI** tab to bring up **Window of Interest**.

If you haven't already captured an image, click the **Capture and Decode** button to decode the present image. If successful, the **Good Read** indicator on the **WOI** tab will be green and the symbol will appear in the pane below.


**Note:** You can resize the image by clicking and dragging the **ESP** window from the lower right corner. This is useful where very small symbols are being read.

2. Click and drag your cursor over the symbol that you want to isolate for reading.

Notice that the surrounding area goes black.

You can use the handles on the image area that you have just drawn to resize the region of interest. You can also click on the center of the window of interest and move it.

3. Test the new settings in **Read Rate Mode**.

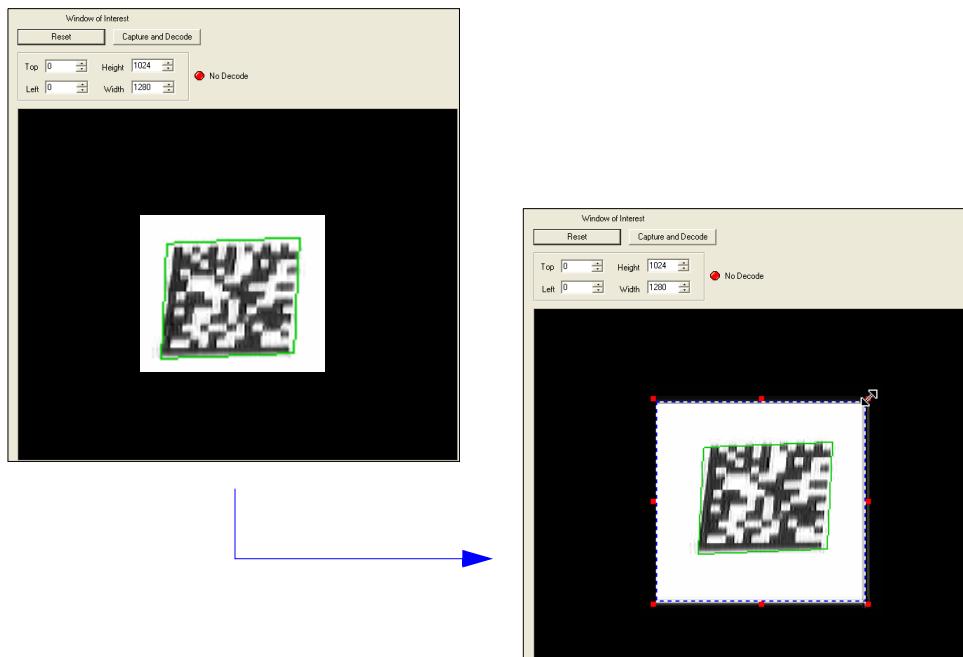

**Note:** To remove the window of interest, click the **Reset** button or click anywhere in the **WOI** pane.

Note that all pixels not in the **WOI** are defined as black.

Because the imager has far less processing to do in a smaller window, read rates typically increase dramatically. One possible downside is that the chance of missing a symbol increases with the smaller window. Always verify that your **WOI** will be large enough to allow for any random movement of symbols in your field of view.

## Window of Interest by Serial Command

The figure shows where to locate the start position of the row and column pointers and how to measure the column depth and row width dimensions.


### Top (Row Pointer)

**Definition:** Defines the row position of the upper-left starting point of the window.

**Serial Cmd:** <K516,**row pointer**,column pointer, row depth, column width>

**Default:** 0

**Options:** 0 to 480

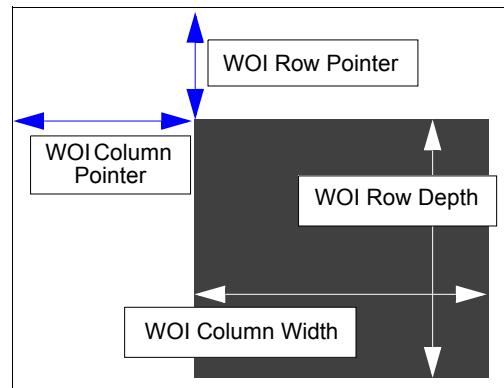

### Left (Column Pointer)

**Definition:** Defines the column position of the upper-left starting point of the window.

**Serial Cmd:** <K516,**row pointer**,**column pointer**,row depth, column width>

**Default:** 0

**Options:** 0 to 640

**Important:** The column pointer setting must be an even value.

### Height (Row Depth)

**Definition:** Defines the size, in rows, of the window. Maximum value is defined as the maximum row size of the image sensor minus the **Top** value.

**Serial Cmd:** <K516,**row pointer**,**column pointer**,**row depth**, column width>

**Default:** 0

**Options:** 3 to (480 - row pointer)

### Width (Column Width)

**Definition:** Defines the column position of the upper-left starting point of the window.

**Serial Cmd:** <K516,**row pointer**,**column pointer**,**row depth**,**column width**>


**Default:** 0

**Options:** 8 to (640 - column pointer)

# Configuration Database

The Configuration Database allows the user to manage multiple configuration profiles. It is a useful tool in applications that require several different imager configurations to be applied sequentially, and it allows the user to perform far more complex operations than would be possible with only one set of configuration parameters.


See [Configuration Database](#) for full documentation of this feature.

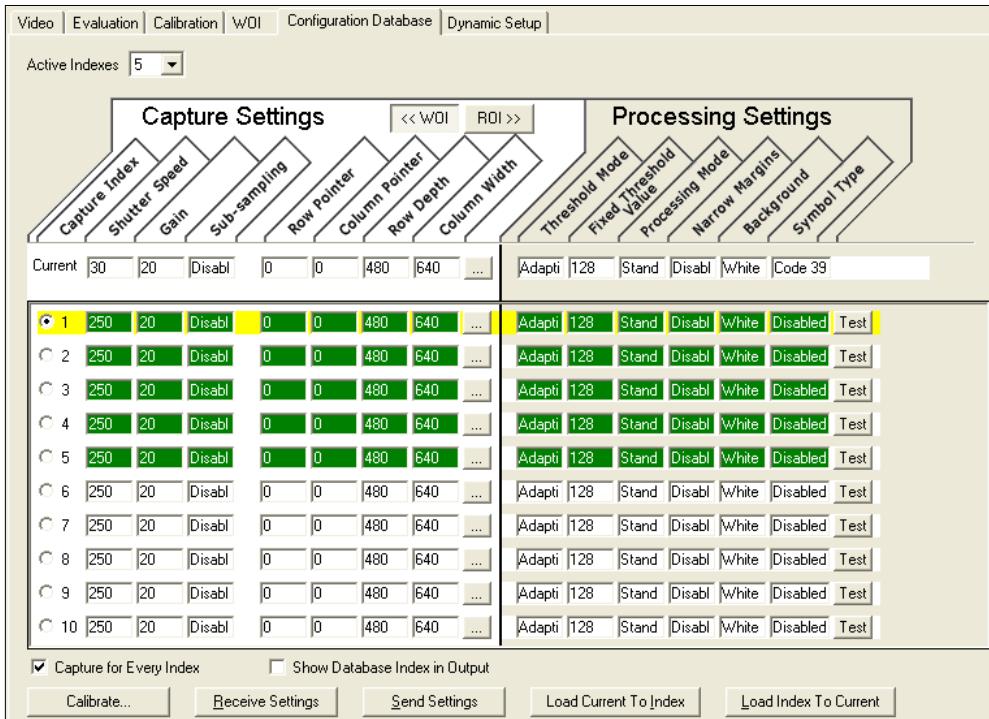

Configuration Database view, set for 5 Active Indexes, with Capture Settings highlighted


# Dynamic Setup

**Dynamic Setup** is used to calculate image capture timing during a read cycle. Without proper timing, the imager will not be able to decode all symbols in a read cycle. An external trigger is used to activate image captures so the user can make timing adjustments as capture events occur.

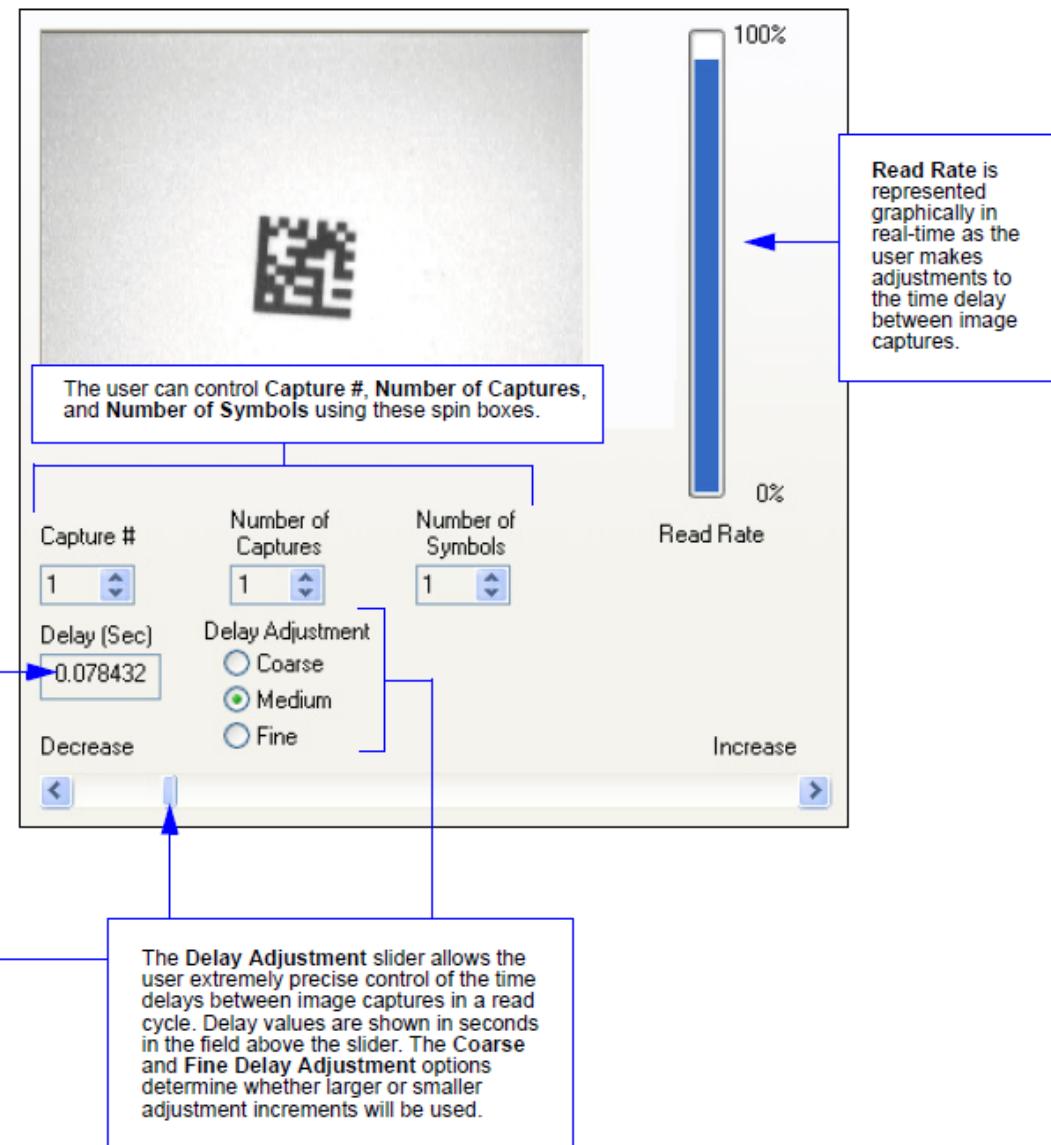


## X-Mode™


The MS-4Xi is equipped with powerful X-Mode™ technology, which provides industry-leading decode performance on both printed and direct part mark symbols, with minimum configuration required out of the box. The X-Mode algorithm identifies symbol candidates within the imager's field of view and uses sophisticated image processing to decode valid symbols. In each of the examples below, the X-Mode technique locates a symbol, analyzes the image gradient to detect areas with changes in reflectivity, grid-maps the image, and ultimately produces an ideal, reliably decodable Data Matrix.

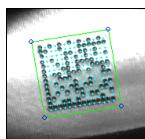


Dot Peen on Curved Surface

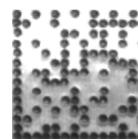


Comparison of direct part mark  
and Data Matrix after processing

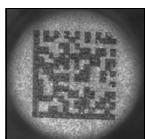

Laser Etch

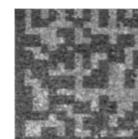


Comparison of direct part mark  
and Data Matrix after processing

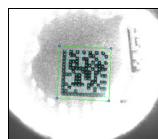

Laser Etch



Comparison of direct part mark  
and Data Matrix after processing

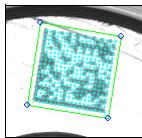

Ink Jet



Comparison of direct part mark  
and Data Matrix after processing


# Pixel Sub-Sampling

<i>Definition:</i>	Pixel Sub-Sampling shows an entire captured image by averaging signals from adjacent pixels.
<i>Usage:</i>	<K542, <b>pixel sub-sampling</b> ,AEC/AGC mode,AEC/AGC brightness>
<i>Default:</i>	<b>Disabled</b>
<i>Options:</i>	<b>0 = Disabled</b>
	1 = 4:1
	2 = 16:1

## 4:1

At **4:1**, 4 pixel signals from 2 adjacent rows and columns are combined so that only 1 pixel is output for every 4 pixels sampled. An image with the dimensions 640 x 480 is scaled to 320 x 240.


Since the resolution of the output image is reduced, the frame rate will increase, but not by the factor of the image reduction. This is due to the overhead time of digital pixel data processing and minimum row time requirements of the image sensor.

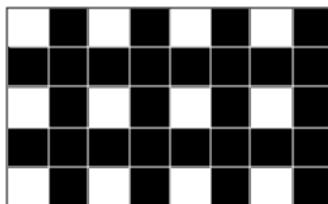

## 16:1

At **16:1**, 16 pixel signals from 4 adjacent rows and columns are combined so that only 1 pixel is output for every 16 pixels sampled. An image with the dimensions 640 x 480 will be scaled to 160 x 120.

Since the resolution of the output image is reduced, the frame rate will increase, but not by the factor of the image reduction. This is due to the overhead time of digital pixel data processing and minimum row time requirements of the image sensor.

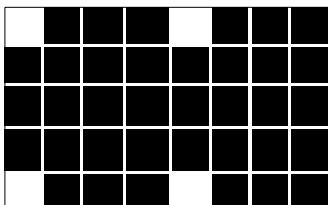

## AEC/AGC Mode

**Note:** AEC/AGC Mode is only applicable to the High Speed version of the MS-4Xi.

<b>Definition:</b>	<b>AEC/AGC Mode (Automatic Exposure Control/Automatic Gain Control Mode)</b> maintains optimal self-adjusting exposure and gain settings. This ensures that acquired images fall in a desirable region of the camera's sensitivity range for optimal image luminance.
<b>Usage:</b>	< <b>K542</b> ,pixel sub-sampling, <b>AEC/AGC mode</b> ,AEC/AGC brightness>
<b>Default:</b>	<b>Disabled</b>
<b>Options:</b>	<b>0 = Disabled</b> 1 = AEC 2 = AGC      3 = AEC/AGC

## AEC

**AEC** enables **Automatic Exposure Control**. In this mode, the optimal setting for exposure (shutter) is computed and updated for every frame. It may take several frames to adjust the shutter value to the correct setting. The current camera shutter parameter is updated at the end of the read cycle (see [Camera Settings](#)).

**Note:** The minimum (slowest) shutter setting will not exceed the frame read-out time of the current image dimension. For example, a full-size image has a minimum frame read-out time of 15 ms. Therefore, the slowest shutter that can be achieved is 15 ms, or 1/67.

## AGC

**AGC** enables **Automatic Gain Control**. In this mode, the optimal setting for gain is computed and updated for every frame. It may take several frames to adjust the gain value to the correct setting. The current camera gain parameter is updated at the end of the read cycle (see [Camera Settings](#)).

## AEC/AGC

**AEC/AGC** enables both **Automatic Exposure Control** and **Automatic Gain Control**. In this mode, the optimal settings for exposure (shutter) and gain are computed and updated for every frame. It may take several frames to adjust the shutter and gain values to the correct settings.

**Important:** In this mode, only the Automatic Exposure Control (AEC) is active while the gain value remains fixed at its minimum setting. The Automatic Gain Control (AGC) only becomes active if the AEC has driven the shutter value to its minimum (slowest) setting and the desired image brightness has still not been obtained. When this occurs, the shutter value will remain fixed while gain is adjusted. The current camera shutter and camera gain parameters are then updated at the end of the read cycle (see [Camera Settings](#)).

## AEC/AGC Brightness

**Note:** AEC/AGC Brightness is only applicable to the High Speed version of the MS-4Xi.

<b>Definition:</b>	<b>AEC/AGC Brightness</b> allows the desired image luminance to be adjusted within the range of <b>1</b> (darkest) to <b>56</b> (brightest).
<b>Usage:</b>	< <b>K542</b> ,pixel sub-sampling, <b>AEC/AGC mode</b> , <b>AEC/AGC brightness</b> >
<b>Default:</b>	<b>30</b>
<b>Options:</b>	1 to 56

# Camera Settings

**Camera Settings** are typically obtained during the calibration process, and do not necessarily need to be modified directly by the user.

## Optics

The MS-4Xi Imager has two different optical configurations available: **Standard Density** and **Low Density**. Determine the optics of your Imager and find the corresponding camera values in the following sections.

### Standard Density (HD 1.0 mm Optics), 3" Focal Distance

#### Shutter Speed

**Usage:** Faster shutter speeds reduce blurring in faster applications.  
Slower shutter speeds are useful in slower applications and lower contrast applications.

**Definition:** This value sets the exposure or integration time for the image sensor pixels. The shutter speed setting in relation to the speed of the object is critical. If a slow shutter speed is selected to capture fast-moving objects, blurring or smearing of the image will occur. As shutter speed is increased, more light and gain become necessary, because the pixels' exposure time has decreased.

**Serial Cmd:** <**K541,shutter speed,gain**>

**Default:** **30** (1/30 second)

**Options:** 15 to 12,500

#### Gain

**Usage:** Can be used to adjust the brightness of the image.

**Definition:** Sets the gain value for the image sensor. This setting can be configured through calibration, which is the recommended method. A higher gain value will increase the brightness of the image, but the visual noise reduction performance of the system is reduced. Before configuring gain settings, the desired shutter speed should already be set and the gain should be configured to optimize the shutter speed setting.

**Serial Cmd:** <**K541,shutter speed,gain**>

**Default:** **20**

**Options:** 0 to 48

## **MS-4Xi Low Density (SD Optics), 4" Focal Distance**

### **Shutter Speed**

<b>Usage:</b>	Faster shutter speeds reduce blurring in faster applications.
	Slower shutter speeds are useful in slower applications and lower contrast applications.
<b>Definition:</b>	This value sets the exposure or integration time for the image sensor pixels. The shutter speed setting in relation to the speed of the object is critical. If a slow shutter speed is selected to capture fast-moving objects, blurring or smearing of the image will occur. As shutter speed is increased, more light and gain become necessary, because the pixels' exposure time has decreased.
<b>Serial Cmd:</b>	<b>&lt;K541,<i>shutter speed,gain</i>&gt;</b>
<b>Default:</b>	<b>150</b> (1/150 second)
<b>Options:</b>	15 to 12,500

### **Gain**

<b>Usage:</b>	Can be used to adjust pixel grayscale values for readability.
<b>Definition:</b>	Sets the gain value for the image sensor. This setting can be configured through autocalibration, which is the recommended method. A higher gain value will increase the brightness of the image, but the visual noise reduction performance of the system is reduced. Before configuring gain settings, the desired shutter speed should already be set and the gain should be configured to optimize the shutter speed setting.
<b>Serial Cmd:</b>	<b>&lt;K541,<i>shutter speed,gain</i>&gt;</b>
<b>Default:</b>	<b>20</b>
<b>Options:</b>	0 to 48

## Focal Distance

*Definition:* This command returns the Imager's factory preset focal distance.

*Serial Cmd:* <**K525,focal distance (read only)**>

*Default:* Standard Density = **300** (3")

Low Density = **400** (4")

*Options:* N/A

## **Focal Distance Table (Read-Only)**

### ***Number of Focal Distances***

**Definition:** Specifies the number of focal distances supported by the imager (1).  
**Serial Cmd:** <**K526,number of focal distances,focal distance**>  
**Default:** **1**  
**Options:** N/A (Focal Distance is factory preset.)

### ***Focal Distance***

**Definition:** Returns the imager's factory preset focal distance.  
**Serial Cmd:** <**K526,number of focal distances,focal distance**>  
**Default:** Returns the Imager's factory preset Focal Distance value.  
**Options:** N/A

## Mirrored Image

<i>Usage:</i>	Enable this setting when the Imager is viewing a mirrored image (as when it is being used with a right-angle mirror attachment).
<i>Definition:</i>	When enabled, outputs a mirrored image of the symbol.
<i>Serial Cmd:</i>	< <b>K514,mirrored image&gt;</b>
<i>Default:</i>	<b>Both</b>
<i>Options:</i>	0 = Regular Image                          1 = Mirrored Image <b>2 = Both (auto-detect normal/mirrored)</b>

### **Regular Image**

When **Regular Image** is enabled, images will be processed as they appear upon capture.

### **Mirrored Image**

When **Mirrored Image** is enabled, images will be processed as a reverse of the captured image.

### **Both**

When **Both** is enabled, regular and mirrored images will be processed.

## Illumination Brightness

*Definition:* This feature allows the user to adjust the brightness of the illumination LEDs. Since the imager has control over the brightness of the illumination, it can provide consistent brightness output between imagers through a factory calibration operation. Each of the brightness settings is calibrated to provide the same level of intensity for each imager.

*Serial Cmd:* <**K536,brightness**>

*Default:* **High**

*Options:* 0 = Off

1 = Low

2 = Medium

**3 = High**

4 = Constant

### **Constant**

When set to **Constant**, the illumination is the same as the Medium setting. However, the LEDs will always be on during a read cycle and will only be off between read cycles. This cuts down on perceptible LED flashing.

# Skew Correction

**Note:** Skew Correction does not apply to the High Speed version of the MS-4Xi, which has a global shutter.


The MS-4Xi's CMOS image sensor has a "rolling shutter" mechanism that controls pixel integration row-by-row, unlike a global shutter, which performs light integration of all pixels at once. When a row of pixels has integrated light for the amount of time specified by the user-defined shutter speed, that row will be

read out. The rows of the image are exposed individually in rapid sequence. As a symbol moves through the field of view, it is in a different position at each row read-out. This creates distortion, or "skew", as in the image shown below. In this image, the symbol is moving from left to right at a line speed of 40 inches per second. The bottom of the symbol is read out first while the upper portion is still being integrated, causing distortion along the symbol's **x-axis**.

**Note:** The amount of blur in the image is an effect of shutter speed, and is not a factor in rolling shutter distortion.

If the symbol enters the imager's field of view from the top or bottom, distortion will occur on the **y-axis**. The image below shows two symbols entering the field of view from the top at different line speeds. As you can see, this causes the image to shrink along the **y-axis**. This is because the symbol is moving perpendicular to the CMOS sensor's row read-out. In other words, the bottom of the symbol is read out first, and as the symbol moves information is lost (the symbol enters pixel rows that have already been processed). This causes the symbol to appear to shrink vertically.

**Note:** If the symbol were to enter the field of view from the bottom, the captured image would be stretched along the **y-axis**.

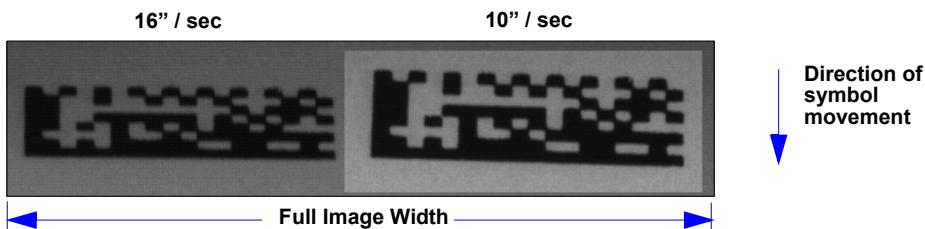

The amount of rolling shutter distortion depends upon the amount of time it takes to read out an image row, and the line speed at which the target object is traveling. Therefore, one way to reduce skew is to speed up the read-out time per pixel row. This can be accomplished by reducing the column size of the image sensor.

For example, if the column size is reduced from 640 to 320, the time it takes to read out a row of pixels from the sensor is reduced by half, and image skew will be reduced by a factor of 2. As the column dimension of the image is reduced, the effect of rolling shutter distortion is reduced by the same factor.

**Important:** Reducing the row size of the image has no effect, because it does not change the row read-out time. Skew will remain the same regardless of row size.

## Line Speed

**Definition:** This feature is used to specify the line speed of the application, and it determines how much distortion correction to apply. When enabled, this feature will cause the overall decode rate to increase significantly. The timing information in the table below is for a full megapixel image (1280 x 1024).

**Note:** Processing time decreases with larger image sizes.

**Serial Cmd:** <**K537, line speed, symbol direction**>

**Default:** **0 (Disabled)**

**Options:** 0 to 80 (inches per second)


Line Speed	Additional Processing Time
10" / sec	69.5 ms
20" / sec	65.0 ms
30" / sec	62.5 ms
40" / sec	58.0 ms
60" / sec	55.0 ms
80" / sec	45.5 ms

Distortion is corrected by shifting image rows in the direction opposite the symbol's movement on the line. The shift value of subsequent image rows is then increased. These shift values depend on the speed of the line. The faster the line speed, the greater the required shift values. More data loss is incurred at faster line speeds.

The image shown below was captured at a line speed of 40 inches per second, and it shows virtually no inherent skew. The black area of the image is unusable, since the information was lost as the symbol moved through the imager's field of view.



The amount of data loss can be reduced by decreasing the image height or the row size of the image, which reduces the amount of travel represented during the image frame read-out. Note that the amount of distortion will not be changed, because the object will have traveled the same distance during the read-out of the target area.

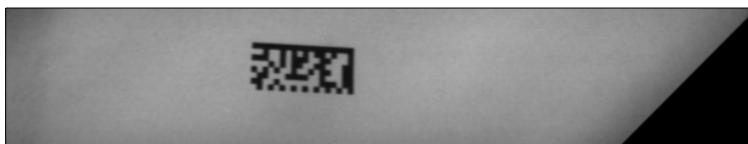

## Symbol Direction

**Definition:** This feature specifies the direction the symbol is moving through the imager's field of view, or which side of the field of view the symbol will enter first.


**Note:** Image captures of symbols entering the field of view from above or below cannot be skew-corrected.

**Serial Cmd:** <K537, line speed, **symbol direction**>

**Default:** **Right**

**Options:** **0 = Right**                            1 = Left

If a symbol enters the field of view from the left, it will be skewed as shown in the image below. The image is processed from top to bottom, meaning that the top of the symbol is captured first. The amount of skew is dependent on the speed at which the symbol moves through the imager's field of view. The symbol below was captured at a line speed of 40 inches per second.

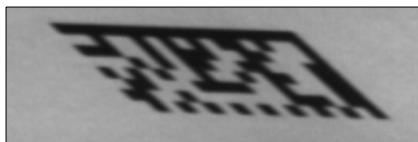

## Additional Notes on Skew Correction

- Autocalibration does not perform skew correction. It is assumed that during autocalibration the symbol is stationary, so skew correction is not required.
- Images are corrected before they are processed. Therefore, if an image is still pending at the end of the read cycle, it will not have been skew-corrected.

## **Morphological Pre-Processing**

**Morphological Pre-Processing** allows the user to select the method for processing images, and to choose the operator size for that method.

**Important:** This command must be set to **Enabled** for **Morphological Operation** to function.

*Serial Cmd: <K550,morphological pre-processing>*

*Default: Disabled*

*Options: 0 = Disabled                            1 = Enabled*

# Morphological Operation and Operator Size

## ***Morphological Operation***

**Definition:** Morphological Operation allows the user to select the method for processing captured images.

**Serial Cmd:** <K551,0,*morphological operation*,operator size>

**Default:** Erode

**Options:** 0 = Erode


1 = Dilate

2 = Open

3 = Close

### **Erode**

**Erode** increases the dark cell size of a symbol. Useful for increasing the dark cell size of a dark-on-light Data Matrix symbol.

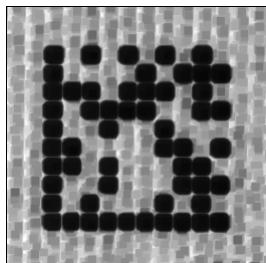

### **Dilate**

**Dilate** increases the light cell size of a symbol. Useful for increasing the light cell size of a light-on-dark Data Matrix symbol.




---

## *Morphological Operation and Operator Size*


### **Open**

**Open** removes minor light defects of dark cells by performing a **Dilate** function followed by an **Erode** function.

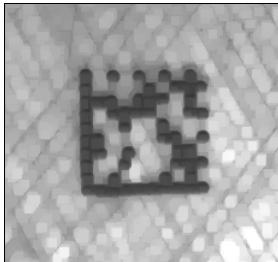

### **Close**

**Close** removed minor dark defects of light cells by performing an **Erode** function followed by a **Dilate** function.

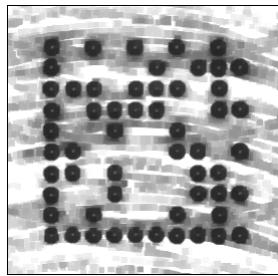

## Operator Size

**Definition:** **Operator Size** determines the size of the area or “pixel neighborhood” (measured in pixels) in which the morphological operation is being performed.

**Serial Cmd:** <K551,0,morphological operation,**operator size**>

**Default:** **Small**

**Options:** **3 = Small (3 pixels by 3 pixels)**

5 = Medium (5 pixels by 5 pixels)

7 = Large (7 pixels by 7 pixels)

---

*Morphological Operation and Operator Size*

# 11 Configuration Database

## **Contents**

Configuration Database Serial Commands .....	11-2
Number of Active Indexes .....	11-3
Configuration Database Status.....	11-4
Database Mode .....	11-10
Save Current Settings to Configuration Database.....	11-15
Load Current Settings from Configuration Database.....	11-16
Request Selected Index Settings .....	11-17
Request All Configuration Database Settings .....	11-18

This section concerns the various capture settings and processing settings that can be used to fine-tune the MS-4Xi's performance in your application.

# Configuration Database Serial Commands

Number of Active Indexes	<i>&lt;K252,number of active database settings, database sort&gt;</i>
Configuration Database Status	<i>&lt;K255,index,shutter speed,gain,focal distance, pixel sub-sampling,row pointer,column pointer,row depth,column width,narrow margins,background color,symbology&gt;</i>
Save Current Settings to Database	<i>&lt;K255+,index&gt;</i>
Load Current Settings from Database	<i>&lt;K255-,index&gt;</i>
Request Selected Index Settings	<i>&lt;K255?,index&gt;</i>
Request All Database Settings	<i>&lt;K255?&gt;</i>
Database Mode	<i>&lt;K256,switch mode,frame count/time,image process looping,image dimensions&gt;</i>

# Number of Active Indexes


- Usage:** Useful for applications that require several different complex imager configurations to be applied sequentially. Multiple database indexes allow you to concatenate configuration profiles, and to perform more complex operations than would be possible with only one set of configuration parameters.
- Definition:** This feature allows you to set the number of database records (groups of settings) that will be used automatically during the read cycle. If **Number of Active Indexes** is set to 0, only the current imager settings will be used, not database entry settings.
- Serial Cmd:** <K252,number of active indexes, database sort>
- Default:** 0 (disabled)
- Options:** 0 to 10

## Database Sort

- Definition:** **Database Sort** moves the database entry that produced a successful decode to the first position in the list of database entries.
- Serial Cmd:** <K252,number of active indexes, database sort>
- Default:** **Disabled**
- Options:** **0 = Disabled**      1 = Enabled

## Number of Active Indexes by ESP

Click the arrow on the **Active Indexes** dropdown menu and select how many database indexes will be used during the read cycle. (0 to 10).

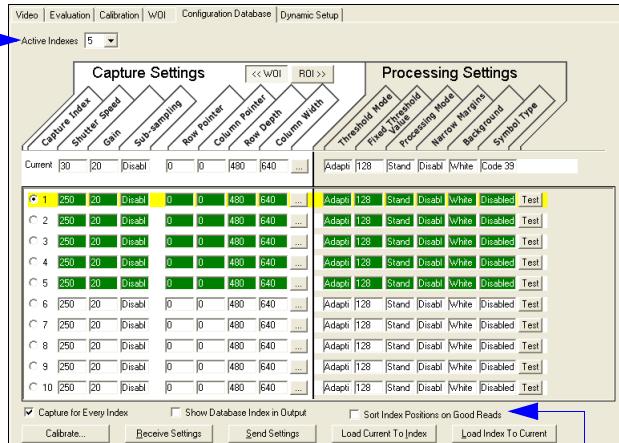

**Sort Index Positions on Good Reads** moves the database entry that produces the first successful decode to the top of the list.

# Configuration Database Status

## Index

**Usage:** Useful for applications that require several different complex Imager configurations to be applied sequentially. Multiple database indexes allow you to concatenate configuration profiles, and to perform more complex operations than would be possible with only one set of configuration parameters.

**Definition:** Determines the specific database index that will be used.

**Serial Cmd:** <**K255,index**,shutter speed,gain,sub-sampling,row pointer,column pointer,row depth,column width,threshold mode,fixed threshold value,processing mode,narrow margins,background color,symbology type>

**Options:** 1 to 10

## Shutter Speed

**Serial Cmd:** <**K255,index,shutter speed**,gain,sub-sampling,row pointer,column pointer,row depth,column width,threshold mode,fixed threshold value,processing mode,narrow margins,background color,symbology type>

**Default:** **250**

**Options:** 15 to 15,000

## Gain

**Serial Cmd:** <**K255,index,shutter speed,gain**,sub-sampling,row pointer,column pointer,row depth,column width,threshold mode,fixed threshold value,processing mode,narrow margins,background color,symbology type>

**Default:** **20**

**Options:** 0 to 48

## Pixel Sub-Sampling

**Serial Cmd:** <**K255,index,shutter speed,gain,sub-sampling**,row pointer,column pointer,row depth,column width,threshold mode,fixed threshold value,processing mode,narrow margins,background color,symbology type>

**Default:** **Disabled**

**Options:** **0 = Disabled**                            1 = 4:1                            2 = 16:1

**Important:** Sub-sampling has no effect when the **Image Dimension** mode is configured as **Region of Interest** in the **Database Mode** command. This is because the **Window of Interest** camera settings are determined by the software based on the **Region of Interest** setup. There is no benefit to sub-sampling to increase processing speed when ROI is configured, because the frame size would need to be increased to make sub-sampling possible.

## Row Pointer

**Definition:** The image dimension settings can be applied as a Window of Interest or a Region of Interest, depending on the image dimension mode selected in the **Database Mode** command.

**Serial Cmd:** <**K255**,index,shutter speed,gain,sub-sampling,**row pointer**,column pointer,row depth,column width,threshold mode,fixed threshold value,processing mode,narrow margins,background color,symbology type>

**Default:** **0**

**Options:** 0 to (480-row depth)

## Column Pointer

**Definition:** The image dimension settings can be applied as a Window of Interest or a Region of Interest, depending on the image dimension mode selected in the **Database Mode** command.

**Serial Cmd:** <**K255**,index,shutter speed,gain,sub-sampling,**row pointer**,**column pointer**,row depth,column width,threshold mode,fixed threshold value,processing mode,narrow margins,background color,symbology type>

**Default** **0**

**Options:** 0 to (640-column width)

## Row Depth

**Definition:** The image dimension settings can be applied as a Window of Interest or a Region of Interest, depending on the image dimension mode selected in the **Database Mode** command.

**Serial Cmd:** <**K255**,index,shutter speed,gain,sub-sampling,**row pointer**,column pointer,**row depth**,column width,threshold mode,fixed threshold value,processing mode,narrow margins,background color,symbology type>

**Default:** **480**

**Options:** 3 to (480-row pointer)

## Column Width

**Definition:** The image dimension settings can be applied as a Window of Interest or a Region of Interest, depending on the image dimension mode selected in the **Database Mode** command.

**Serial Cmd:** <**K255**,index,shutter speed,gain,sub-sampling,**row pointer**,column pointer,row depth,**column width**,threshold mode,fixed threshold value,processing mode,narrow margins,background color,symbology type>

**Default** **640**

**Options:** 8 to (640-column pointer)

## Threshold Mode

Serial Cmd: <**K255**,index,shutter speed,gain,sub-sampling,row pointer,column pointer,row depth,column width,**threshold mode**,fixed threshold value,processing mode,narrow margins,background color,symbology type>

Default: **Adaptive**

Options: **0 = Adaptive**      1 = Fixed

## Fixed Threshold Value

Serial Cmd: <**K255**,index,shutter speed,gain,sub-sampling,row pointer,column pointer,row depth,column width,**threshold mode**,**fixed threshold value**,processing mode,narrow margins,background color,symbology type>

Default: **128**

Options: 0 to 255

## Processing Mode

Serial Cmd: <**K255**,index,shutter speed,gain,sub-sampling,row pointer,column pointer,row depth,column width,**threshold mode**,fixed threshold value,**processing mode**,narrow margins,background color,symbology type>

Default: **Standard**

Options: **0 = Standard**      1 = Fast Linear Mode

## Narrow Margins

Serial Cmd: <**K255**,index,shutter speed,gain,sub-sampling,row pointer,column pointer,row depth,column width,**threshold mode**,fixed threshold value,processing mode,**narrow margins**,background color,symbology type>

Default: **2D Enhanced**

Options: **0 = Disabled**      1 = Enabled      **2 = 2D Enhanced**

## Background Color

Serial Cmd: <**K255**,index,shutter speed,gain,sub-sampling,row pointer,column pointer,row depth,column width,**threshold mode**,fixed threshold value,processing mode,narrow margins,**background color**,symbology type>

Default: **Both**

Options: **0 = White**      1 = Black      **2 = Both**

## Symbology

**Definition:** This field allows the user to configure the database to enable specific symbologies for selected database indexes. Symbology-specific parameters must be configured with the appropriate symbology command.

For example, if fixed length Code 128 is required, it must first be set up with the Code 128 command: **<K474>**.

To select a particular symbology, add the number value associated with that symbology.

**Examples:**

If Data Matrix and Code 39 are required, the parameter would be: **2 + 16 = 18**.

If I 2/5, BC412, and DataBar Limited (RSS Limited) are required, the parameter would be: **128 + 2048 + 16384 = 18560**.

**Serial Cmd:** <**K255**,index,shutter speed,gain,focal distance,pixel sub-sampling,row pointer,column pointer,row depth,column width,narrow margins,background color,**symbology**>

**Default:** **Disabled**

### Disabled

When **Symbology** is disabled, the database uses the current **Symbology** setup to determine active symbologies.

### Any Symbology (Add 1)

All symbologies except *Pharmacode* are enabled while this database index is being used.

### Data Matrix (Add 2)

If enabled, Data Matrix will be active for this database index.

**Important:** The ECC level must be configured using the Data Matrix command **<K479>**. If no ECC level has been configured, the imager will not decode Data Matrix symbols.

### QR Code (Add 4)

If enabled, QR Code will be active for this database index.

### Code 128 (Add 8)

If enabled, Code 128 will be active for this database index.

---

## *Configuration Database Status*

### **Code 39 (Add 16)**

If enabled, Code 39 will be active for this database index.

### **Codabar (Add 32)**

If enabled, Codabar will be active for this database index.

### **Code 93 (Add 64)**

If enabled, Code 93 will be active for this database index.

### **Interleaved 2 of 5 (Add 128)**

If enabled, Interleaved 2 of 5 will be active for this database index.

### **UPC/EAN (Add 256)**

If enabled, UPC/EAN will be active for this database index.

### **PDF417 (Add 512)**

If enabled, PDF417 will be active for this database index.

### **MicroPDF417 (Add 1024)**

If enabled, MicroPDF417 will be active for this database index.

### **BC412 (Add 2048)**

If enabled, BC412 will be active for this database index.

### **Pharmacode (Add 4096)**

If enabled, Pharmacode will be active for this database index.

### **DataBar-14 (RSS-14) (Add 8192)**

If enabled, DataBar-14 will be active for this database index.

**Important:** If the stacked and non-stacked operation is required, the DataBar-14 command must be configured as follows: <K482,2>. If the DataBar-14 status parameter in the <K482> command is set to either DISABLED or ENABLED, the imager will only read non-stacked DataBar-14 symbols.

### **DataBar Limited (RSS Limited) (Add 16384)**

If enabled, DataBar Limited will be active for this database index.

### **DataBar Expanded (RSS Expanded) (Add 32768)**

If enabled, DataBar Expanded will be active for this database index.

**Important:** If the stacked and non-stacked operation is required, the DataBar Expanded command must be configured as follows: <K484,2>. If the DataBar Expanded status parameter in the <K484> command is set to either DISABLED or ENABLED, the imager will only read non-stacked DataBar Expanded symbols.

**Micro QR Code (Add 65536)**

If enabled, Micro QR Code will be active for this database index.

**Aztec Code (Add 131072)**

If enabled, Aztec Code will be active for this database index.

**Postal Symbologies (Add 262144)**

If enabled, Postal Symbologies will be active for this database index.

# Database Mode

## Switch Mode

**Definition:** Selects the event that causes the imager to load the next database entry to current, active settings. When **Frame Count/Time** expires and **Image Process Looping** is enabled, the next database entry with modifications to camera settings will be used.

**Note:** The image capture event always occurs when the first database entry is used.

**Note:** The **Switch Mode** setting has no effect on **Rapid Capture Mode**, which always operates in **Number of Image Frames** mode with a frame count of 1.

**Serial Cmd:** <**K256,switch mode,frame count/time,image process looping,image dimensions**>

**Default:** **1**

**Options:** 0 = Time                           **1 = Number of Image Frames**

## Time

When **Switch Mode** is set to **Time**, the imager will load the next database entry to current, active settings after a predefined time interval. The timer will start upon use of a database entry. If the timer expires during an image capture event, the timer will not start again until that database entry has been incremented and the new database entry has been loaded to current, active settings.

## Number of Image Frames

When **Switch Mode** is set to **Number of Image Frames**, the database entry is incremented after the predetermined number of image capture events has occurred.

## Frame Count/Time

**Definition:** Indicates the **Number of Image Frames** that must be captured or the amount of **Time** that must transpire before the imager will load the next database index entry.

**Serial Cmd:** <**K256,switch mode,frame count/time,image process looping,image dimensions**>

**Default:** **1** (frames/ms)

**Options:** 1 to 65535

## Image Process Looping

**Usage:** Useful in applications where it is necessary to process a single captured image multiple times using different IP and decode parameters.

**Serial Cmd:** <**K256,switch mode,frame count/time,image process looping,image dimensions>**

**Default:** **Disabled**

**Options:** **0 = Disabled**                    1 = Enabled

### Disabled

When **Image Process Looping** is set to **Disabled**, an image is captured for every database configuration, whether or not any camera settings have been modified.

### Enabled

When **Image Process Looping** is set to **Enabled**, the last captured image frame is re-processed with the new IP and decode parameters. If camera settings have not been changed from the last capture event, and when a database configuration is loaded to current, active settings, no new image is captured.

**Note:** An exception to this is the first database index: a new image is always captured when the first database index is used. When a camera setting has been modified from one database setting to the next, a new image is captured. For example, if all database entries contained the same camera setting values but had different IP and decode parameters, an image frame would only be captured when the first database configuration was used.

## Image Dimensions

**Definition:** Determines how the image dimension parameters will be implemented.


**Serial Cmd:** <K256,switch mode,frame count/time,image process looping,image dimensions>

**Default:** 0

**Options:** 0 = Window of Interest      1 = Region of Interest

### Window of Interest (WOI) by ESP

When **Image Dimensions** is set to **Window of Interest**, the database image dimension parameters are *camera settings*, and they determine the size of the image to be captured.

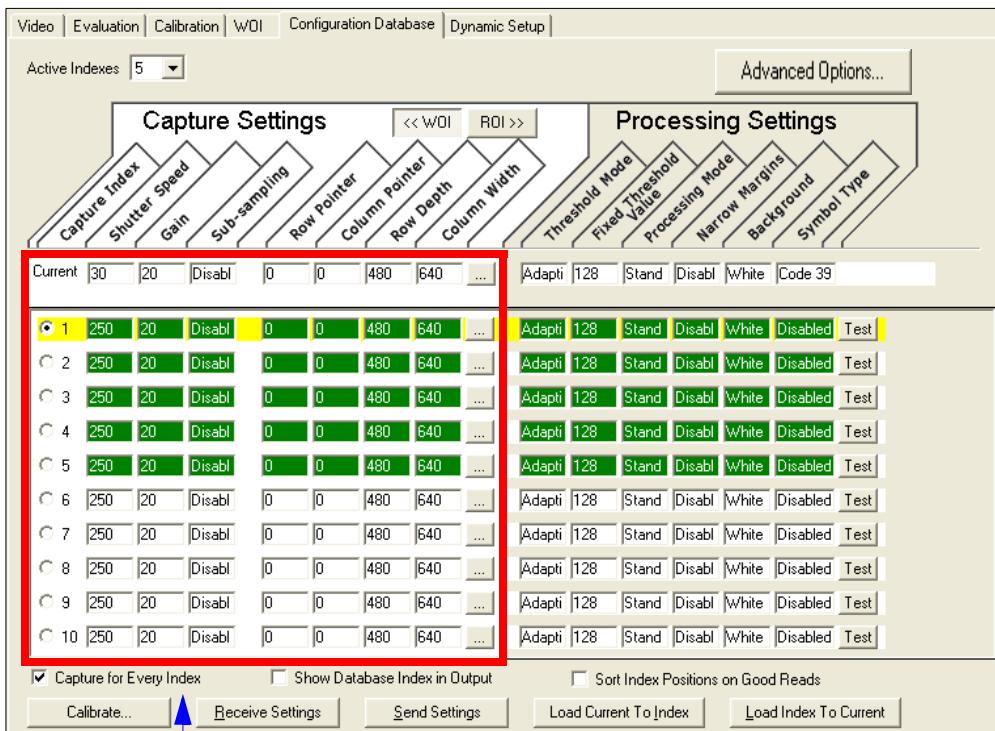

Camera settings (**Capture Index**, **Shutter Speed**, **Gain**, **Sub-Sampling**) located in the left half of the highlighted area.


Image capture dimensions (**Row Pointer**, **Column Pointer**, **Row Depth**, **Column Width**) located in the right half of the highlighted area.

## Region of Interest (ROI)

When **Image Dimensions** is set to Region of Interest, the database image dimension parameters are *IP and decode settings*, and they determine the region or area of the captured image to be processed.

**ROI** coordinate data is based on the full image size. The **WOI** of the captured image will be configured to cover all the ROI settings in the current, active database entry. In the following example, there are three active database settings, each with a different ROI configuration.

Their coordinates are based at point 0,0 of the full scale image. In this example, **DB1** and **DB3** determine the size of the captured image WOI, while **DB2** has no impact. The image WOI is not configurable. It is automatically set up by the database according to the ROI settings.

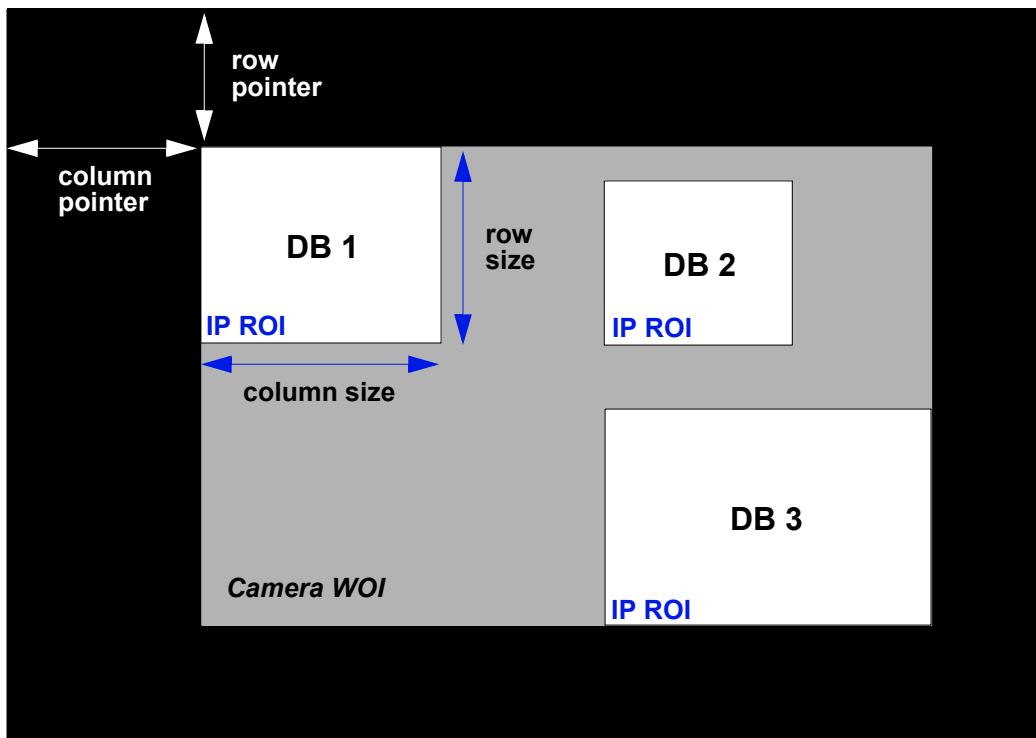

**Full Image Size (640 x 480)**


**Note:** Since the **ROI** parameters are not a camera setting, a change in **ROI** parameters from one index to another does *not* indicate an image capture event.

This feature is intended to be used in conjunction with **Image Process Looping**, to allow different regions of a captured image to be processed using different IP and decode settings.

Also, if this feature is used in conjunction with **Output Filtering**, multiple decoded symbols in a captured image frame can be output according to their location in the field of view.

## Region of Interest (ROI) by ESP

When **Image Dimensions** is set to Region of Interest, the database image dimension parameters are *IP and decode settings*, and they determine the region or area of the captured image to be processed.

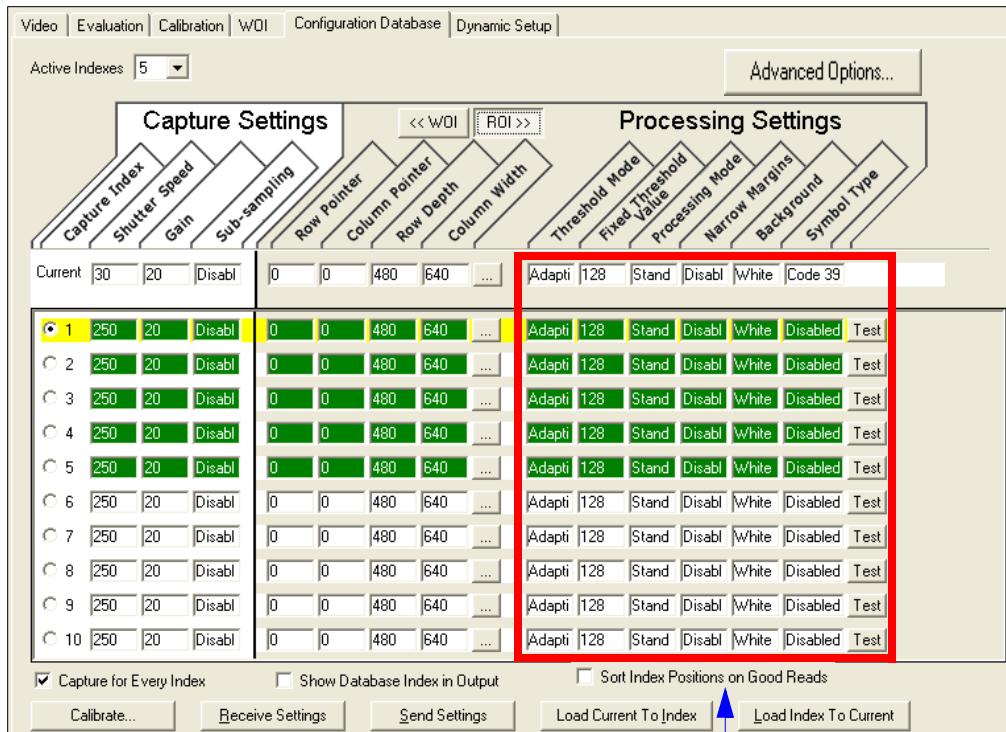

**Threshold Mode, Fixed Threshold Value, Processing Mode, Narrow Margins, Background, and Code Type** are all **Processing Settings** values.

# Save Current Settings to Configuration Database

**Definition:** Allows current, active configuration settings to be saved to a selected database index.


**Serial Cmd:** <K255+,index>

**Example:**

<K255+,5>

This command phrase saves the imager's current, active configuration settings to database index 5.

## Save Current Settings to Configuration Database by ESP

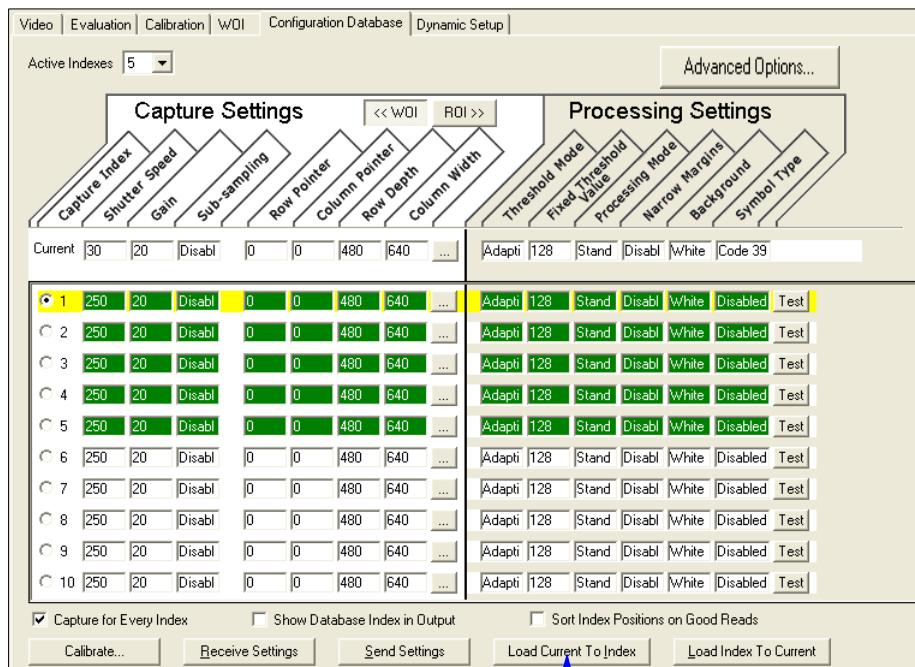

Click the **Load Current to Index** button to save the Imager's current configuration parameters to the selected database index.

# Load Current Settings from Configuration Database

**Definition:** Allows the configuration settings contained in a selected database index to be loaded to current, active configuration settings.


**Serial Cmd:** <K255-,index>

**Example:**

<K255-,5>

This command phrase loads the configuration settings contained in database index 5 to current, active configuration settings.

## Load Current Settings from Configuration Database by ESP

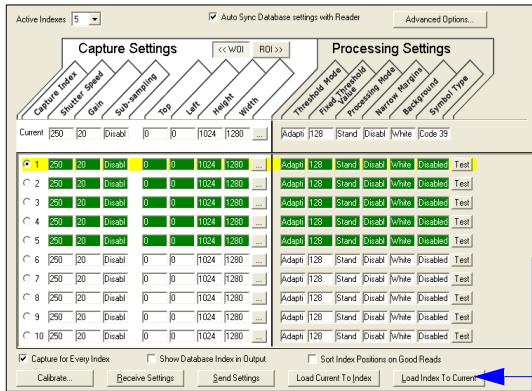

Click the **Load Index to Current** button to load configuration settings from the selected index to current, active settings.

## Notes on Symbol Type

- The **current** DataBar Expanded status does not change if it is configured as Enabled (Stacked) and the **database** DataBar Expanded status is Enabled.
- The **current** DataBar-14 status does not change if it is configured as Enabled (Stacked) and the **database** DataBar Expanded status is Enabled.
- Data Matrix ECC level is determined by the **current** settings and not by **database** settings. Therefore, the database does not know which ECC level to enable, and has no effect on current Data Matrix ECC settings.

## Request Selected Index Settings

*Definition:* Returns configuration settings for the selected database index.

*Serial Cmd:* <**K255?**,index>

**Example:**

<**K255?,5**>

This command phrase returns the configuration settings for database index 5.

## Request All Configuration Database Settings

*Definition:* Returns configuration settings for all indexes in the Configuration Database.

*Serial Cmd:* <**K255?**>

**Example:**

**<K255?>**

This command phrase returns the configuration settings for all 10 database indexes.


# **12 Terminal**

## **Contents**

Terminal Window.....	12-2
Find .....	12-3
Send .....	12-4
Macros.....	12-5
Terminal Window Menus.....	12-6


This section describes the **Terminal** window and macro functions in **ESP**.

# Terminal Window

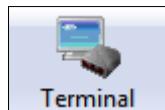

Click this button to display the **Terminal** view.

The following view will appear:

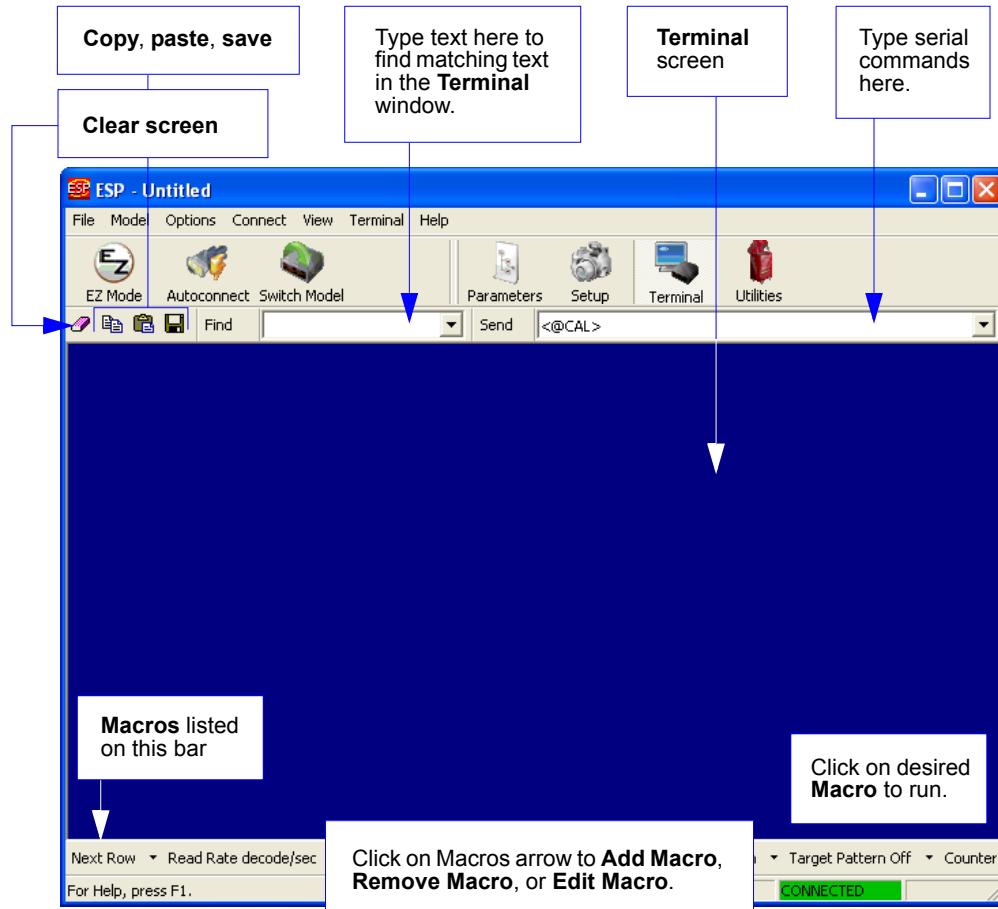

The **Terminal** screen allows you to send serial commands to the imager by using Macros, by copying and pasting, or by typing commands in the **Send** text field.

The **Terminal** screen also displays symbol data or information from the imager.

You can also right-click on the **Terminal** screen to bring up a menu of further options.

## Find

The **Find** function allows you to enter text strings to be searched for in the **Terminal** window. For example, a series of symbols have been scanned into the **Terminal** view and you want to determine if a particular symbol whose data begins with “ABC” has been read.

1. Type “ABC” into the **Find** box.



2. Press **Enter**.

The first instance of “ABC” will be highlighted in the **Terminal** window.

3. Click the **Find** button to the left of the text field to locate additional instances of “ABC”.

## Send

The **Send** function allows you to enter serial commands and then send them to the imager.


1. Type the command into the **Send** box.



2. Press **Enter**.
3. Click the **Send** button to the left of the text field to send .

## Macros

Macros can be stored in a macro selection bar, edited in a separate window, and executed by clicking on the macro name.

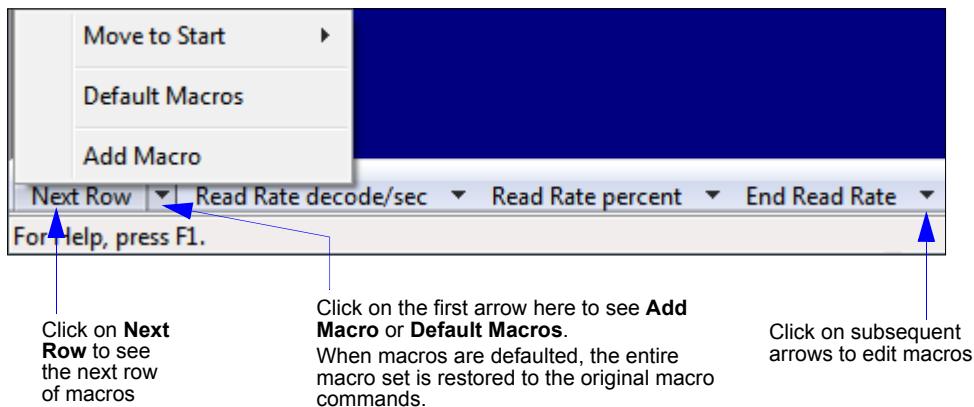

When you click on the macro name, the macro is executed in the **Terminal** window. If this is a command, it is sent to the reader at the same time that it is displayed.

### ***Editing a Macro***

When you click the arrow next to any macro and select **Edit**, the following appears:



You can edit an existing macro or type in the **Macro Name** text field and define it in the **Macro Value** text field. Click **OK**.

# Terminal Window Menus


Right-click on the Terminal window to display the following menu:



- **Copy** selected text to clipboard.
- **Paste** from Terminal or other text.
- **Clear** all text in Terminal window.
- **Select All** text in the Terminal window.
- **Save...** brings up a **Save As** dialog.
- **Change Font...** of text in Terminal; brings up a **Font** dialog.
- **Change Echo Font...** to change typed text; brings up a **Font** dialog.
- **Enable Echo** enables Echo text (typed by user).
- **Change Background Color** of Terminal window.
- **Non-Printable Characters** allows you to hide non-printable characters, or to show them in **Standard** or **Enhanced** format.
- **Default Settings** returns all the above settings to default.
- **Keyboard Macros** allows you to create new keyboard macro commands that can be sent from function keys (F2, F4, F5, etc.)

## Terminal Dropdown Menu

The dropdown Terminal menu has **Capture Text**, **Save Current Text**, **Send File**, **Find Next**, and **Find Previous** functions, as well as the same functions defined above.

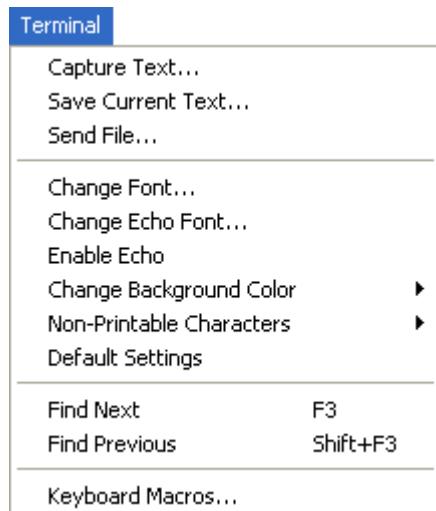

- **Capture Text...** lets you append data in real time to a text file of your choice. While in operation, the text file cannot be opened. You can select Pause to interrupt the capture flow or Stop to end the flow and open the file.
- **Save Current Text...** saves all text in the Terminal window to a text file.
- **Send File** allows you to browse for specific files and send them to the reader.
- **Find Next** searches for a user-defined section of text in the Terminal.
- **Find Previous** operates in the same way as Find Next, but searches backward through Terminal text.

# 13 Utilities

## Contents

Serial Utility Commands .....	13-2
Read Rate .....	13-4
Counters .....	13-6
Device Control .....	13-8
Differences from Default .....	13-9
Master Database .....	13-10
Firmware .....	13-16
Default/Reset/Save .....	13-19
Imager Status Requests .....	13-21
Learn Operations .....	13-23
Other Operational Serial Commands .....	13-24

Utility commands are generally commands that are performed during imager operations to check or determine read rates, or to perform miscellaneous operations on imager hardware. Serial utility commands are not prefaced with a “K” and a numeric code, nor do they require an initialization command (**<A>** and **<Z>**). They can be entered from within any terminal program or from **ESP’s Terminal** or **Utilities** windows.

# Serial Utility Commands

**Note:** For a list of all K commands, see [Serial Configuration Commands](#).


Type	Command	Name
Read Rate	<C>	Enter Decode Rate Test
	<Cp>	Enter Percent Rate Test
	<J>	Exit Decode Rate and Percent Rate Test
Counter Request and Clear	<N>	No Read Counter
	<O>	No Read Counter Reset
	<T>	Trigger Counter
	<U>	Trigger Counter Reset
	<V>	Good Read/Match Counter
	<W>	Good Read/Match Counter Reset
	<X>	Mismatch Counter
	<Y>	Mismatch Counter Reset
	<G>	Store Next Symbol Read to Database Index 1
Master Database	<Gn>	Store Next Symbol Read to Database Index n
	<NEWM>	New Master Load Status
	<#>	Display All Firmware Part Numbers
Part Number / Checksum	<#a>	Display Application Code Part Number
	<#b>	Display Boot Code Part Number
	<#p>	Display Profile Module Part Numbers
	<!>	Display All Available Firmware Checksums
	<!a>	Display Application Code Code Checksum
	<!b>	Display Boot Code Checksum
	<!p>	Display Profile Module Checksum
	<L1>	Programmable Output 1
	<L2>	Programmable Output 2
Device Control	<L3>	Programmable Output 3
	<I1>	Targeting System On
	<I0>	Targeting System Off
	<I>	Disable Imager
	<H>	Enable Imager
	<a1>	Include PDF Information in Preamble (PDF417)
	<A>	Reset (does not save for power-on)
Default/Reset/Save	<Ard>	Reset and Recall Microscan Defaults
	<Arp>	Reset and Recall Power-On Parameters
	<Arc>	Reset and Recall Customer Default Parameters
	<Z>	Save Current Settings for Power-On

	<b>&lt;Zc&gt;</b>	Save Current Settings as Customer Default Parameters for Power-On
<b>Default/Reset/Save</b>	<b>&lt;Zrd&gt;</b>	Recall Microscan Default Parameters and Save for Power-On
	<b>&lt;Zrc&gt;</b>	Recall Customer Default Parameters and Save for Power-On
<b>Imager Status Request Commands</b>	<b>&lt;?&gt;</b>	Imager Status Byte
	<b>&lt;K?&gt;</b>	All Status Request
	<b>&lt;K??&gt;</b>	All Descriptor Status Request
	<b>&lt;K?#&gt;</b>	All Range Status Request
	<b>&lt;Kn?n?&gt;</b>	Single Status Request
	<b>&lt;Kn?n?&gt;</b>	Single Descriptor Status Request
	<b>&lt;Kn?n?#&gt;</b>	Single Range Status Request
<b>Learn</b>	<b>&lt;LEARN&gt;</b>	Initiate Learn Operation
	<b>&lt;UNLEARN&gt;</b>	Initiate Unlearn Operation
	<b>&lt;LEARN?&gt;</b>	Display Learn Status
<b>Other Operational Commands</b>	<b>&lt;uy, path, filename&gt;</b>	Y-Modem Upload Transfer Options
	<b>&lt;dy, path, filename&gt;</b>	Y-Modem Download Transfer Options
	<b>&lt;op,9&gt;</b>	Image Library Request
	<b>&lt;@CAL&gt;</b>	Autocalibrate
	<b>&lt;BCCFG&gt;</b>	Enter Bar Code Configuration
	<b>&lt;VAL&gt;</b>	Static Validation

## Read Rate



Click the **Utilities** button and then the **Read Rate** tab to display the Read Rate view.

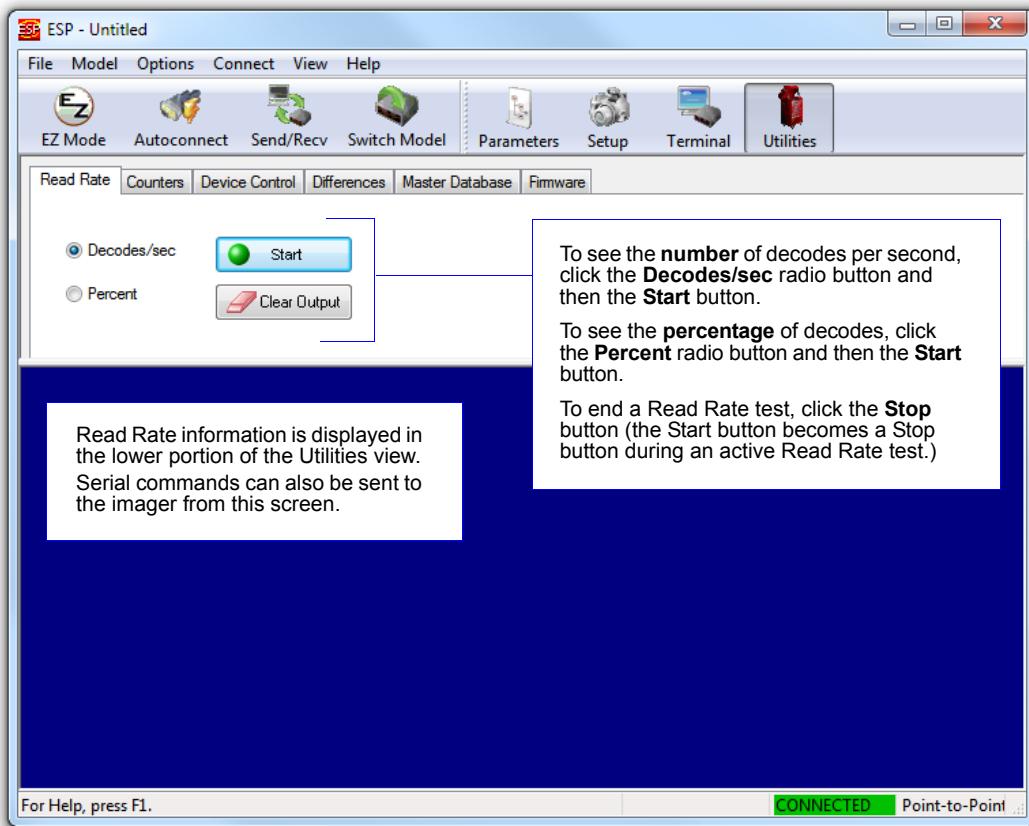

## **Read Rate Serial Utility Commands**

### **Enter Decodes/Second Test**

Sending **<C>** instructs the imager to transmit the decodes per second and symbol data (if any). The decode rate can vary dramatically due to the angle and location of the symbol in relation to the field of view. This test is very useful in aligning and positioning the imager during setup.

### **Enter Percent Test**

Sending **<Cp>** instructs the imager to transmit the percentage of decodes and any decoded symbol data.

### **End Read Rate Test**

Sending **<J>** ends both the Percent test and the Decodes/Second test.

# Counters



Click the **Utilities** button and then the **Counters** tab to display the Counters view.

**Counter** commands can be a numeric value from **00000** to **65535**. After reaching the maximum numeric limit of 65535, an error message will be displayed and the counter will automatically roll over and start counting again at 00000. To obtain the cumulative total of counts after the rollover has occurred, add 65536 per each rollover (the imager does not keep track of the number of rollovers) to the current count.

**Note:** All counter values will be lost if power is cycled, or if the imager receives a **Reset** or **Save** command.

Click the **Request** button to display the appropriate count or **Clear** to set the counter to zero.

The screenshot shows a software interface with a top navigation bar containing tabs: Read Rate, Counters (which is highlighted in yellow), Device Control, Differences, Master Database, and Firmware. Below the tabs are several buttons and input fields. On the left, there are two main sections: 'Trigger' and 'Good Read'. Each section contains a 'Request' button, a 'Clear' button, and an input field labeled 'Trigger:' or 'Good Read:'. To the right of these sections is a callout box with a blue border containing the following text: 'Trigger, Good Read, No Read, and Mismatch counters can be requested and cleared simultaneously (**Request All** and **Clear All** buttons) or individually (**Request** and **Clear** buttons to the left of each item).'. At the bottom of the interface, there are three more sections: 'No Read', 'Mismatch', and another 'Request/Trigger' pair.

Request	Clear	Trigger:
Request	Clear	Good Read:
Request	Clear	No Read:
Request	Clear	Mismatch:

## Counters by Serial Command

### No Read Counter

Sending <N> displays the total number of No Reads that have occurred since the last reset.

### No Read Counter Reset

Sending <O> sets the No Read Counter to 00000.

### Trigger Counter

Sending <T> displays the total number of triggers since the last reset.

### Trigger Counter Reset

Sending <U> sets the trigger counter to 00000.

### Good Read/Match Counter (or Good Read Counter)

Sending <V> displays the total number of good reads matching the master symbol, or, if **Master Symbol** is not enabled, the number of good reads since the last reset. This counter is always enabled, but will only work as a match count when **Master Symbol** is enabled. If **Master Symbol** is not enabled, this counter records the number of good reads. This count can be requested at any time.

### Good Read/Match Counter Reset

Sending <W> sets the Match Counter to 00000.

### Mismatch Counter

Sending <X> displays the number of decoded symbols since the last reset that do not match the master symbol.

### Mismatch Counter Reset

Sending <Y> sets the Mismatch Counter to zero.

# Device Control



Click the **Utilities** button and then the **Device Control** tab to display the Device Control view.

A screenshot of a software interface titled 'Device Control'. At the top, there is a horizontal menu bar with tabs: 'Read Rate', 'Counters', 'Device Control' (which is highlighted in yellow), 'Differences', 'Master Database', and 'Firmware'. Below the menu, there are two main sections. The first section, 'Outputs', contains three buttons labeled 'Output 1 Pulse', 'Output 2 Pulse', and 'Output 3 Pulse'. The second section, 'Extras', contains two buttons labeled 'Disable Reader' and 'Enable Reader'. To the right of the 'Extras' section, a callout box provides a detailed description of the 'Output 1 Pulse', 'Output 2 Pulse', and 'Output 3 Pulse' buttons.

The **Output 1 Pulse**, **Output 2 Pulse**, and **Output 3 Pulse** buttons activate the link between the + and – of the host connector. The buttons in the **Extras** section Disable or Enable the reader.

## Device Control by Serial Command

### Output 1 Pulse

Sending <L1> activates the link between Output 1 (+) and Output 1 (–) of the host connector (regardless of Master Symbol or Output 1 status).

### Output 2 Pulse

Sending <L2> activates the link between Output 2 (+) and Output 2 (–) of the host connector (regardless of Master Symbol or Output 2 status).

### Output 3 Pulse

Sending <L3> activates the link between Output 3 (+) and Output 3 (–) of the host connector (regardless of Master Symbol or Output 3 status).

### Disable Reader

Sending <I> will turn the imager OFF, end the current read cycle, and will not allow the imager to enter another read cycle until turned ON. This feature is useful during extended periods of time when no symbols are being decoded, or the imager is being configured. Disabling the imager will not affect any commands that have already been downloaded.

### Enable Reader

Sending <H> will turn the imager ON and allow it to enter read cycles.

# Differences from Default



Click the **Utilities** button and then the **Differences** tab to display the Differences from Default view.

Clicking the **Differences from Default** button will cause **ESP** to check all stored configuration settings and compare them to default settings. All settings that are different than default will appear in the left column (shown below), and descriptions of those settings will appear in the right column.

Click this button for a list of **ESP** configuration settings that are different than default settings.

Click **Generate Bar Code** to display the **Bar Code Dialog**. Then create configuration symbols containing the required configuration commands.

Command	Description
<K200,3>	Mode (External Edge)
<K220,,50>	Read Cycle Timeout (50)
<K474h,2>	Code 128 (Edge to Edge)
<K810,3>	Output On (No Read)
<K811,1>	Output On (Good Read/Match)
<K812,2>	Output On (Mismatch)

**Differences from Default**
**Generate Bar Code**

**Save As...**
**Send and Save**
**Send to Reader**

Send configuration settings to the imager without saving by clicking **Send to Reader**.

Click **Save As** to save the report as plain text or a tab-delimited text file.

Send configuration settings to the imager and save in **ESP** by clicking **Send and Save**.

- To create a symbol containing any of the command settings in the table, click **Generate Bar Code**.
- To save the **Differences from Default** report, either as plain text or as a tab-delimited text file, click **Save As**.
- Click **Send and Save** to send the settings to the imager and save them, or **Send to Reader** to send the settings without saving them.

**Important:** To use **Differences from Default**, connect to the imager and **Receive Reader Settings** via the **Send/Recv** button on the toolbar.

# Master Database



Click the **Utilities** button and then the **Master Database** tab to display the Master Database view.

**Important:** The **Master Database** is used for all **Matchcode** modes except **Sequential** and **Wild Card**, both of which use **Master Database Index # 1**.

## Master Database Overview

Used where more than one master symbol is required, as in a **Multisymbol** setup, for matching and other **Matchcode** operations.

Allows the user to define up to 10 master symbols as the master symbol database, which can be entered by keyboard, scanned in, displayed, or deleted by serial or **ESP** commands.

1. Click the **Master Database** tab.
2. Enable **Matchcode Type**.
3. Set the **Master Symbol Database Size**.
4. Select the database index in which the master symbol will be entered.
5. Do one of the following to enter master symbol data:
  - a. Double-click the index row to type data directly into the index.
  - b. Click the **Read Symbol into Selected Index** to enter the next decoded symbol.

The screenshot shows the "Master Database" tab of the software interface. At the top, there are two buttons: "Set Master Symbol Database Size here." and "Read Symbol into Selected Index". Below these are several controls: a dropdown menu for "Master Symbol Database Size" set to 5, a checked checkbox for "Matchcode Type", and two buttons: "Receive Reader's Database" and "Send Database to Reader". A large table below lists "Index" and "Master Symbol Data" for indices 1 through 5. A callout box points to the "Send Database to Reader" button with the text "Saves the database to the imager.". Another callout box points to the "Receive Reader's Database" button with the text "Loads the imager's saved master symbols into ESP.". A third callout box points to the table with the text "Double-click a row to enter data into popup text box.". A note at the bottom left states: "Caution: Since the total number of characters available for the master symbol database is limited, changes to the Master Symbol Database Size will re-allocate the number of characters available for each master symbol and could cause existing master symbols to be deleted. See manual for details."

## Master Symbol Database Size

**Definition:** **Number of Master Symbols** allows you to select **1 to 10** master symbols for the master symbol database.

**Serial Cmd:** <**K231,master symbol database size**>


**Note:** You must follow this command with a save command <**A**> or <**Z**>.

**Default:**

**1**

**Options:**

1 to 10

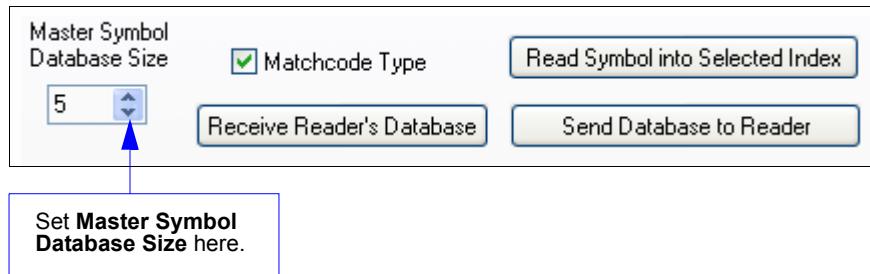

**Caution:** Since the total number of characters available for the master symbol database is **3000**, changes to the **Master Symbol Database Size** will re-allocate the number of characters available for each master symbol and could cause existing master symbols to be deleted (except master symbol #1, unless it also exceeds the size limitation).

The table below specifies the maximum number of characters available to each symbol according the number of master symbols defined, from 1 to 10.

<b>Master Symbol Number</b>	<b>Maximum Characters</b>	<b>Master Symbol Number</b>	<b>Maximum Characters</b>
# 1	3000	# 6	500
# 2	1500	# 7	428
# 3	1000	# 8	375
# 4	750	# 9	333
# 5	600	# 10	300

## Enter Master Symbol Data

**Usage:** Allows you to enter master symbol data for any enabled master symbol index number (1 to 10), provided the total number of characters does not exceed the maximum allowed.

**Serial Cmd:** <**K231,master symbol number,master symbol data**>


**Options:** Enter data for 1 to 10 symbols (any combination of ASCII text up to the maximum allowed).

For example, to enter data for master symbol 9, after making certain that master symbol database size is enabled for 9 or more symbols, send <**K231,9,data**>.

**Important:** The ASCII characters <, >, and , can only be entered as hex pairs.

**Caution:** If no data is entered, the existing data will be deleted.

- ESP:**
1. Open the **Utilities** menu.
  2. Set the number of master symbols you want to create in **Master Symbol Database Size**.
  3. Double-click on each symbol number you want to set up and copy, or type your data in the popup dialog and click **OK**.

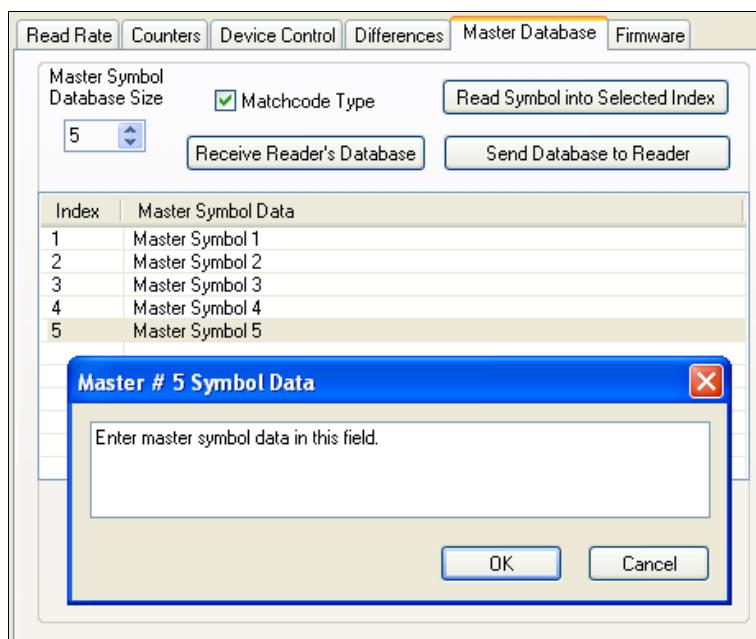

4. When all your data has been entered, click the **Send Database to the Reader** button.

## Request Master Symbol Data

**Definition:** Returns master symbol data for any enabled master symbols from 1 to 10.

For example, to request master symbol # 5, enter <K231?,5>. The imager transmits master symbol # 5 data in brackets in the following format: <5/>.

If no master symbol data is available, the output will be: <5/>.

**Serial Cmd:** <K231?,*master symbol number*>

**Caution:** Be sure to add the ? or you will delete the master symbol.

**Note:** This command returns the number of master symbols if no number is included.

**ESP:** 1. Click the Utilities button and the Master Database tab.

2. Click the Receive Reader's Database button.



## Request All Master Symbol Data

**Definition:** This command will return master symbol data for all symbols enabled (up to 10).

**Serial Cmd:** <K231?>

---

## **Read Next Symbol as Master Symbol**

**Definition:** After you've set the size in the database, you can order the imager to read the next symbol as the master symbol for any given master symbol number.

**Serial Cmd:** <**G**master symbol number>

To store the next symbol decoded as master symbol # 1, send:

<**G**> or <**G1**>

To store the next symbol decoded as the master symbol for any other master symbol database number, send:

<**G**master symbol number [1-10]>.

For example, <**G5**> will cause the next symbol read to be entered as master symbol # 5.

**ESP:** In the **Master Database** tab under the **Output Format** menu,

1. Select the master symbol index number in which you want to store the symbol data.
2. Click the **Read Symbol into Selected Index** button.

**Caution:** If you've selected an index which already has existing data, that data will be copied over by new decoded data when you use this command.

## **Request New Master Status**

**Usage:** Informs the user when a new master symbol is pending and which position it is in.

**Definition:** Returns the position in the master symbol database that will be loaded on the next read.

**Serial Cmd:** <**NEWM**>

The imager returns: <**NEWM/next master to load**>

Once a symbol has been read and loaded, the status will be cleared and the response will be <**NEWM/0**>.


(See also **New Master Pin** in **Matchcode**.)

## Delete Master Symbol Data

**Definition:** You can directly delete the master symbol data by serial command or by **ESP**.

**ESP:**

1. Click the **Utilities** button to access the master symbol.
2. Click the **Master Database** tab and double-click the symbol number you want to delete.
3. Delete text and click **OK**.

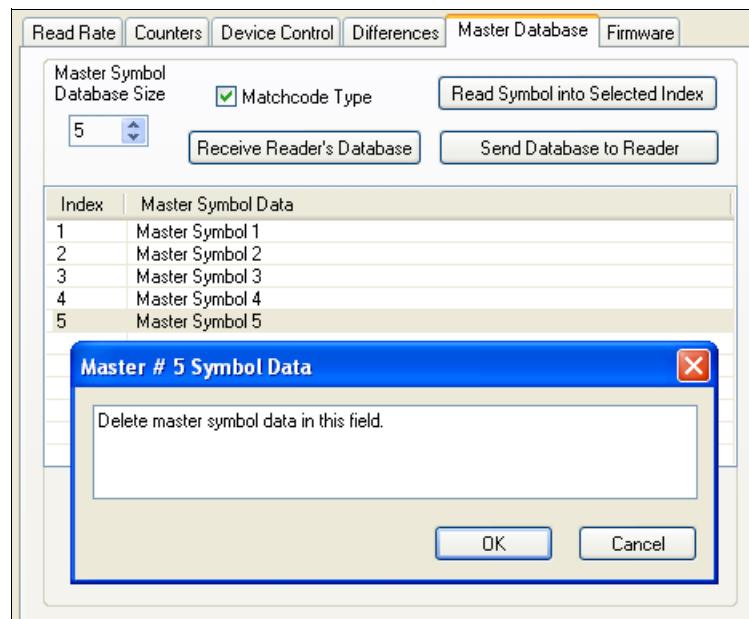

**Serial Cmd:** <**K231,master symbol number,>**

To delete a master symbol, enter the database number and a comma, but leave the data field empty. For example, to delete master symbol # 5, send the following: <**K231,5,>**. The command is entered with a blank master symbol data field, which tells the imager to delete the selected master symbol from the database.

## Firmware



Click the **Utilities** button and then the **Firmware** tab to display the Firmware view.

A screenshot of a software interface titled "Firmware". The top navigation bar includes tabs for "Read Rate", "Counters", "Device Control", "Differences", "Master Database", and "Firmware", with "Firmware" being the active tab. Below the tabs, there are two main sections: "Firmware Update" and "Firmware Verification".

- Firmware Update:** Contains a dropdown menu labeled "App Code" and a blue "Start..." button.
- Firmware Verification:** Contains two sets of controls. The first set includes a dropdown menu labeled "App Code", a "Request Part No." button, and an empty text input field. The second set includes a dropdown menu labeled "App Code", a "Request Checksum" button, and an empty text input field.

### Firmware Update

Application code versions are specific to your imager. Consult with your sales representative before downloading application code. If needed, an application code will be sent to you in the form of a \*.mot file.

#### To download application code:

1. First, be sure that your imager is connected to the host.
2. Apply power to the imager.
3. Before updating, you should verify the current firmware.
4. Click in the Firmware Update text box and select the file type you want to download. This will open a file locator box.
5. Navigate to the appropriate file (it will be a \*.mot file), open the file and click **Start**.

**Caution:** Do not interrupt power or disconnect the host cable while download is in progress. Be sure that each download is complete before moving on to the next.


**Important:** When updating firmware, be sure that the application code and boot code versions are mutually compatible.

## Firmware Verification

### **Request Part Number by ESP**

You can send a request to the imager for part numbers, checksums, boot code, and application code.

1. Click the **Firmware** tab.
2. From the pulldown selection box to the left of the **Request Part No.** button, make your selection.
3. Select the code type to see its part number displayed in the text field to the right of the **Request Part No.** button.

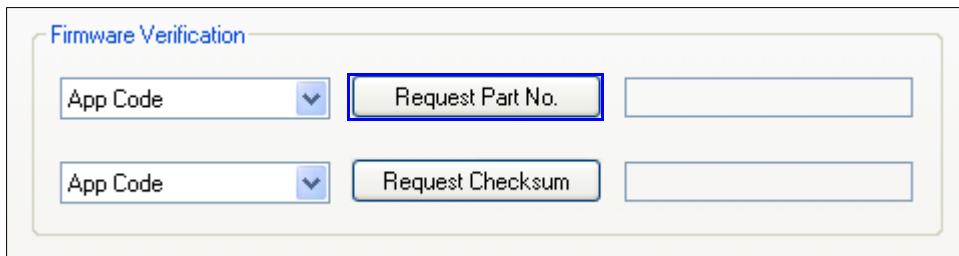


### **Request Part Number by Serial Command**

- When you send **<#>** (a request for all product part numbers), the imager returns:  
**<#b/BOOT\_P/N><#a/APP\_P/N><#p/PROFILE\_P/N>**.
- When you send **<#a>** (a request for the application code part number), the imager returns:  
**<#a/APP\_P/N>**.
- When you send **<#b>** (a request for the boot code part number), the imager returns:  
**<#b/BOOT\_P/N>**.
- When you send **<#p>** (a request for profile module part numbers), the imager returns:  
**<#p/PROFILE\_P/N>**.

### **Request Checksum by ESP**

You can send a request to the imager for part numbers, checksums, boot code, and application code.

1. Click the **Firmware** tab.
2. From the pulldown selection box to the left of the **Request Checksum** button, make your selection.
3. Select the code type to see its checksum displayed in the text field to the right of the **Request Checksum** button.

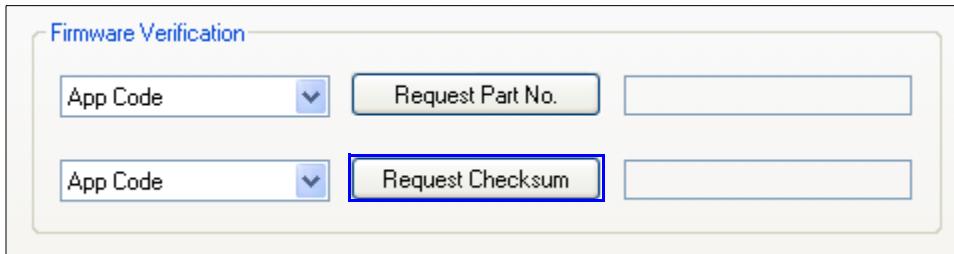

### **Request Checksum by Serial Command**

- When you send **<!>** (a request for all available firmware checksums), the imager returns:  
**<!b/BOOT\_CHECKSUM><!a/APP\_CHECKSUM><!p/PROFILE\_CHECKSUM>**
- When you send **<!a>** (a request for the application code checksum), the imager returns:  
**<!a/APP\_CHECKSUM>**
- When you send **<!b>** (a request for the boot code checksum), the imager returns:  
**<!b/BOOT\_CHECKSUM>**
- When you send **<!p>** (a request for profile module checksum), the imager returns:  
**<!p/PROFILE\_CHECKSUM>**

# Default/Reset/Save

Understanding and controlling your imager's active, saved, and default settings is critical to its successful operation.

	<i>Function</i>	<i>Serial Cmd</i>	<i>ESP (first, right-click in any menu tree)<sup>a</sup></i>	<i>EZ Button</i>
<b>Resets (not saved for power-on)</b>	Reset	<A>	Save to Reader, Send No Save	No
	Reset and Recall Microscan Defaults	<Ard>	No	No
	Reset and Recall Power-On Parameters	<Arp>	No	No
	Reset and Recall Customer Default Parameters	<Arc>	No	No
<b>Saved for Power-on</b>	Save Current Settings for Power-On	<Z>	Save to Reader, Send and Save	No
	Save Current Settings as Customer Default Parameters for Power-On	<Zc>	Save to Reader, Send and Save Customer Defaults for Power-On <sup>b</sup>	No
	Recall Microscan Default Parameters and Save for Power-On	<Zrd>	No	No
	Recall Customer Default Parameters and Save for Power-On	<Zrc>	No	Press and hold while powering on imager

a. When you right-click in a menu tree and select **Default Current Menu Settings** or **Default All ESP Settings**, it is important to note that only **ESP** settings are defaulted. To save these defaults to the reader itself, you need to follow up with a **Save to Reader, Send and Save** command.

b. Only available in **ESP** if enabled under the Options pulldown menu.

## Resets

Resets (“**A**” commands) affect only the current settings (active memory) and are not saved for power-on.

## Saved for Power-on

Power-on parameters (“**Z**” commands) are saved to NOVRAM and recalled and loaded into current parameters when power is cycled to the imager or the **<Arp>** command is issued.

## Defaults

Defaults are Microscan firmware settings or saved customer settings that can be recalled, either by software or hardware reset.

## Customer Default Parameters

Customer default parameters (saved by **<Zc>**) are the same set of parameters as power-on parameters but are saved in a different, isolated section of NOVRAM. This allows a user essentially to create a backup set of parameters that can be recalled in the event that the current parameters or power-on parameters have been accidentally changed or are no longer desired.

It is important to note that a hardware default does not affect customer default parameters. For example, a user that has inadvertently changed communication settings and saved them with a **<Z>** command, may not know the correct settings or have the capability to communicate within those settings. By first doing an EZ button default or hardware default to restore the known Microscan defaults, the user can then recall the previous customer-saved settings with an **<Arc>** or **<Zrc>** command.

## Microscan Default Parameters

Microscan default parameters are contained in the firmware and cannot be changed.

## Software Defaults

Microscan default parameters can be recalled (loaded into current settings) with **<Ard>** command or recalled and saved for power-on with the **<Zrd>** command.

## Hardware Default

If a software default and reset is not possible, it may be necessary to reset the reader by shorting (connecting) specific pins. This procedure has the same effect as the **<Zrd>** software command.

**Important:** For this reset to occur, this command must be executed within 60 seconds of a power-on or a reset.

1. Apply power to the reader.
2. Locate Pin 3 (Default) and Pin 7 (Ground) on the M12 connector. (Access depends on wiring configuration. May require a QX-1 and accessory cable).  
**Caution:** Be certain that the correct pins are located. Connecting the wrong pins could cause serious damage to the unit.
3. Momentarily connect these wires (or pins) and listen for a series of short beeps.
4. Within 3 seconds, connect them again. A longer beep should be heard. If not, repeat the process.

## Default on Power-On

You can also use the EZ button to default the reader by holding it down while applying power to the reader, provided that this feature is enabled.

# Imager Status Requests

## <?> Status Byte

The imager responds to a status request <?> with a two character hex value, such as <?/22>. To determine status:

1. Look up the binary conversion in the table below.

For example, the first hex **2** would be **0 0 1 0** in binary, as read from binary digits **3** through **0**; the second hex **2** is also **0 0 1 0** as read from binary digits **7** through **4**.

2. Next, enter your binary values from the table below in the “Binary” column next to the appropriate bit.

<b>Bit</b>	<b>Binary</b>	<b>Imager Status</b>
0	0	Command error detected
1	1	Command received
2	0	Communication error detected
3	0	Flash sector unprotect failure
4	0	Host port buffer overflow
5	1	Imager is in a read cycle

3. Under “Binary,” interpret **1s** as true and **0s** as not true. For example, bit 1 has a **1** in the “Binary” column, indicating “Command Received”. Bit 5 is also a **1**, indicating that the “Imager is in a read cycle”.

<b>Hex Value</b>	<b>Binary Bit Digits</b>			
	<b>7</b>	<b>6</b>	<b>5</b>	<b>4</b>
<b>3</b>	<b>2</b>	<b>1</b>	<b>0</b>	
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1
A	1	0	1	0
B	1	0	1	1
C	1	1	0	0
D	1	1	0	1
E	1	1	1	0
F	1	1	1	1

## <K?> All Status Request

This is the fastest way to learn the imager’s current configuration. Sending this request will return the current settings of all commands, starting with the lowest K command value and ending with the highest K command value.

## <K??> All Descriptor Status Request

This request will return all current descriptors for every K command, starting with the lowest K command value and ending with the highest K command value.

## <K?#> All Range Status Request

This request will return the current settings of all commands within the user-defined range, starting with the lowest user-defined K command value and ending with the highest user-defined K command value.

## **<Knnn?> Single Status Request**

This request will return the value of the variables associated with the requested K command. The request of a single entry of a database command cannot exceed the number of database slots for the specific command.

## **<Knnn??> Single Descriptor Status Request**

This request returns the basic functional description of all fields in the requested K command.

## **<Knnn?#> Single Range Status Request**

This request will return the value range and storage type description of all fields in the requested K command.

## **<Knnn?\*> Display Command Wildcard**

This request will return the individual K command status, description, and range for each parameter.

# Learn Operations

## Learn

Sending the **<LEARN>** command from ESP's Terminal will put the imager into a mode of operation that will cause it to "learn" the next Data Matrix symbol decoded. This mode of operation will remain active until either a Data Matrix symbol is decoded or the call is made to disable the mode and revert back to normal operation. Upon decoding a Data Matrix symbol, the image processing will save pertinent information regarding the target symbol to allow it to be processed more quickly and consistently.

The data collected by the Learn operation can be saved for a Power-On condition by sending the **<Z>** command.

## Unlearn

Sending the **<UNLEARN>** command will cause the imager to discard any information acquired during a Learn operation.

The Unlearn state can be saved for a Power-On condition by sending the **<Z>** command.

## Learn Status

Sending the **<LEARN?>** request will return the current status of Learn operations.

Responses are sent in this format:

**<LEARN,0>** (Default; symbol has not been learned.)

**<LEARN,1>** (Learn operation in progress.)

**<LEARN,2>** (Symbol has been learned.)

## Learn Persistence

The learn state and parameters persist in the same way as ordinary parameters.

*Examples:*

- A MS-4Xi in a **Learned** state has not been saved. Cycling power will remove any Learned state information and the imager will power-on in its configured state.
- A MS-4Xi is saved in a **Learning** state. The imager will power-on in the Learning state and will learn the first Data Matrix symbol decoded.
- A MS-4Xi is saved in a **Learned** state. The imager will power-on in the Learned state and will only decode the learned symbol type.
- A MS-4Xi in a **Learned** state is issued a reset default command **<Ard>**. The unit will return to an **Unlearned** state but if power is cycled it will return to its saved state.

## Other Operational Serial Commands

The following serial utility commands can be entered from **ESP's Terminal** or a PLC:

### **Y-Modem Upload Transfer Options**

<**uy**,path,filename>

### **Y-Modem Download Transfer Options**

See [MS-4Xi Image Output](#) for an explanation of how to use this feature.

<**dy**,path,filename>

### **Image Library Request**

<**op,9**> Manages files in a selected directory.

<b>File Source</b>	<b>Explanation</b>
<b>(Nothing)</b>	All files in “root” directory
<b>/</b>	All files in “root” directory
<b>/saved</b>	All files in “saved” directory
<b>*.*</b>	All files in all directories
<b>/del</b>	Deletes all files in the root director
<b>/saved/del</b>	Deletes all files in the saved directory
<b>del*.*</b>	Deletes files in all directories

## Bar Code Configuration Mode

**Definition:** **Bar Code Configuration Mode** is a way of programming the imager by using ECC 200 Data Matrix symbols.

**Serial Cmd:** <**BCCFG**>

**Bar Code Configuration Mode** can be entered three different ways:

1. By forcing the imager into **Bar Code Configuration Mode** by serial command <**BCCFG**>.
2. By configuring one of the 4 EZ Button positions to **Bar Code Configuration Mode**.
3. By reading a Data Matrix symbol with a special code word used by ISO/IEC 16022 to signify imager programming. This can be either in a regular read cycle or during a read rate test. Reading this symbol in the calibration routine will have no effect.<sup>1</sup>

Once **Bar Code Configuration Mode** has been entered, the Data Matrix symbols can be thought of as serial data. You can configure the imager by printing labels in Microscan's serial command format. Commands are processed as if the data were streamed in through the serial port. The imager will acknowledge the symbol with a beep, green flash, and echo the serial data to the host. If the command causes the imager to produce more serial output, such as serial verification or counter requests, the data will be routed to the host port.

**Bar Code Configuration Mode** can be exited by any reset <**A**> or <**Z**> command as well as a <**J**> or a quick press and release of the EZ Button.

The command to exit **Bar Code Configuration Mode** can be included as part of the Data Matrix symbol. For example, try encoding <**K200,4**><**K220,1**><**J**> into a Data Matrix symbol. This configures the imager to enable **Serial Trigger Mode**, to program a new trigger to end the read cycle, and to exit **Bar Code Configuration Mode** with <**J**>.

To end all EZ Button functions, press the EZ Button once and quickly release.

---

1. In normal reading modes, it is required to read a special Data Matrix symbol with a special codeword used by ISO/IEC 16022 to signify imager programming.

---

*Other Operational Serial Commands*

# **14 Output Format**

## **Contents**

Output Format Serial Commands.....	14-2
Output Format Status .....	14-3
Format Assign .....	14-4
Format Extract.....	14-5
Format Insert.....	14-7
Output Filter Configuration .....	14-9
Number of Filters.....	14-14

This section explains how to control the formatting and filtering of decoded symbol data for output.

## **Output Format Serial Commands**

Format Extract	< <b>K740</b> ,output index,start location,length>
Format Insert	< <b>K741</b> ,output index,length,hex string>
Format Assign	< <b>K742</b> ,symbol number,status>
Format Status	< <b>K743</b> ,output format status>
Output Filter Configuration	< <b>K744</b> ,filter number,symbology,length,wildcard,placeholder data,unused,database index>
Ordered Output Filter	< <b>K745</b> ,number of filters>

# Output Format Status

- Definition:** This is a global enable/disable parameter. In order to use formatting you must set up the format using the insert and extract commands, and you must also assign a symbol to format using the **Format Assign** command.
- Serial Cmd:** <K743, output format status>
- Default:** **Disabled**
- Options:** **0 = Disabled**      1 = Enabled

## Output Format Status Disabled


When **Output Format Status** is set to **Disabled**, output formatting is globally disabled.

## Output Format Status Enabled

When **Output Format Status** is set to **Enabled**, output formatting is enabled. However, **Format Assign**, **Format Insert**, and **Format Extract** must be properly set up as well.

## Output Format Status by ESP

On the **Output Format** tab, check the **Enable Output Format** box.

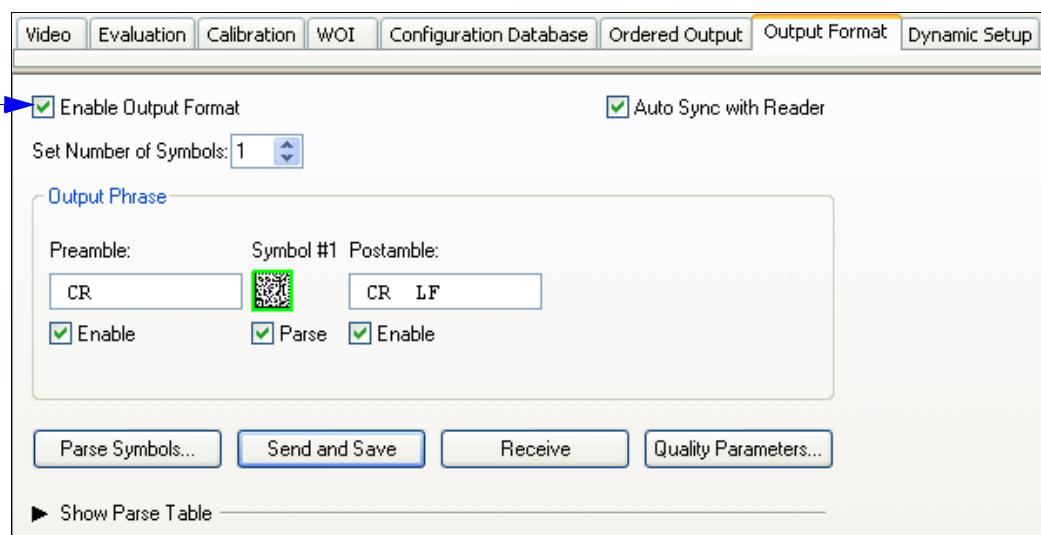

# Format Assign

## Symbol Number

**Definition:** **Symbol Number** refers to the number of the symbol to which output formatting will apply. For example, if you wish to enable user-defined formatting to symbol # 2 in a multisymbol read cycle, you would send the command **<K742,2,1>**.

Note that the number of symbols may exceed the format capabilities.

**Serial Cmd:** <**K742,symbol number,status**>

**Options:** 1 to 10

1 = Formatted output status for symbol # 1.

2 = Formatted output status for symbol # 2.

...

10 = Formatted output status for symbol # 10.

## Status

**Definition:** **Status** refers to the user-defined formatting of a selected symbol position in the read cycle result. Note that there is also a global formatting “enable” command that must be set for the formatting to be applied.

**Serial Cmd:** <**K742,symbol number,status**>

**Default:** **Disabled**

**Options:** **0 = Disabled**      1 = Enabled (Assign parameters to specified symbol.)

## Format Assign by ESP

The screenshot shows the 'Format Assign by ESP' dialog box. At the top left is a checked checkbox labeled 'Enable Output Format'. To its right is a 'Set Number of Symbols' spin box with the value '5'. A callout box with a blue border and arrow points to this spin box with the text: 'Use the Set Number of Symbols spin box to determine the number of symbols to be included in the output phrase.' Below this section is a 'Output Phrase' group box. Inside, there are fields for 'Preamble' (containing 'CR'), 'Symbol #1 Separator' (containing a barcode icon), 'Symbol #2' (containing a barcode icon), 'Symbol #3' (containing a barcode icon), 'Symbol #4' (containing a barcode icon), 'Symbol #5' (containing a barcode icon), and 'Postamble' (containing 'CR LF'). Under each symbol field is a 'Parse' checkbox. The first four 'Parse' checkboxes are checked, while the last two are unchecked. Below the 'Output Phrase' group box is another callout box with a blue border and arrow pointing to the 'Parse' checkboxes with the text: 'Then check the Parse boxes beneath the symbols that you wish to format for user-defined output.'

# Format Extract

## Output Index

**Definition:** **Output Index** refers to the database entry you wish to modify with this command. A formatted output is built by *extracting data from a symbol's original data output* and/or inserting user-defined characters.

It may be helpful to think of individual indexes as positions in the final formatted output you wish to build. Starting with index # 1, enter either an extract or insert command to begin building your desired output string. Then, with the next index number, enter either an extract or insert command to continue building the output string. Continue this process until you are finished building the string.

**Serial Cmd:** <**K740,output index,start location,length**>

**Options:** 1 to 100

## Start Location

**Definition:** Defines the location within the symbol data where the character extraction will begin. The first character extracted will also be the first character in the sequence displayed in user-defined output.

**Serial Cmd:** <**K740,output index,start location,length**>

**Default:** **0**

**Options:** 1 to *n* (maximum number of characters in the symbol data).

## Length


**Definition:** Defines the length (in consecutive characters) that will be extracted and placed in user-defined output.

**Serial Cmd:** <**K740,output index,start location,length**>

**Default:** **0** (disabled; end of format cell array)

**Options:** 1 to *n* (maximum number of characters in the symbol data).

## Format Extract by ESP

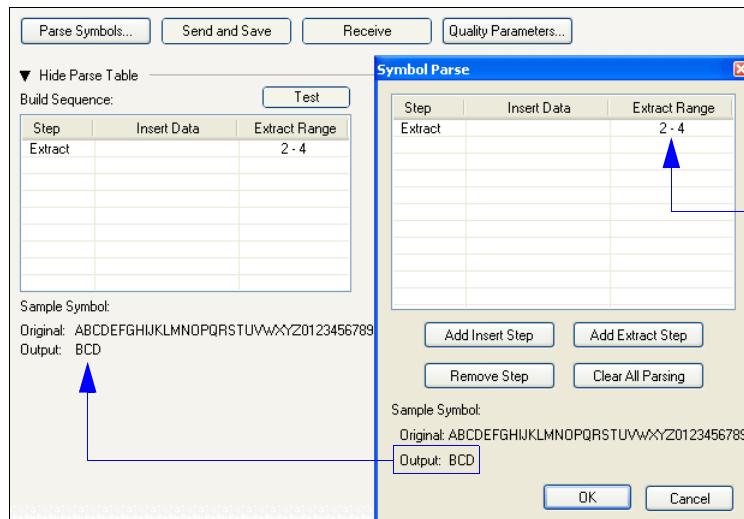

The **Extract Range** function corresponds to the **Start Location** and **Length** parameters in the **Format Extract** serial command.

Multiple character sequences can be extracted and inserted using **Symbol Parse**. In this example, the selected extraction range is characters 2-4. The "Sample Symbol" example on the **Symbol Parse** dialog shows the selected character positions extracted and output as desired. Simultaneously, the data string from the selected symbol is displayed at the bottom left of the **Parse Table**, followed by the user-defined extracted output.

# Format Insert

## Output Index

**Definition:** **Output Index** refers to the database entry you wish to modify with this command. A formatted output is built by extracting data from a symbol's original data output and/or *inserting user-defined characters*.

It may be helpful to think of individual indexes as positions in the final formatted output you wish to build. Starting with index # 1, enter either an extract or insert command to begin building your desired output string. Then, with the next index number, enter either an extract or insert command to continue building the output string. Continue this process until you are finished building the string.

**Serial Cmd:** <**K741**,*output index*,*length*,*hex string*>

**Options:** 1 to 100

## Length

**Definition:** Specifies the length of the user-defined character string that will be inserted. This function is limited to 4 characters per output index, so multiple indexes must be entered in order to insert longer character sequences.

For example, if you wish to insert a 10 character sequence in user-defined output, you would need three commands with consecutive index numbers, where the first two character sequence lengths were 4 and the third was 2.

**Serial Cmd:** <**K741**,*output index*,**length**,*hex string*>

**Default:** **0** (disabled; end of format cell array)

**Options:** 1 to 4

## Hex String

**Definition:** Specifies a character string that represents ASCII characters to be inserted in the database entry. Two hex characters are required for every ASCII character to be inserted in the user-defined output string. These two characters comprise the hex (base 16) value of the ASCII character.

For example, if you wanted to enter the three-character sequence "Hi!" you would enter **3** for the length of the string, and a hex sequence of **486921** for the ASCII sequence to be inserted. (48 = H; 69 = i; 21 = !)

**Important:** Each pair of hex characters represents one ASCII character. Hex character pairs range from 00 to FF. Since you are limited to 4 ASCII characters per insertion per database entry, you are likewise limited to 8 hex characters per insertion per database entry.

**Serial Cmd:** <**K741**,*output index*,*length*,**hex string**>

**Default:** **NUL** (00 in hex)

**Options:** 00 to FF (As many as 4 bytes, or hex pairs.)

## Format Insert

### Format Insert by ESP

**Symbol Parse**

Step	Insert Data	Extract Range
Insert		

Sample Symbol:  
Original: ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789  
Output:

The **Insert** process is very similar to the **Extract** process, except that **Insert** allows the user to enter characters using the **Insert calculator** (shown above).

SP	SP	<input type="text" value=" "/>		
SOH	STX	ETX	EOT	ENQ
ACK	BEL	BS	HT	LF
VT	FF	CR	SO	SI
SI	DC1	DC2	DC3	DC4
NAK	SYN	ETB	CAN	EM
SUB	ESC	FS	GS	RS
US	SP			

Click 'Delete' to remove characters.

---

▼ Hide Parse Table

Build Sequence:

Step	Insert Data	Extract Range
Insert	SP SP	
Extract		3 - 5

Notice that **Extract** and **Insert** share the same **Parse Table**.

Sample Symbol:  
Original: ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789  
Output: CDE

**Symbol Parse**

Step	Insert Data	Extract Range
Insert	SP SP	
Extract		3 - 5

Sample Symbol:  
Original: ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789  
Output: CDE

# Output Filter Configuration

**Definition:** Output filtering is a method of providing a set of good read qualifiers and also providing ordered output. There is a filter for up to the first 10 positions in a multisymbol output. The first filter corresponds to the first symbol output at the end of the read cycle. Each filter has settings for the following four parameters: **Symbology**, **Symbol Length**, **Data**, and **Configuration Database Number**.

**Serial Cmd:** <**K744**, filter number,symbology,length,wildcard,placeholder,data, unused,database index>

## Rules for Output Filter Configuration

### Output Filter Configuration Rule # 1

Each symbol that is decoded must match one of the filters before it can be saved to a read cycle record. There is an exception to this rule, however, when the number of symbols required for a read cycle exceeds the number of active filters. In such a case, unfiltered symbols can be placed into unfiltered output positions.

For example, if the number of symbols required is 6 but there are only 4 active filters, the last 2 positions can be filled by any (unfiltered) qualified symbol.

### Output Filter Configuration Rule # 2

The same filter setup can be used multiple times.

For example, filters 1, 2, and 3 can be set up to filter Data Matrix symbols, and the output will occur in the order the symbols are decoded.

### Output Filter Configuration Rule # 3

All qualified symbols will be sorted and output in the matching filter position. If a symbol matches filter 3, it will be output as the third symbol. If a filter does not have a matching qualified symbol, a No Read message will be output in place of the symbol (assuming the No Read message is enabled).

For example, if there is not a symbol that meets filter 3's requirements, then a No Read message will be output in the third output position.

## **Filter Number**

**Definition:** This is the filter index number that represents the position of the symbol in the data output at the end of the read cycle. This index number should be entered along with the following filter settings for the predetermined symbol position.

**Serial Cmd:** <**K744,filter number,symbology,length,wildcard,placeholder,data,unused,database index**>

**Options:** 1 to 10

## **Symbology**

**Definition:** Specifies the symbology allowed to occupy this location in multisymbol output.

**Note:** To filter or order a symbol, the symbol must meet all the requirements of the selected filter index.

**Serial Cmd:** <**K744,filter number,symbology,length,wildcard,placeholder,data,unused,database index**>

**Default:** **0** (any symbology)

**Options:**

- 0 = Any type
- 1 = Interleaved 2 of 5
- 2 = Code 39
- 3 = Code 128
- 4 = Codabar
- 5 = UPC
- 6 = PDF417
- 7 = EAN 128
- 8 = Code 93
- 9 = Pharmacode
- 10 = GS1 DataBar (RSS)
- 11 = MicroPDF417
- 12 = Composite
- 13 = BC412
- 14 = Data Matrix
- 15 = QR Code
- 16 = Micro QR Code
- 17 = Aztec Code
- 18 = Postal Symbologies

## Length

**Definition:** Specifies the length of the decoded symbol allowed to occupy this location in multisymbol output.

**Note:** To filter or order a symbol, the symbol must meet all requirements of the selected filter index.

**Serial Cmd:** <**K744**,*filter number,symbology,length,wildcard,placeholder,data,unused,database index*>

**Default:** **0**

**Options:** 0 to 64

## Wildcard

**Definition:** This is the character to be used in the data output field when performing a data filter comparison. The wildcard character represents the end of matching, and allows for variable lengths of symbol output.

**Serial Cmd:** <**K744**,*filter number,symbology,length,wildcard,placeholder,data,unused,database index*>

**Default:** “ \* ” = **2A** (hex)

**Options:** Any ASCII input in the form of a pair of hex characters.

Example:

2A = \*

00 = disabled

## Placeholder

**Definition:** The placeholder character requires a character to be present, but does not compare the data value.

**Serial Cmd:** <**K744**,*filter number,symbology,length,wildcard,placeholder,data,unused,database index*>

**Default:** “ ? ” = **3F** (hex)

**Options:** Any ASCII input in the form of a pair of hex characters.

Example:

3F = ?

00 = disabled

## **Data**

**Definition:** This is the data string to be used when comparing symbol data for output filtering and ordering. This data string may also contain wildcard and placeholder characters to facilitate matching. Remember that in order to filter or order symbol data, it must meet all the requirements of the selected filter index.

**Examples:**

- Filter data = “123\*”. This will match data strings of “123”, “123456”, and “123ABC”, but not “12”.
- Filter data = “123\*AB?C”. This will be interpreted as “123”.
- Filter data = “123?”. This will match “1234” and “123A”, but not “123”, “12345”, or “1234C”.
- Filter data = “123?A”. This will match “1234A” and “123BA”, but not “123”, “1234C”, or “1234ABCD”.
- Filter data = “123?A?”. This will match “1234AB” and “123BAT”, but not “1234A” or “123BATS”.
- Filter data = “12??\*”. This will match “1234”, “123456”, and “123ABC”, but not “12” or “123”.
- Filter data = “123?A\*”. This will match “1234A”, “123BA”, and “123BATS”, but not “1234” or “1234C”.

**Serial Cmd:** <**K744**,*filter number,symbology,length,wildcard,placeholder,data,unused,database index*>

**Default:** **00** (NUL)

**Options:** Any ASCII input in the form of a pair of hex characters.

Maximum length: 63 bytes defined.

**Examples:**

41422A = AB\*

Data [0] = NUL represents string matching disabled.

## **Database Index**


**Definition:** The index of the database entry that decodes a given symbol must equal this setting for filtering to occur. A setting of **0** allows any database index for this filter entry.

**Serial Cmd:** <**K744**,*filter number,symbology,length,wildcard,placeholder,data,unused,database index*>

**Default:** **0** (any index)

**Options:** 0 to 10

## Ordered Output Filter Configuration by ESP

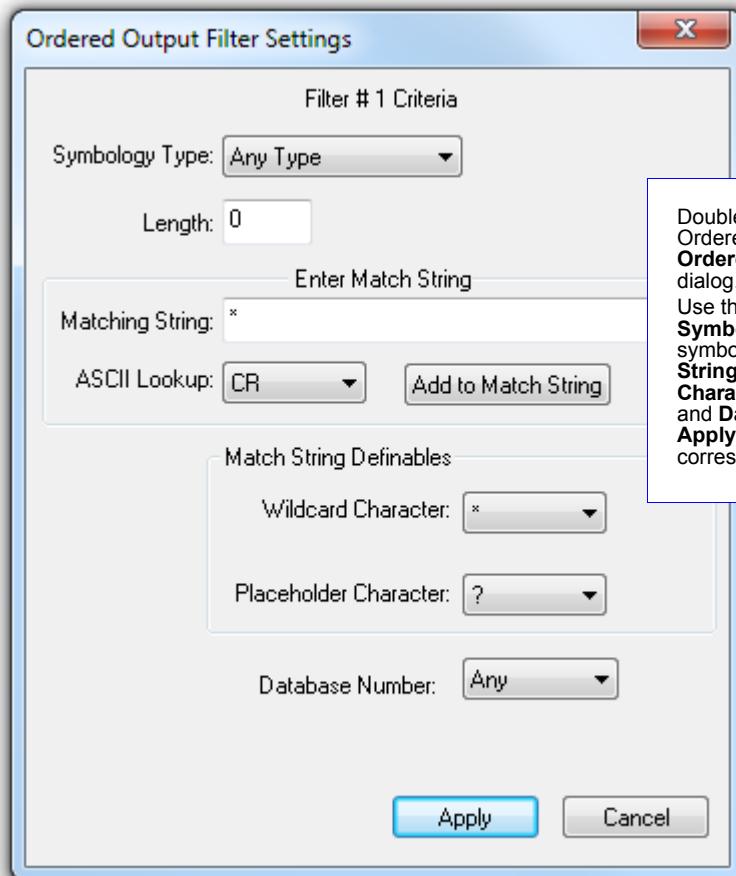

Double-clicking on a row in the Ordered Output table brings up the **Ordered Output Filter Settings** dialog.

Use these settings to determine **Symbology Type**, **Length** of the symbol, a user-defined **Matching String**, **ASCII Lookup**, **Wildcard Character**, **Placeholder Character**, and **Database Number**. Click **Apply** to save the settings to the corresponding filter.

## Number of Filters

**Definition:** **Number of Filters** refers to the number of active output filters. **0** disables all output filters. Any non-zero numeral will enable filtering to be performed using the filter indexes covered by this value.

For example, if the number of filters is **1**, then only filter index # 1 will be applied. If the number of filters is **2**, then only filter index # 1 and filter index # 2 will be applied, etc.

*Serial Cmd:* <**K745,number of filters**>

*Default:* **0**

*Options:* 0 to 10

# Appendices

## Contents

Appendix A General Specifications .....	A-2
Appendix B Electrical Specifications .....	A-6
Appendix C Serial Configuration Commands.....	A-14
Appendix D Communications Protocol .....	A-20
Appendix E ASCII Table.....	A-29
Appendix F Operational Tips .....	A-30
Appendix G Using an External Trigger .....	A-31
Appendix H MS-4Xi Image Output .....	A-32
Appendix I Glossary of Terms .....	A-35

## General Specifications

# Appendix A — General Specifications

### Mechanical

**Height:** 1" (25.4 mm)

**Width:** 1.8" (45.7 mm)

**Depth:** 2.1" (53.3 mm)

**Weight:** 3.2 oz. (91 g)

### Environmental

**Enclosure:** IP54, category 2

**Humidity:** Up to 90% (non-condensing)

**Operating Temperature:** 0° to 40°C (32° to 104°F)

**Storage Temperature:** -50° to 75° C (-58 to 167°F)

### CE Mark

EN 55024:1998 ITE Immunity Standard

EN 55022:98 ITE Disturbances

### Light Source

**Type:** High output LEDs

### Light Collection Options

Progressive scan, square pixel; Software-adjustable shutter speed, electronic shutter

**VGA:** 640 by 480 pixels

### Symbologies

**2D Symbologies:** Data Matrix (ECC 0-200), QR Code, Micro QR Code, Aztec Code

**Stacked Symbologies:** PDF417, MicroPDF417, GS1 DataBar (Composite and Stacked)

**Linear Symbologies:** Code 39, Code 128, BC412, Interleaved 2 of 5, UPC/EAN, Codabar, Code 93, Pharmacode, PLANET, PostNet, Japanese Post, Australian Post, Royal Mail, Intelligent Mail, KIX

### Read Parameters

**Pitch:** ±30° **Skew:** ±30° **Tilt:** 360°

**Decode Rate:** Up to 10 decodes per second

### Connector

**Dual Cable:** 6 ft. industrial Ethernet cable with RJ45 plug and 3 ft. cable with M12 plug

### Indicators

**LEDs:** Read Performance, Power, Read Status

**Green Flash:** Good Read

**Blue Target Pattern:** Symbol locator

**Beeper:** Good Read, match/mismatch, No Read, serial command confirmation, on/off


### Communication Interface

**Standard Interfaces:** RS-232 and Ethernet TCP/IP



### Discrete I/O

**Trigger Input, New Master:** Bi-directional, optoisolated, 4.5-28V rated (10 mA @ 28 VDC)

**Outputs (1, 2, 3):** Bi-directional, optoisolated, 1-28V rated, ( $I_{CE} < 100$  mA at 24 VDC, current limited by user)

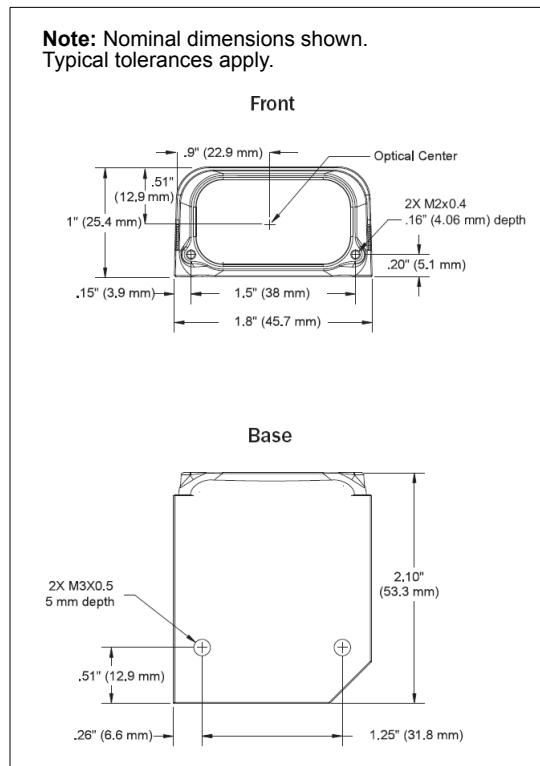

**MS-4Xi Dimensions**

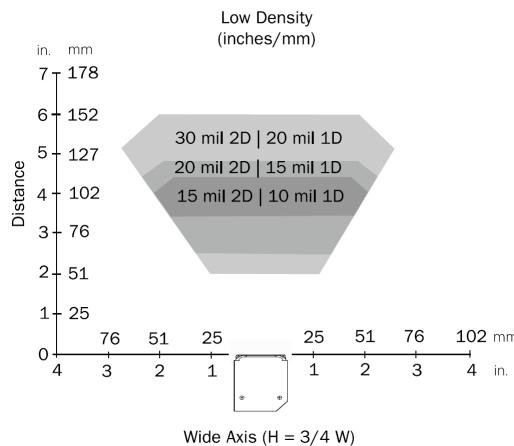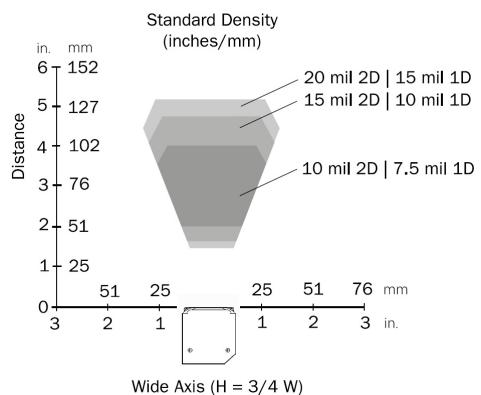**Read Ranges****Low Density****Standard Density**

Narrow-bar-width		Field of View (maximum)	Read Range
1D	2D		
<b>Standard Density</b>			
.0075" (0.19 mm)	.010" (0.25 mm)	2.4" (61 mm)	2 to 4.0" (51 mm to 102 mm)
.010" (0.25 mm)	.015" (0.38 mm)	2.6" (66 mm)	1.7 to 4.7" (43 mm to 119 mm)
.015" (0.38 mm)	.020 (0.51 mm)	2.8" (71 mm)	1.4 to 5.2" (36 mm to 132 mm)
<b>Low Density</b>			
.010" (0.25 mm)	.015" (0.38 mm)	4.2" (107 mm)	3.5 to 4.5" (89 mm to 114 mm)
.015" (0.38 mm)	.020" (0.51 mm)	4.5" (114 mm)	2.7 to 5.0" (69 mm to 127 mm)
.020" (0.51 mm)	.030" (0.76 mm)	5.5" (140 mm)	2.0 to 6.0" (51 mm to 152 mm)

---

## *General Specifications*

### **Safety Certifications**

FCC, UL/cUL, CE, CB Class A, RoHS/WEEE



**RoHS/WEEE Compliant**



©2015 Microscan Systems, Inc.

All rights reserved. Specifications subject to change.

Product specifications are given for typical performance at 25°C (77°F) using grade A labels. Performance characteristics may vary at high temperatures or other environmental extremes. Warranty—One year limited warranty on parts and labor. Extended warranty available.

## FIS Options

<b>MS-4Xi Imager</b>	
MS-4Xi, Low Density, Ethernet, 24VDC (LD = SD Lens)	FIS-1004-1110G
MS-4Xi, Standard Density, Ethernet, 24VDC (SD = 1.0 mm HD Lens)	FIS-1004-1210G

## Accessories

<b>Power Supply</b>	
Power Supply, M12 12-pin Socket, 1.3 m (Screw-On)	97-000003-03
<b>Communication Devices and Cables</b>	
QX-1 Interface Device	98-000103-02
Host Cable, MS-Connect 210 to Host, User-Stripped to 9-pin	61-000105-01
Host Cable, 9-pin to RJ12, 6' (1,829 mm)	61-000108-01
Cordset, Common, M12 12 Pin, Socket (Screw-on) to M12 12 Pin Plug (Screw-on), 3M	61-000148-02
Cordset, Common, M12 12 Pin, Socket (Screw-on) to M12 12 Pin Plug (Screw-on), 1M	61-000162-02
Cordset, Host, Serial M12 12 pin Socket (Screw-on) to DB9 Socket, 1M	61-000153-02
Cordset, Host, Serial, M12 12 pin Socket (Screw-on) to DB9 Socket, 3M	61-000164-02
Cordset, M12 12 Pin Socket (Screw-on) to Flying Leads, 3M	61-000167-02
MS-Connect 210, Connectivity Box with Display	FIS-0210-0001G
MS-Connect 210, Connectivity Box	FIS-0210-0002G
MS-Connect 210, Connectivity Box with Display and Ethernet	FIS-0210-0003G
MS-Connect 210, Connectivity Box with Ethernet	FIS-0210-0004G
Relay Module, 120VAC, 3 Amp Output, Series 70, Type SM for MS-Connect 210	98-000013-04
Relay Module, 240VAC, 3 Amp Output, Series 70, Type SM for MS-Connect 210	98-000013-05
Relay Module, 24VDC, 3 Amp Output, Series 70, Type SM for MS-Connect 210	98-000013-06
<b>Other Accessories</b>	
Trigger Connector, 4-pin Plug (screw terminal and field-wireable) (for self-wiring)	20-610024-01
<b>Object Detectors</b>	
Photo Sensor, Visible, NPN, Dark On	99-000017-01
Photo Sensor, Visible, NPN, Light On	99-000017-02
Photo Sensor, M12 4pin Plug, NPN, Dark Off, 2m	99-000020-01
Photo Sensor, M12 4-pin Plug, NPN, Dark On, 2 m	99-000020-02
<b>Mounting Options</b>	
Mounting Arm Kit: An adjustable mounting arm with ball and socket connections that allow the arm to be positioned in almost any orientation.	98-000048-01
Extension Joint Kit: Allows the mounting arm to be extended. Kit includes extension joint and mounting arm.	98-000053-01 (4") 98-000053-02 (3")
Base Plate Kit: Plate for desktop presentation, 6" x 6" (152.4 mm x 152.4 mm).	98-000054-01
Through-Hole Mount Bracket: Allows the reader to be mounted to various surfaces.	98-000057-02
Side Mount Bracket: Allows the reader to be mounted at a 90° angle.	98-000060-01
Right Angle Mirror Kit: Changes field of view direction by 90°.	98-000088-01
Diffuser Kit: Improves readability of direct part marks.	98-000098-01
<b>Documentation</b>	
Microscan Tools Drive (Software, User Manuals, Quick Start Guides, Configuration Guides, links to other documents on Microscan website)	37-000010-01

**Note:** Additional accessories are available in the Microscan Product Pricing Catalog.


---

## *Electrical Specifications*


# **Appendix B — Electrical Specifications**

**Power:** 10-30 VDC, 200 mV p-p max ripple, 132 mA @ 24 VDC (typ.)

## **MS-4Xi Connectors**

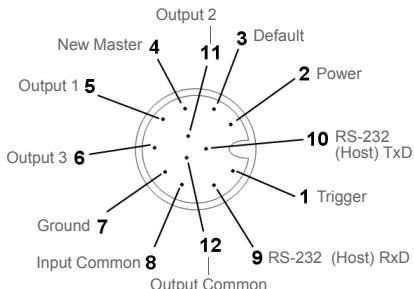

Pin	Function	Wire Color
1	Trigger	White
2	Power	Brown
3	Default	Green
4	New Master	Yellow
5	Output 1	Gray
6	Output 3	Pink
7	Ground	Blue
8	Input Common	Red
9	RS-232 (Host) RxD	Black
10	RS-232 (Host) TxD	Violet
11	Output 2	Gray/Pink
12	Output Common	Red/Blue

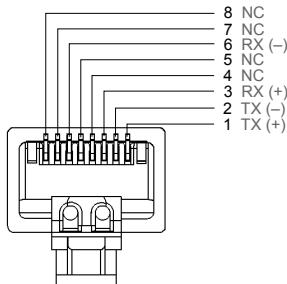


Pin	Function
1	TX (+)
2	TX (-)
3	RX (+)
4	NC
5	NC
6	RX (-)
7	NC
8	NC

## QX-1 Connectors


**Connector T** on the QX-1 Interface Device is the Trigger connector.

**Connectors 1, 2, and 3** can be used to bus power and data as required by the application.

The connectors on the QX-1 interface device physically mirror those on the imager, but they do not have explicit pin assignments. The QX-1 connectors take on the communications and power roles that are assigned to them.

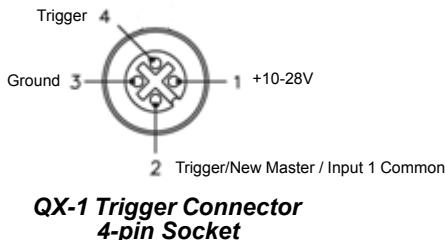

1	+10-28V
2	Trigger / New Master / Input 1 Common
3	Ground
4	Trigger

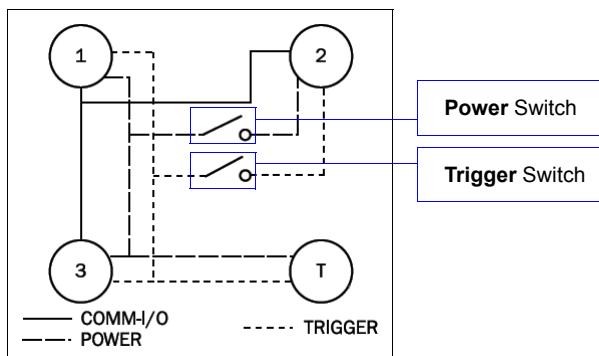

**QX-1 Wiring Diagram**

**Connectors 1 and 3** are 12-pin plugs, and **Connector 2** is a 12-pin socket. All three connectors can be assigned to bus power and data.

The two switches at the center of the device allow the user to route signals as needed.

The simple diagram above (also shown on the base of the QX-1) illustrates how power, communications, I/O, and trigger signal can be routed through the QX-1 device.

**Power** can be bussed between imagers and interface devices. At each location on a network where a new power supply is added, the Power switch on the QX-1 can be used to break power between Connector 2 and Connectors 1, 3, and T.

The **Trigger** signal between Connector 2 and Connectors 1, 3, and T can be broken using the Trigger switch. This isolates trigger signals as required.


---

## *Electrical Specifications*


### **Optoisolated Outputs**


The reader has optoisolated outputs that can transfer signals from the reader to peripherals. Outputs can be configured as either NPN or PNP, but NPN and PNP cannot be mixed in a system, because the output common is shared by all outputs.

#### **NPN Output for Host Input**

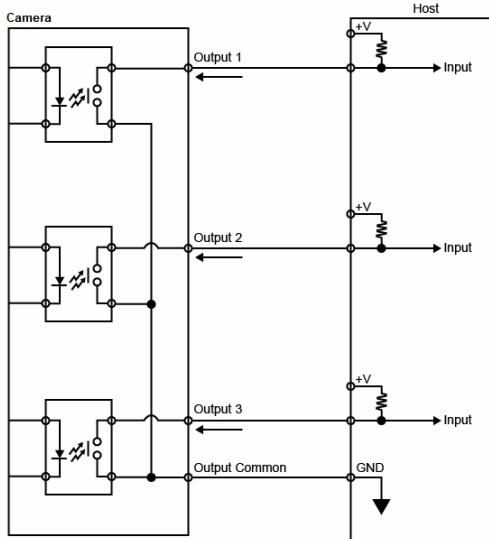


#### **NPN Output for External Load**

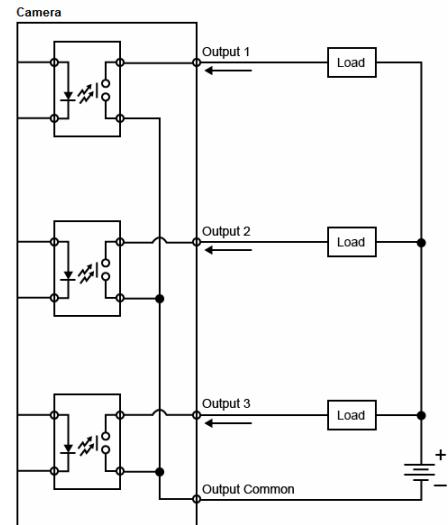

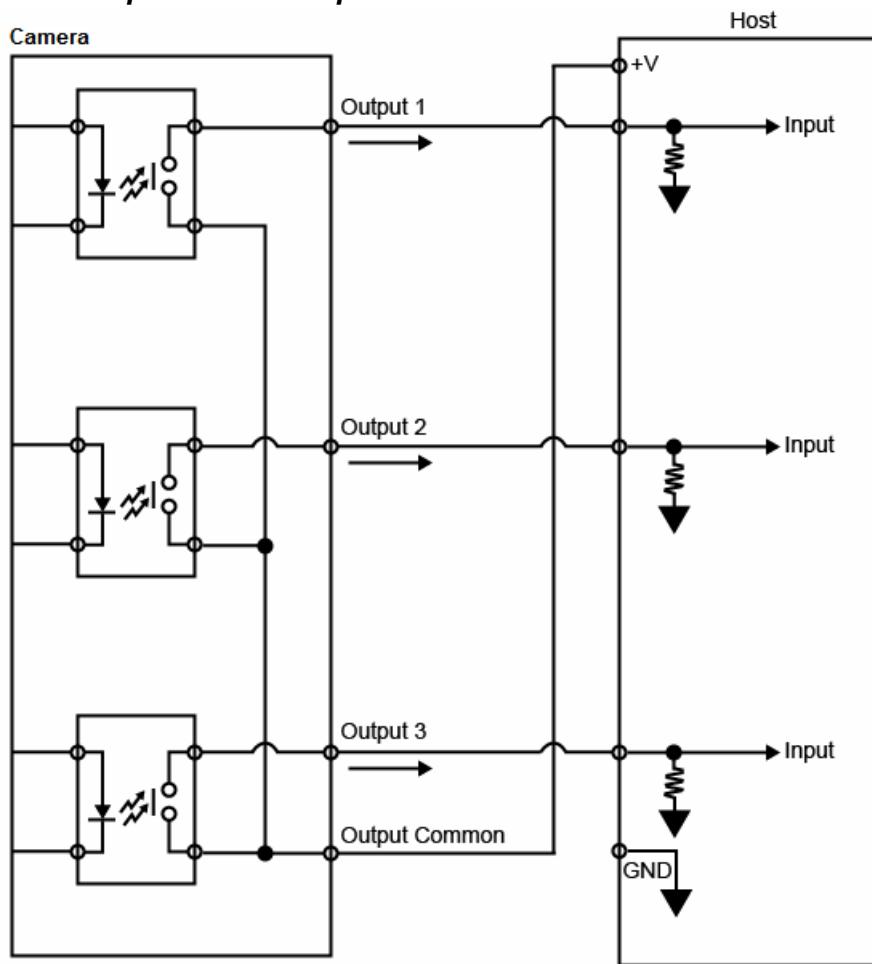***PNP Output for Host Input***

## PNP Output for External Load


Camera

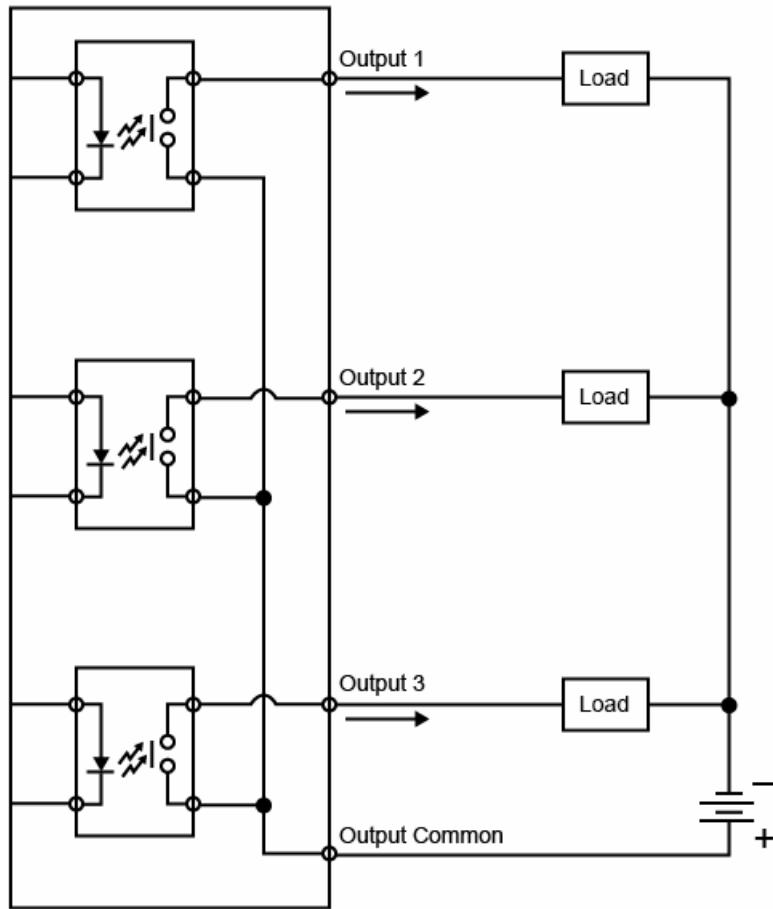

## Optoisolated Inputs

All discrete inputs are optoisolated. Inputs can be configured as either NPN or PNP, but NPN and PNP cannot be mixed in a system, because the input common is shared by all inputs.

### NPN

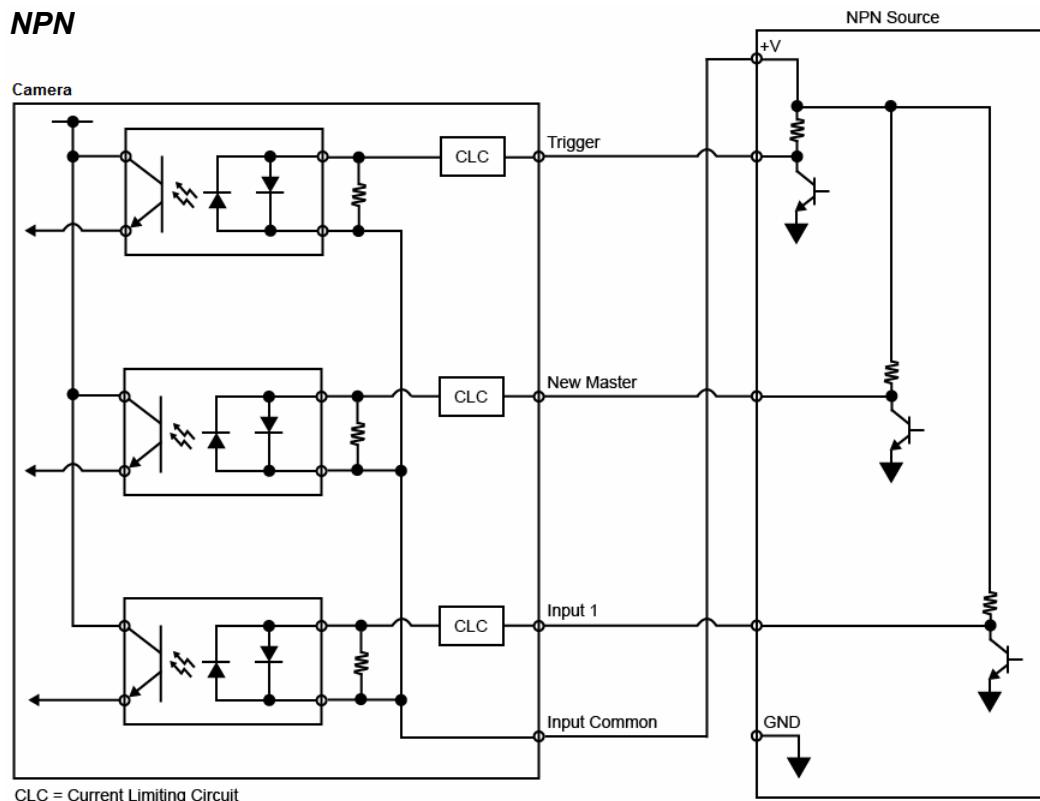


CLC = Current Limiting Circuit

## Electrical Specifications

**PNP**

**Camera**

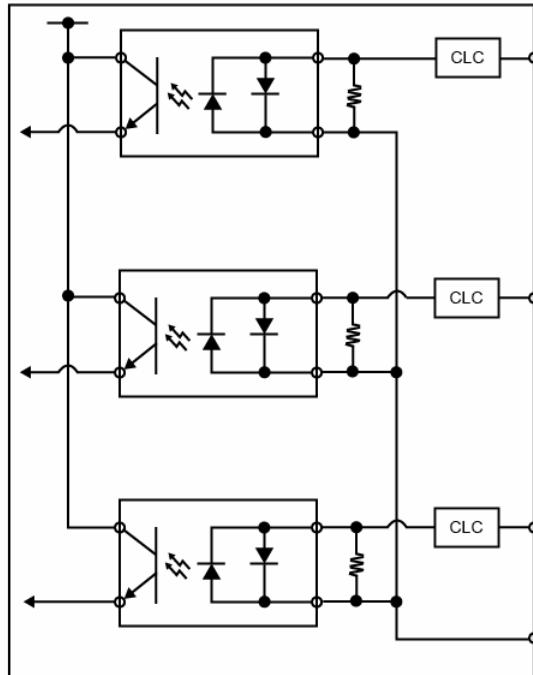

Trigger

New Master


Input 1

Input Common

PNP Source

CLC = Current Limiting Circuit

## Output Wiring

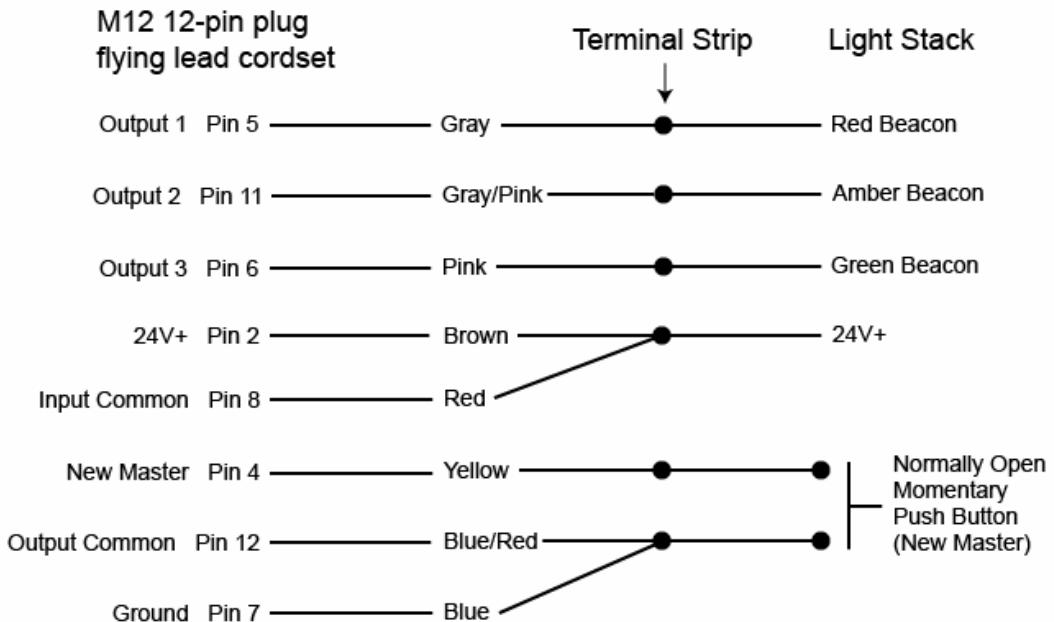

# Appendix C — Serial Configuration Commands

**Note:** For a list of utility commands such as read rate requests, device control options, and imager status requests, see [Serial Utility Commands](#).

<b>Communications</b>	
Host Port Connections	<K100,baud rate,parity,stop bits,data bits>
Ethernet	<K126,status,IP address,subnet,gateway,IP address mode>
Ethernet TCP Ports	<K127,TCP Port 1,TCP Port 2>
Host Port Protocol	<K140,protocol,address>
Preamble	<K141,status,preamble characters>
Postamble	<K142,status,postamble characters>
Response Timeout	<K143,response timeout>
LRC	<K145,status>
ACK/NAK Options	<K147,RES,REQ,STX,ETX,ACK,NAK>
Polling Mode Options	<K148,RES,REQ,STX,ETX,ACK,NAK>
<b>Calibration</b>	
Calibration Options	<K529,gain,shutter speed,symbol type,WOI framing, WOI margin, line scan height>
Autocalibrate	<@CAL>
<b>Read Cycle</b>	
Trigger Mode/Filter Duration	<K200,trigger mode,leading edge trigger filter,trailing edge trigger filter>
Serial Trigger Character	<K201,serial trigger character>
External Trigger State	<K202,external trigger state>
End of Read Cycle	<K220,end of read cycle,read cycle timeout>
Minimum Good Reads	<K221,minimum good reads>
Multisymbol	<K222,number of symbols,multisymbol separator>
Start Trigger Character	<K229,start character>
Stop Trigger Character	<K230,stop character>
Capture Mode	<K241,capture mode,number of captures,rapid capture mode>
Capture Timing	<K242,time before first capture,time between first and second captures,,,,,,,,time between seventh and eighth captures>
Image Storage	<K244,image storage type,image store mode>
Image Processing Timeout	<K245,image processing timeout>
<b>Symbologies</b>	
Narrow Margins/Symbology ID	<K450,narrow margin status,symbology identifier status>
Background Color	<K451,background color>
Composite	<K453,symbology status,separator status,separator>
Aztec Code	<K458,status>

Micro QR Code	<K459,status>
Postal Symbologies	<K460,postal symbology type,POSTNET status,PLANET status,USPS4CB status,POSTNET allow B and B' fields,Australia Post allow O FCC>
Code 39	<K470,status,check character status,check character output status,large intercharacter gap,fixed symbol length status,fixed symbol length,full ASCII set>
Codabar	<K471,status,start/stop match,start/stop output,large intercharacter gap,fixed symbol length status,symbol length,check character type,check character output>
Interleaved 2 of 5	<K472,status,check character status,check character output status,symbol length #1, symbol length #2, guard bar status,range mode status>
UPC/EAN	<K473,UPC status,EAN status, supplemental status,separator status,separator character, supplemental type,format UPC-E as UPC-A>
Code 128/EAN 128	<K474,status,fixed symbol length status,fixed symbol length,EAN 128 status,output format,application record separator status,application record separator character,application record brackets,application record padding>
Code 93	<K475,status,fixed symbol length status,symbol length>
PDF417	<K476,status,[unused],fixed symbol length status,fixed symbol length>
Pharmacode	<K477,status,fixed bar count status,fixed bar count,minimum bar count,bar width mode,direction,fixed threshold value>
Data Matrix	<K479,ECC 200 status, ECC 000 status,ECC 050 status, ECC 080 status,ECC 100 status,ECC 140 status,ECC 120 status,ECC 130 status>
QR Code	<K480,status>
BC412	<K481,status,check character output,fixed symbol length status,fixed symbol length>
DataBar-14 (RSS-14)	<K482,status>
DataBar Limited (RSS Limited)	<K483,status>
DataBar Expanded (RSS Expanded)	<K484,status,fixed symbol length status,fixed symbol length>
MicroPDF417	<K485,status,[unused],fixed symbol length status,fixed symbol length>
<b>I/O Parameters</b>	
Power On/Reset Counts	<K406,power-on,resets,power-on saves,power-on flash saves>
Time Since Reset	<K407,hours,minutes>
Service Message	<K409,status,service message,threshold,resolution>
Serial Verification	<K701,serial command echo status,serial command beep status,control/hex output>
Beeper	<K702,status>
Quality Output	<K704,quality output separator,decodes per trigger status>
Symbol Data Output	<K705,symbol data output status,when to output>
No Read Message	<K714,status,message>
Frame Information	<K734,output frame number,output coordinates>
LED Configuration	<K737,LED mode,ISO/IEC 16022 grade>

## Serial Configuration Commands

Image Output	<K739,image output mode,communication port,file format,JPEG quality>
Target/Flood LEDs	<K750,green flash LED status,target pattern LED status,green flash duration>
EZ Trax Output	<K757,comm port,image mode,image format,JPEG quality,object info output,grade output>
Database Identifier Output	<K759,status,separator>
EZ Button	<K770,global status,default on power-on,load Configuration Database,save for power-on>
EZ Button Modes	<K771,single beep,two beeps,three beeps,four beeps>
Trend Analysis Output 1	<K780,trend analysis mode,trigger evaluation period,number to output on,decodes per trigger threshold>
Trend Analysis Output 2	<K781,trend analysis mode,trigger evaluation period,number to output on,decodes per trigger threshold>
Trend Analysis Output 3	<K782,trend analysis mode,trigger evaluation period,number to output on,decodes per trigger threshold>
Diagnostic Output 1	<K790,unused 1,service unit>
Diagnostic Output 2	<K791,unused 1,service unit>
Diagnostic Output 3	<K792,unused 1,service unit>
ISO/IEC 16022 Symbol Quality Output 1	<K800,output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,output on axial non-uniformity,axial non-uniformity threshold,output on UEC,UEC threshold>
ISO/IEC 16022 Symbol Quality Output 2	<K801,output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,output on axial non-uniformity,axial non-uniformity threshold,output on UEC,UEC threshold>
ISO/IEC 16022 Symbol Quality Output 3	<K802,output on symbol contrast,symbol contrast threshold,output on print growth,print growth threshold,output on axial non-uniformity,axial non-uniformity threshold,output on UEC,UEC threshold>
Configurable Output 1	<K810,output on,output state,pulse width,output mode>
Configurable Output 2	<K811,output on,output state,pulse width,output mode>
Configurable Output 3	<K812,output on,output state,pulse width,output mode>

### Symbol Quality

Symbol Quality Separator/ Data Matrix Output Mode	<K708,symbol quality separator,data matrix output mode>
ISO/IEC 16022 Symbol Quality Output	<K709,symbol contrast,print growth,axial non-uniformity,UEC>
Microscan Symbol Quality Output	<K710,percent cell damage,total read time,capture time,locate time,decode time,pixels per element,ECC level,matrix size,quiet zone>
Static Validation Report	<VAL>

### Matchcode

Matchcode Type	<K223,matchcode type,sequential matching,match start position,match length,wild card character,sequence on No Read,sequence on mismatch>
Number of Master Symbols	<K224,number of master symbols>
New Master Pin	<K225,status>
Enter Master Symbol Data	<K231,master symbol number,master symbol data>
Request Master Symbol Data	<K231?,>/[for all] or <K231?,master symbol number>

Delete Master Symbol Data	<K231,master symbol number,>
Match Replace	<K735,status,match replacement string>
Mismatch Replace	<K736,status,mismatch replacement string>
<b>Camera and IP Setup</b>	
Mirrored Image	<K514,mirrored image>
Window of Interest	<K516,row pointer,column pointer,row depth,column width>
Focal Distance	<K525,focal distance>
Focal Distance Table (Read-Only)	<K526,number of focal distances,focal distance>
Illumination Brightness	<K536,brightness>
Camera	<K541,shutter speed,gain>
Pixel Sub-Sampling	<K542,pixel sub-sampling,AEC/AGC mode,AEC/AGC brightness>
Morphological Pre-Processing	<K550,morphological pre-processing>
Morphological Operation	<K551,0,morphological operation,operator size>
<b>Configuration Database</b>	
Number of Active Indexes	<K252,number of active database settings,database sort>
Configuration Database Status	<K255,index,shutter speed,gain,focal distance,pixel sub-sampling, row pointer, column pointer, row depth, column width, narrow margins, background color,symbology>
Save Current Settings to Database	<K255+,index>
Load Current Settings from Database	<K255-,index>
Request Selected Index Settings	<K255?,index>
Request All Database Settings	<K255?>
Database Mode	<K256,switch mode,frame count/time,image process looping,image dimensions>
<b>Output Format</b>	
Format Extract	<K740,output index,start location,length>
Format Insert	<K741,output index,length,hex string>
Format Assign	<K742,symbol number,status>
Format Status	<K743,output format status>
Output Filter Configuration	<K744,filter number,symbology,length,wildcard,placeholder, data,unused,database index>
Ordered Output Filter	<K745,number of filters>

## **Serial Command Format**

Serial commands are of two types: utility and configuration.

### **Rules that apply to both utility and configuration commands**

- A less than < and greater than > character enclose the commands.
- Commands and data are “case sensitive.” That is, characters must be entered as upper or lower case, as specified.

### **Serial Utility Commands**

These are sent during operations and are not followed by <**A**> or <**Z**>.

### **Serial Configuration “K” Commands**

These begin with a single “K” character followed by a 3-digit numeric character, data fields, and an initializing command, as follows:

<**K**numeric parameter,data,data,...etc.><initializing command>

An initializing command <**A**> or <**Z**> may follow the command. A <**Z**> initializes the imager’s memory and saves for power-on; an <**A**> initializes the imager’s memory but does not save for power-on.

For example, to enable **UPC** and save the change for power-on, send <**K473,1**><**Z**>.

To change **Baud Rate** and reset without saving changes for power-on, send <**K100,3**><**A**>.

### **Serial Configuration Command Conventions**

- All data fields (except the last) must be followed by a comma (*without a space*).
- NUL cannot be used. The characters <, >, and , can be used, but only if entered as hex pairs (see **ASCII Character Entry Modifier**).
- All fields preceding a modified field must be included.
- If there is no change in preceding fields, then commas alone can be entered in these fields. For example, if only the last field in the following command is changing, <**K100,4,1,0,0**> can be entered as <**K100,,,0**>.
- All fields *following* a modified field can be omitted. For example, to change **Baud Rate** only, send <**K100,3**>.

## Concatenating Configuration Commands

Commands can be concatenated (added together) in a single string or data block. For example, <K145,1><K220,1><K450,1><A> enables **LRC**, sets **End of Read Cycle** mode to **New Trigger**, enables **Narrow Margins**, and resets the data buffers (without saving the changes for power-on).

## Serial Command Status Request

To ensure that any command was received and accepted, you can send the **Show Reader Status** command: <?>.

The status of a specific serial command can be requested by entering the command followed by a question mark. For example, send <K142?> to request the status of **Postamble**.

## Entering Control Characters in Serial Commands

To enter control characters within a serial command, hold down the **Ctrl** key while typing the desired character.

*Example:* To enter a carriage return and line feed (^M^J), enter <K141,1,CNTL-m CNTL-j>.

## **Appendix D — Communications Protocol**

### **Communications Protocol Command Table**

Protocol Command (Mnemonic displayed on menu)	Control Characters (Entered in menu or serial command)	Hex Value	Effect of Command
RES	^D	04	Reset
REQ	^E	05	Request
EOT	^D	04	Reset
STX	^B	02	Start of Text
ETX	^C	03	End of Text
ACK	^F	06	Acknowledge
NAK	^U	15	Negative Acknowledge
XON	^Q	11	Begin Transmission
XOFF	^S	13	Stop Transmission

## **ACK/NAK Data Flow Examples**

### **Setup 1**

RES	0x00 (disabled)
REQ	0x00 (disabled)
STX	0x00 (disabled)
ETX	0x00 (disabled)
<b>ACK</b>	0x06
<b>NAK</b>	0x15
LRC	disabled

#### *Transfer 1*

HOST_TX	<K141,0>
IMAGER_TX	'ACK'

#### *Transfer 2*

HOST_TX	<K141?>
IMAGER_TX	'ACK'
IMAGER_TX	<K141,0>
HOST_TX	'ACK'

### **Error Condition**

#### *Transfer 1*

IMAGER_TX	symbol data
HOST_TX	'NAK' (host rejects)
IMAGER_TX	symbol data (resend data)
HOST_TX	'ACK' (transaction complete)

#### *Transfer 2*

HOST_TX	<K141?>
IMAGER_TX	'ACK'
IMAGER_TX	<K141,0>
	timeout reached...
	timeout reached...
	timeout reached...

Timeout Reached transaction aborted, data is flushed

## **Setup 2**

RES	0x00 (disabled)
REQ	0x00 (disabled)
STX	0x00 (disabled)
ETX	0x00 (disabled)
<b>ACK</b>	0x06
<b>NAK</b>	0x15
<b>LRC</b>	enabled

### *Transfer 1*

HOST_TX	<K141,0>a
IMAGER_TX	'ACK'

### *Transfer 2*

HOST_TX	<K141?>B
IMAGER_TX	'ACK'
IMAGER_TX	<K141,0>a
HOST_TX	'ACK'

## **Error Condition**

### *Transfer 1*

HOST_TX	<k141,0>x (BAD LRC)
IMAGER_TX	'NAK'
HOST_TX	<K141,0>a (GOOD LRC)
IMAGER_TX	'ACK'

## Setup 3

<b>RES</b>	0x00 (disabled)
<b>REQ</b>	0x00 (disabled)
<b>STX</b>	0x28 ‘(‘
<b>ETX</b>	0x29 ‘)’
<b>ACK</b>	0x06
<b>NAK</b>	0x15
<b>LRC</b>	enabled

### *Transfer 1*

HOST_TX	(<K141,0>)H
IMAGER_TX	‘ACK’

### *Transfer 2*

HOST_TX	(<K141?>)k
IMAGER_TX	‘ACK’
IMAGER_TX	(<K141,^M>)w
HOST_TX	‘ACK’

## Setup 4

<b>RES</b>	0x21 '!
<b>REQ</b>	0x3D '='
<b>STX</b>	0x28 '('
<b>ETX</b>	0x29 ')'
<b>ACK</b>	0x06
<b>NAK</b>	0x15
<b>LRC</b>	enabled

### Transfer 1

HOST\_TX ()H  
IMAGER\_TX 'ACK'

### Transfer 2

HOST\_TX (<K100?>)n  
IMAGER\_TX 'ACK'  
HOST\_TX '!'  
IMAGER\_TX (<K100,8,0,0,1>)X  
HOST\_TX 'ACK'  
IMAGER\_TX '!'  
HOST\_TX '!'  
IMAGER\_TX (<K100,8,0,0,1>)X

## Error Condition

### Transfer 1

HOST\_TX ()H  
IMAGER\_TX 'ACK'  
HOST\_TX (<K100?>)n  
IMAGER\_TX 'ACK'  
HOST\_TX '!'  
IMAGER\_TX (<K100,8,0,0,1>)X  
          timeout reached...  
IMAGER\_TX '='  
          timeout reached...  
IMAGER\_TX '='  
          timeout reached...  
IMAGER\_TX '='  
          timeout reached...  
IMAGER\_TX '!'  
          timeout reached...

## **Polling Mode Data Flow Examples**

### **Setup 1**

<b>Address</b>	0x01 (translates to) Poll Req @ '0x1C', Unit Select @ '0x1D'
<b>RES</b>	0x04
<b>REQ</b>	0x05
<b>STX</b>	0x02
<b>ETX</b>	0x03
<b>ACK</b>	0x06
<b>NAK</b>	0x15
<b>LRC</b>	disabled

### *Transfer 1*

HOST\_TX        'RES' '0x1D' 'REQ' (Select Unit 1 to receive data)  
 IMAGER\_RX      '0x1D' 'ACK' (Unit responds with its address)  
 HOST\_TX        'STX' <T> 'ETX'  
 IMAGER\_RX      '0x1D' 'ACK' (Unit responds with its address)  
 HOST\_TX        'RES' (Terminate Transfer 2)

### *Transfer 2*

HOST\_TX        'RES' '0x1C' 'REQ' (Poll Unit 1 for data)  
 IMAGER\_RX      '0x1C' 'STX' <T/00000> 'ETX'  
 HOST\_TX        'ACK'  
 IMAGER\_RX      'RES' (Terminate Transfer 1)

Starting with a 'RES' ensures a clean transaction, without "leftovers" from the previous transaction.

### **Error Condition 1**

HOST\_TX        'RES' '0x1C' 'REQ' (Poll Unit 1 for data)  
 IMAGER\_RX      '0x1C' 'STX' <T/00000> 'ETX'  
 HOST\_TX        'Nothing' (Host should 'ACK' here)  
                 timeout reached...  
 IMAGER\_RX      'REQ' (Unit requests an 'ACK' again)  
                 timeout reached...  
 IMAGER\_RX      'REQ' (Unit requests an 'ACK' again)  
                 timeout reached...  
 IMAGER\_RX      'REQ' (Unit requests an 'ACK' again)  
                 timeout reached...  
 IMAGER\_RX      'RES' (Terminate Transfer 1, data is flushed)

## **Error Condition 2**

HOST\_TX        'RES' '0x1C' 'REQ' (Poll Unit 1 for data)  
IMAGER\_TX      '0x1C' 'STX' <T/00000> 'ETX'  
HOST\_TX        '*Nothing*' (Host should 'ACK' here)  
                  timeout reached...  
IMAGER\_TX      'REQ' (Unit requests an 'ACK' again)  
HOST\_TX        'NAK' (Host rejects data frame)  
                  (Retry Event)  
IMAGER\_TX      '0x1C' 'STX' <T/00000> 'ETX' (Unit sends again)  
HOST\_TX        'ACK' (Host receives data)  
IMAGER\_TX      'RES' (Terminate Transfer 1)

The protocol makes 3 retry attempts before data is flushed and transfer is aborted.

## Setup 2

<b>Address</b>	0x01 (translates to) Poll Req @ '0x1C', Unit Select @ '0x1D'
<b>RES</b>	0x04
<b>REQ</b>	0x05
<b>STX</b>	0x02
<b>ETX</b>	0x03
<b>ACK</b>	0x06
<b>NAK</b>	0x15
<b>LRC</b>	enabled

### Transfer 1

HOST_TX	'RES' '0x1D' 'REQ' (Select Unit 1 to receive data)
IMAGER_TX	'0x1D' 'ACK' (Unit responds with its address)
HOST_TX	'STX' <T> 'ETX' 'LRC'
IMAGER_TX	'0x1D' 'ACK' (Unit responds with its address)
HOST_TX	'RES' (Terminate Transfer 2)

### Transfer 2

HOST_TX	'RES' '0x1C' 'REQ' (Poll Unit 1 for data)
IMAGER_TX	'0x1C' 'STX' <T/00000> 'ETX' 'LRC'
IMAGER_TX	'ACK'
HOST_TX	'RES' (Terminate Transfer 1)

Starting with a 'RES' ensures a clean transaction, without "leftovers" from the previous transaction.

## Error Condition 1

HOST_TX	'RES' '0x1C' 'REQ' (Poll Unit 1 for data)
IMAGER_TX	'0x1C' 'STX' <T/00000> 'ETX' 'LRC'
HOST_TX	'Nothing' (Host should 'ACK' here) timeout reached...
IMAGER_TX	'REQ' (Unit requests an 'ACK' again) timeout reached...
IMAGER_TX	'REQ' (Unit requests an 'ACK' again) timeout reached...
IMAGER_TX	'REQ' (Unit requests an 'ACK' again) timeout reached...
IMAGER_TX	'RES' (Terminate Transfer 1, data is flushed)

## **Error Condition 2**

HOST\_TX        'RES' '0x1C' 'REQ' (Poll Unit 1 for data)  
IMAGER\_TX      '0x1C' 'STX' <T/00000> 'ETX' 'LRC'  
HOST\_TX        'Nothing' (Host should 'ACK' here)  
                timeout reached...  
IMAGER\_TX      'REQ' (Unit requests an 'ACK' again)  
HOST\_TX        'NAK' (Host rejects data frame)  
                (Retry Event)  
IMAGER\_TX      '0x1C' 'STX' <T/00000> 'ETX' 'LRC' (Unit sends again)  
HOST\_TX        'ACK' (Host receives data)  
IMAGER\_TX      'RES' (Terminate Transfer 1)

## **Error Condition 3**

HOST\_TX        'RES' '0x1C' 'REQ' (Poll Unit 1 for data)  
IMAGER\_TX      '0x1C' 'STX' <T/00000> 'ETX' 'BAD LRC'  
HOST\_TX        'NAK' (Host rejects bad LRC data)  
(Retry Event)  
IMAGER\_TX      '0x1C' 'STX' <T/00000> 'ETX' 'GOOD LRC' (Unit sends again)  
HOST\_TX        'ACK' (Host receives data)  
IMAGER\_TX      'RES' Terminate Transfer 1)

The protocol makes 3 retry attempts before data is flushed and transfer is aborted.

## Appendix E — ASCII Table

Dec	Hex	Mne	Ctrl
00	00	NUL	^@
01	01	SOH	^A
02	02	STX	^B
03	03	ETX	^C
04	04	EOT	^D
05	05	ENQ	^E
06	06	ACK	^F
07	07	BEL	^G
08	08	BS	^H
09	09	HT	^I
10	0A	LF	^J
11	0B	VT	^K
12	0C	FF	^L
13	0D	CR	^M
14	0E	SO	^N
15	0F	SI	^O
16	10	DLE	^P
17	11	DC1	^Q
18	12	DC2	^R
19	13	DC3	^S
20	14	DC4	^T
21	15	NAK	^U
22	16	SYN	^V
23	17	ETB	^W
24	18	CAN	^X
25	19	EM	^Y
26	1A	SUB	^Z
27	1B	ESC	^[_
28	1C	FS	^`
29	1D	GS	^]
30	1E	RS	^`
31	1F	US	^_

Dec	Hex	Ch
32	20	SP
33	21	!
34	22	"
35	23	#
36	24	\$
37	25	%
38	26	&
39	27	'
40	28	(
41	29	)
42	2A	*
43	2B	+
44	2C	,
45	2D	-
46	2E	.
47	2F	/
48	30	0
49	31	1
50	32	2
51	33	3
52	34	4
53	35	5
54	36	6
55	37	7
56	38	8
57	39	9
58	3A	:
59	3B	;
60	3C	<
61	3D	=
62	3E	>
63	3F	?

Dec	Hex	Ch
64	40	@
65	41	A
66	42	B
67	43	C
68	44	D
69	45	E
70	46	F
71	47	G
72	48	H
73	49	I
74	4A	J
75	4B	K
76	4C	L
77	4D	M
78	4E	N
79	4F	O
80	50	P
81	51	Q
82	52	R
83	53	S
84	54	T
85	55	U
86	56	V
87	57	W
88	58	X
89	59	Y
90	5A	Z
91	5B	[
92	5C	\
93	5D	]
94	5E	^
95	5F	_

Dec	Hex	Ch
96	60	'
97	61	a
98	62	b
99	63	c
100	64	d
101	65	e
102	66	f
103	67	g
104	68	h
105	69	i
106	6A	j
107	6B	k
108	6C	l
109	6D	m
110	6E	n
111	6F	o
112	70	p
113	71	q
114	72	r
115	73	s
116	74	t
117	75	u
118	76	v
119	77	w
120	78	x
121	79	y
122	7A	z
123	7B	{
124	7C	
125	7D	}
126	7E	~
127	7F	D

## **Appendix F — Operational Tips**

### **Cleaning**

The MS-4Xi has a hard-coated window that should only be cleaned with alcohol (100% isopropyl).

### **Mounting**


When mounting the MS-4Xi, do not insulate the stand mount. The bottom panel is the hottest part of the imager and metal-to-metal contact is necessary for heat dissipation.

## Appendix G — Using an External Trigger

Two types of inputs are used on Microscan readers. 5 volt devices have NPN trigger inputs. 10-28 volt devices have optoisolated inputs and outputs.


### 5 Volt Devices

To trigger a 5 volt device, the input has to be pulled down to “signal ground” (NPN). This can be done by relays or by a transistor-sourced signal. If a 5 volt device is used in combination with an IC-332, it must be connected as a 10-28 volt device.

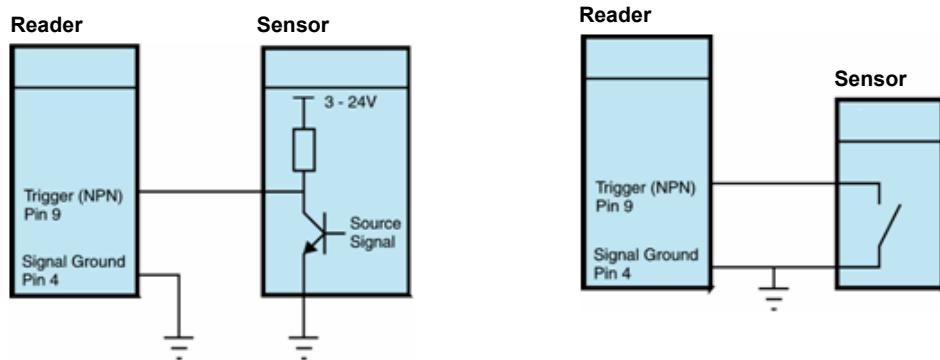

### 10-28 Volt Devices

To trigger a 10-28 volt device, a small amount of current needs to flow from “Trigger +” to “Trigger -”. If a PNP source is used, “Trigger -” must be connected to “signal ground”. If an NPN source is used, “Trigger +” must be connected to the supply voltage.

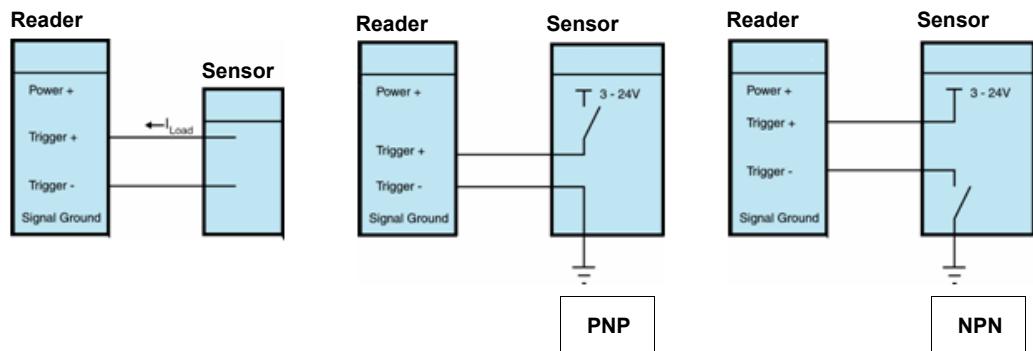

## Appendix H — MS-4Xi Image Output

This section explains how to extract (download) a video-captured image from a MS-4Xi.

### Y-Modem Method

The easiest download method is to issue the <op,9> command to get a list of available images, then initiate a download sequence using a Y-Modem utility or protocol sequence.

The user will need to issue the <op,9> first to get an image list response from the imager. Then initiate the Y-modem download sequence with the <uy,"path\filename"> command, where: [path\filename] is one listed from the <op,9> response.

### Retrieve File List

To receive a file list of all images stored in the reader, send the command: <op,9,\*.\*>

The reader will respond with a list similar to the one below:

```
<op,009,0,/good/0/640x480_gs.bmp 00003 00090,/pending/1/640x480_gs.bmp 00003  
00057,/pending/2/640x480_gs.bmp 00003 00057,/pending/3/640x480_gs.bmp 00003  
00058,/pending/4/640x480_gs.bmp 00003 00057>
```

In this example, there are 5 images in memory:

```
/good/0/640x480_gs.bmp  
/pending/1/640x480_gs.bmp  
/pending/2/640x480_gs.bmp  
/pending/3/640x480_gs.bmp  
/pending/4/640x480_gs.bmp
```

- The image will be stored in a directory describing the result of the image.

None assumes root.

/ Root Directory.

/saved Saved Directory.

Good/ Symbol was decoded and good.

noread/ No symbol was decoded in this image.

Mismatch/ Symbol was decoded, but did not match.

pending No attempt was made to decode this image.

- The image may be in a numbered sub-folder 0-9 indicating age; 0 = older, 9 = newer.
- The filename will describe the resolution and file type. Valid file types are: .jpg and .bmp.
- The directory locations, file names and file types will vary, depending on reader configuration.

## **Upload Image**


Select a file from the file list above, and then send the command:

**<uy,path/filename.extension>**

Now initiate the Y-modem transfer and save the file. Y-modem uploads will vary depending on the program or language. See the HyperTerminal example below.

## **Image Upload Using HyperTerminal**

- Open the HyperTerminal application by clicking Start, Programs, Accessories, Communication, and then HyperTerminal.
- Enter a name, and select an icon, then select OK.
- In the connection window, select the COM port, and then click OK.
- Adjust ‘COM Properties’ settings to match the reader (reader defaults shown below).

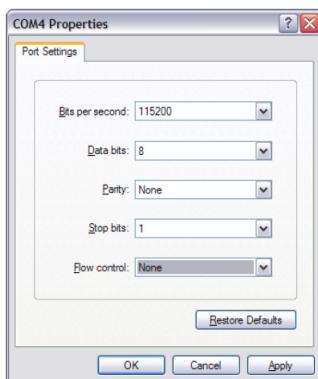

- Click OK and you will see the HyperTerminal screen.
- Retrieve an image list by sending **<op,9>**.


**<op,9>**

```
<op,009,0,/good/0/1280x1024_gs.bmp 00003 00064,/pending/1/1280x1024_gs.bmp  
00003 00061,/pending/2/1280x1024_gs.bmp 00003 00061,/pending/3/  
1280x1024_gs.bmp 00003 00061,/pending/4/1280x1024_gs.bmp 00003 00061>
```

- Request an image upload of the desired file.

**<uy,/good/0/1280x1024\_gs.bmp>**

- From the menu bar, select Transfer, Receive File...
- Select a file storage location, and then select ‘Y-modem’, click Receive.

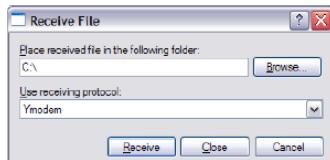

- HyperTerminal will upload the image and save the file to the directory specified.

## Bit Stream Method

A more difficult method is to parse and decode the bit stream data. The bit stream is a mix of EXIF format & TIFF format. You will need to use the **<op,4>** command.

### **<op,4,arg>**

To load a bitmap, send **<op,4>** and the entire grayscale image will load.

To load a JPEG, set **arg** for the full-size JPEG image, with adjustable quality:

### **<op,4,1280x1024\_qnnn.jpg>**

There is only one variable: nnn is a number from 1 to 100, and it represents the image quality. 1 will load fastest, but will be extremely low-quality. 100 will load slowly, but will be highest-quality.

**<op,4,1280x1024\_q1.jpg>** = low-quality image, short load time

**<op,4,1280x1024\_q100.jpg>** = high-quality image, long load time

## **Response Format**

The user will need to write an application that can receive the image (8-bit format – 7 data bit communication will not work), split up the data, and write the file. The data is format info and then image data, so an ASCII terminal will not work.

The format of the data will be (\_ added for readability):

SOH\_DATALEN\_FRAMETYPE\_SCHEMA\_DATA\_CRC

SOH = SOH character

DATALEN = the length of data to follow, 32 bit integer from '00000000' to 'FFFFFF'

FRAMETYPE = 1

SCHEMA = 2

DATA = image data

CRC = CRC16 check digit at the end includes SOH, and everything after, except the CRC

More information on these formats is available at:

<http://partners.adobe.com/public/developer/en/tiff/TIFF6.pdf>

and

<http://www.exif.org/specifications.html>

# Appendix I — Glossary of Terms

**Aberration** — The failure of an optical lens to produce an exact point-to-point correspondence between the object and its resulting image. Various types are chromatic, spherical, coma, astigmatism and distortion.

**Absorption** — The loss of light of certain wavelengths as it passes through a material and is converted to heat or other forms of energy. (-)

**Active Illumination** — Lighting an area with a light source coordinated with the acquisition of an image. Strobed flash tubes and pulsed lasers are examples.

**ADC** — See **Analog-to-Digital Converter**.

**A/D Converter** — See **Analog-to-Digital Converter**.

**AGC** — See **Automatic Gain Control**.

**Ambient Light** — Light which is present in the environment of the imaging front end of a vision system and generated from outside sources. This light, unless used for actual illumination, will be treated as background **Noise** by the vision system.

**Analog** — A smooth, continuous voltage or current signal or function whose magnitude (value) is the information.

**Analog-to-Digital Converter (A/D Converter or ADC)** — A device that converts an analog voltage or current signal to a discrete series of digitally encoded numbers (signal) for computer processing.

**Application-Specific Integrated Circuit (ASIC)** — An integrated circuit that is customized for a particular kind of use, rather than general use. All vision system elements including firmware can be integrated into one ASIC.

**Architecture** — The hardware organization of a vision system designed for high speed image analysis.

**ASIC** — See **Application-Specific Integrated Circuit**.

**Aspect Ratio** — The ratio between the height and width of a sensor or display. Found by dividing the vertical number of pixels (height) by the horizontal number of pixels (width) leaving it in fractional format.

**Automatic Gain Control (AGC)** — Adjustment to signal strength that seeks to maintain a constant level regardless of the distance between a reader and symbol.

**Auxiliary Port** — RS-232 connection to an auxiliary terminal or device for remote viewing.

**Blooming** — A situation in which too many photons are being produced to be received by a pixel. The pixel overflows and causes the photons to go to adjacent pixels. Blooming is similar to overexposure in film photography, except that in digital imaging, the result is a number of vertical and/or horizontal streaks appearing from the light source in the picture.

**Baud Rate** — The number of discrete signal events per second; bits per second.

**Capture** — The act of acquiring and storing video images in an imager or host computer. Also, the image captured.

**CCD** — See **Charge-Coupled Device**.

---

## Glossary of Terms

**Charge-Coupled Device (CCD)** — A semiconductor device with an array of light-sensitive elements that converts light images into electrical signals.

**Check Character** — A Modulus 43 or Modulus 10 character that is added to encoded symbol data for additional data integrity.

**CMOS** — See **Complementary Metal Oxide Semiconductor**.

**Complementary Metal Oxide Semiconductor (CMOS)** — Like CCDs, CMOS imagers include an array of photo-sensitive diodes, one diode within each pixel. Unlike CCDs, however, each pixel in a CMOS imager has its own individual amplifier integrated inside.

**Connector** — A plug or socket on a device or cable providing in/out connectivity for various circuits and pins.

**Concentrator** — Intermediary device that relays data from imagers to a host and commands from the host to the imagers or other devices.

**Counter** — Memory space allocated to keep track of imager events.

**DAC** — See **Digital-to-Analog Converter**.

**Daisy Chain** — Linkage of primary and secondary imagers allowing data to be relayed up to the host via auxiliary port connections.

**Decode** — **A Good Read.** The successful interpretation and output of the information encoded in a symbol.

**Default** — Restores **ROM** or flash settings, initializes serial commands and resets all counters.

**Delimited** — A delimited command or field is bracketed by predefined characters.

**Decode Rate** — The number of good reads per second achieved by an imager.

**Darkfield Illumination** — Lighting of objects, surfaces, or particles at very shallow or low angles, so that light does not directly enter a reader's optical hardware.

**Depth-of-Field** — The in-focus range of an imaging system. Measured from the distance behind an object to the distance in front of the object with all objects appearing in focus.

**Diffused Lighting** — Scattered soft lighting from a wide variety of angles used to eliminate shadows and specular glints from profiled, highly reflective surfaces.

**Digital-to-Analog Converter (DAC)** — A **VLSI** circuit used to convert digitally processed images to analog for display on a monitor.

**Digital Imaging** — Conversion of an image into pixels by means of an **Analog-to-Digital Converter** where the level of each pixel can be stored digitally.

**Digital Signal Processor (DSP)** — A **VLSI** chip designed for ultra-high-speed arithmetic processing. Often imbedded in a vision engine.

**Discrete I/O** — Inputs and outputs characterized by discrete signal transitions from one voltage level to another so that digital switching can occur.

**Direct Memory Access (DMA)** — A capability provided by some computer bus architectures that allows data to be sent directly to memory from an attached device.

**DMA** — See **Direct Memory Access**.

**DSP** — See **Digital Signal Processor**.

**Dynamic Range** — The difference between the minimum and maximum thresholds of discernible images; the amount of usable signal.

**Edge Enhancement** — Image processing method to strengthen high-spatial frequencies in the image.

**EPROM** — See **Erasable Programmable Read-Only Memory**.

**Embedded Memory** — Onboard memory device such as **EPROM** or flash.

**End of Read Cycle** — The time or condition at which the imager stops expecting symbol information to decode.

**Erasable Programmable Read-Only Memory (EPROM)** — A memory chip that retains data when its power supply is turned off; “non-volatile memory”.

**External Edge** — Allows a read cycle to be initiated by a trigger signal from an object detector when it detects the appearance of an object (rising edge). The read cycle ends with a good read, a timeout, or a new trigger.

**External Level** — Allows a read cycle to be initiated by a trigger signal from an object detector. The read cycle ends when the object moves out of the detector’s range.

**Falling Edge** — A change of state (to inactive) associated with a level trigger.

**Field-Programmable Gate Array (FPGA)** — A semiconductor device containing programmable interconnects and logic components.

**Fill Factor** — Percentage of pixel area used for light collection.

**Firmware** — Software hard-coded in non-volatile memory (**ROM**), and closely tied to specific pieces of hardware.

**Fixed Symbol Length** — Increases data integrity by ensuring that only one symbol length will be accepted.

**Focal Distance** — In camera-based vision, the distance from the front of the camera to the object being viewed. (In optics, the distance from the lens to the focal plane.)

**Focal Plane** — Usually found at the image sensor, it is a plane perpendicular to the lens axis at the point of focus (-).

**Focus** — Any given point in an image at which light converges; the focal point.

**FPGA** — See **Field-Programmable Gate Array**.

**Frame** — The total area captured in an image sensor while the video signal is not blanked.

**Frame Grabber** — A device that interfaces with a camera and, on command, samples the video, converts the sample to a digital value and stores that in a computer’s memory.

**Front End System** — The object, illumination, optics and imager blocks of a vision system. Includes all components useful to acquire a good image for subsequent processing.

**Full Duplex** — A communications system in which signals can travel simultaneously between devices.

**Gain** — The amount of energy applied to pixel gray scale values prior to output, expressed in dB; optimal signal strength.

**Good Read** — A decode. The successful scanning and decoding of the information encoded in a bar code symbol.

**Gradient** — The rate of change of pixel intensity (first derivative).

**Gray Scale** — Variations of values from white, through shades of gray, to black in a digitized image with black assigned the value of zero and white the value of one.

---

## Glossary of Terms

**Half Duplex** — A communications system in which signals can travel between devices in both directions, but not simultaneously.

**Histogram** — A graphical representation of the frequency of occurrence of each intensity or range of intensities (gray levels) of pixels in an image. The height represents the number of observations occurring in each interval.

**Host** — A computer, **PLC**, or other device that is used to execute commands and process data and discrete signals.

**Image** — Projection of an object or scene onto a plane (i.e. screen or image sensor).

**Image Processing (IP)** — Transformation of an input image into an output image with desired properties.

**Image Resolution** — The number of rows and columns of pixels in an image. A higher resolution means that more pixels are available per element of the symbol being read. Examples: 640 x 480 (VGA); 854 x 480 (WVGA); 1280 x 1024 (SXGA); 2048 x 1536 (QXGA).

**Image Sensor** — A device that converts a visual image to an electrical signal; a **CCD** or **CMOS** array.

**Initialize** — Implement serial configuration commands into the imager's active memory.

**Input** — A channel or communications line. Decoded data or a discrete signal that is received by a device.

**Integration** — Exposure of pixels on a **CMOS** sensor.

**IP** — See **Image Processing**.

**Ladder Orientation** — A linear symbol orientation in which the bars are parallel to the symbol's direction of travel.

**LED** — See **Light-Emitting Diode**.

**Light-Emitting Diode (LED)** — A semiconductor device that emits light when conducting current.

**Lens** — A transparent piece of material with curved surfaces which either converge or diverge light rays.

**Machine Vision** — The automatic acquisition and analysis of images to obtain desired data for controlling a specific activity.

**Multidrop** — A communications protocol for networking two or more imagers or other devices with a concentrator (or controller) and characterized by the use of individual device addresses and the RS-485 standard.

**Noise** — The same as static in a phone line or "snow" in a television picture, noise is any unwanted electrical signal that interferes with the image being read and transferred by the imager.

**Normally Closed** — A discrete output state that is only active when open.

**Normally Open** — A discrete output state that is only active when closed.


**Object Plane** — An imaginary plane in the field of view, focused by an imager's optical system at the corresponding image plane on the sensor.

**Output** — A channel or communications line. Data or discrete signals that are transmitted or displayed by a device.

**Parity** — An error detection routine in which one data bit in each character is set to **1** or **0** so that the total number of **1** bits in the data field is even or odd.

**Picket Fence Orientation** — A linear symbol orientation in which the bars are perpendicular to the symbol's direction of travel.

**Pitch** — Rotation of a linear or 2D symbol around an axis parallel to the symbol length on the **Substrate**. See the illustration below.

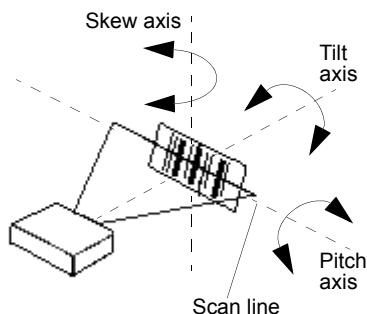

**Pixel** — An individual element in a digitized image array; "picture element".

**PLC** — See **Programmable Logic Controller**.

**Port** — Logical circuit for data entry and exit. (One or more ports may be included within a single connector.)

**Processing Time** — The time used by a vision system to receive, analyze and interpret image information. Often expressed in "parts per minute".

**Programmable Logic Controller (PLC)** — An electronic device used in industrial automation environments such as factory assembly lines and automotive manufacturing facilities.

**Progressive Scan** — A non-interlaced scan that doubles the number of visible picture lines per field by displaying all picture lines at once.

**Protocol** — The rules for communication between devices, providing a means to control the orderly flow of information between linked devices.

**RAM** — See **Random Access Memory**.

**Random Access Memory (RAM)** — A data storage system used in computers, composed of integrated circuits that allow access to stored data in any sequence without movement of physical parts.

**Read Cycle** — A programmed period of time or condition during which a reader will accept symbol input.

**Read-Only Memory (ROM)** — A data storage medium used in computers and other electronics, primarily used to distribute **Firmware**.

**Real-Time Processing** — In machine vision, the ability of a system to perform a complete analysis and take action on one part before the next one arrives for inspection.

---

## *Glossary of Terms*

**Region** — Area of an image. Also called a region of interest for image processing operations.

**ROM** — See **Read-Only Memory**.

**Saturation** — The degree to which a color is free of white. One of the three properties of color perception, along with hue and value.

**Scattering** — Redirection of light reflecting off a surface or through an object.

**Skew** — Rotation of a linear or 2D symbol around an axis parallel to the symbol height on the substrate. See the illustration under the definition of **Pitch**.

**Substrate** — The surface upon which a linear or 2D symbol is printed, stamped, or etched.

**Symbol Transitions** — The transition of bars and spaces on a symbol, used to detect the presence of a symbol on an object.

**Symbology** — A symbol type, such as Code 39 or Code 128, with special rules to define the widths and positions of bars and spaces to represent specific numeric or alphanumeric information.

**Tilt** — Rotation of a linear or 2D symbol around an axis perpendicular to the substrate.

See the illustration under the definition of **Pitch**.

**Trigger** — A signal, transition, or character string that initiates a read cycle.

**Very Large-Scale Integration (VLSI)** — The creation of integrated circuits by combining thousands of transistor-based circuits on a single chip.

**VLSI** — See **Very Large-Scale Integration**.

**Watchdog Timer** — A security device that detects system crashes and attempts to reset the imager.